
DISHDRAWER™ DISHWASHER

FIRST USE

Get to know your appliance	3
Load dishware	5
Use rinse aid	6
Load detergent	7
Select a suitable cycle	8
Select a suitable modifier	9
Standards testing	9
Set a cycle	10
Set up Wi-Fi and remote mode	12
Adjust the settings	13
Settings	14
Maintain wash performance	16

FISHER & PAYKEL

NZ AU UK IE SG BI


CONTEMPORARY DISHDRAWER™ DISHWASHER

DD60SDFTX9, DD60SDFTB9, DD60DDFX9, DD60DDFB9, DD60SDFHX9,
DD60DDFHX9, DD60DDFHB9, DD60SDFHTX9, DD60D4HNX9,
DD60D4HNB9, DD60D4HQB9, DD60ST4HNX9, DD60ST4HNB9,
DD60ST4HQB9




How to get the best results from your dishwasher

- Check that your dishware is dishwasher safe
- Keep the spray arm clear of obstructions
- Load items so water from the spray arm can reach them
- Use correct detergent quantity
- Use liquid rinse aid
- Clean the filter
- Run regular deep clean cycles
- Descale to remove mineral buildup
- Register your product to get streamlined service support.

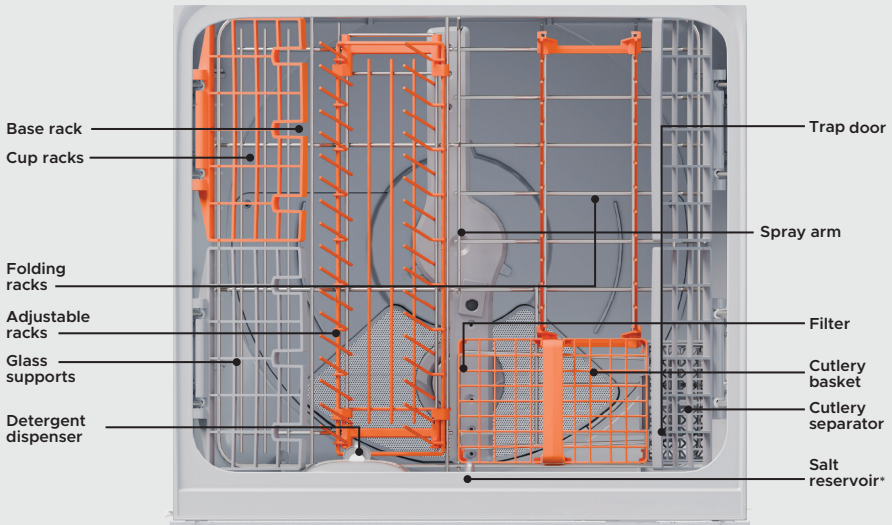

*some models only

GET TO KNOW YOUR APPLIANCE

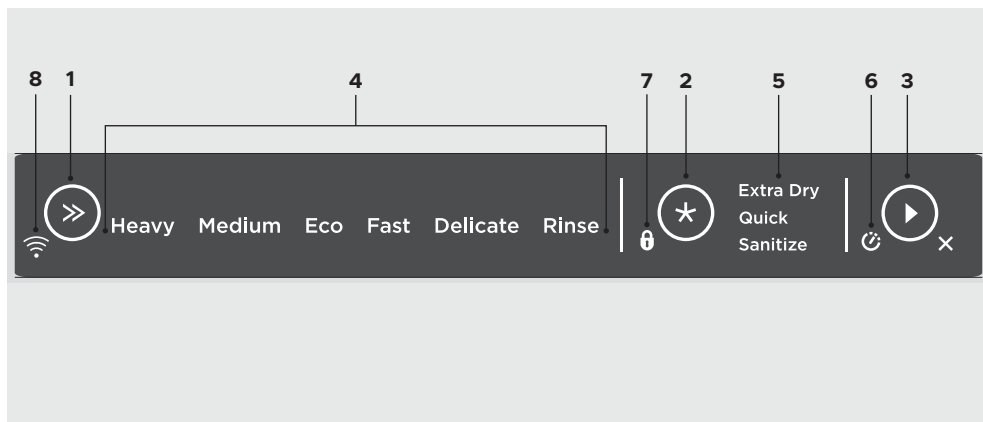

Control panel features

- | | |
|----------------------------------|-----------------------------------|
| 1 Wash program selector | 5 Wash modifier indicators |
| 2 Wash modifier selector | 6 Delayed start indicator |
| 3 Start | 7 Lock indicator |
| 4 Wash program indicators | 8 Wi-Fi indicator |

LOAD DISHWARE



Tips for energy efficiency

- Load the dishwasher to capacity.
- Remove large food scraps, but do not pre-rinse dishes as this uses more water and energy.
- Select the most appropriate program for each load. See 'Select a suitable cycle' for recommendations.



Load items effectively

Space items evenly in the drawer, with cups and containers facing down, so water from the spray arm can reach them and drain away.



Check for obstructions

Check there are no items that will prevent the spray arm from rotating.



Load cutlery correctly

Load sharp knives with handles up. Mix spoons, knives and forks in each section to prevent nesting.

USE RINSE AID



Rinse aid improves dry performance and prevents tarnishing on metal and streaks on glass and dishware. Fill the rinse aid dispenser before adding detergent.



1. Turn the plug anticlockwise and remove.



2. Pour into the opening. If spilled, wipe immediately.



3. Refit the plug, turning clockwise until secure with the hand grip in a vertical position.

LOAD DETERGENT



We recommend:

- Premium powdered detergents and tablets to effectively clean dishes, utensils and filters in your dishwasher.



We do not recommend:

- Non-premium powdered detergents and tablets, as these can result in faster grease buildup and reduced wash performance.
- Detergent sheets, as these produce excessive foam.
- Handwashing dish detergents and laundry or other detergents.



If using powdered detergent

Press the latch to open the dispenser.

Add the recommended quantity of detergent, and close the dispenser. See Care and Maintenance guide for details.



If using tablets

Place a tablet directly into the cutlery basket, tablet tray, or tub.

Ensure tablet is not touching cutlery, dishes, or drawer base.

SELECT A SUITABLE CYCLE



Each cycle is designed for a specific purpose and has different time, energy and water requirements. Choose a cycle that balances load type and efficiency to get the best results.

⌚ TIME | ⚡ ENERGY | 💧 WATER

WASH PROGRAMS

ECO

For normally soiled dishes for optimum water and energy use.

Typical items: plates, bowls, cutlery from regular meals



RINSE

Prevents odours and soils from drying on dishes.

Typical items: Any items waiting for a full wash



HEAVY

Designed for heavily soiled pots, pans and dishes.

 
Typical items: pots, pans, casserole, dishes with baked-on food



MEDIUM

For dishes that are quite heavily soiled or to remove food that has been left overnight.

Typical items: plates with dried food, serving dishes



FAST

For lightly soiled dishes.

 
Typical items: glasses cups, lightly used plates



DELICATE

For lightly soiled and heat-sensitive crockery.

Typical items: fine china, glassware, heat-sensitive crockery



SELECT A SUITABLE MODIFIER

WASH MODIFIERS

EXTRA DRY

EXTRA DRY increases the final rinse temperature and the length of the drying phase.

QUICK

QUICK uses additional water and energy for a faster wash time.

SANITIZE

SANITIZE increases rinse temperature to 70°C. This meets the sanitisation conditions required by Section 6, NSF 184.

A successful cycle will end as normal. If the sanitize cycle is interrupted, an alert will sound and the sanitize indicator will flash. Press **START ►** twice to clear alert. Repeat the cycle.

DRAWER DRY

DRAWER DRY is an essential function that protects your DishDrawer from moisture buildup. The low-power fan automatically starts after each wash cycle to dry the appliance. The fan may operate for up to several hours and will stop if the drawer is opened. In single drawer models, the fan will resume once the drawer is closed.


STANDARDS TESTING

Wash program standards tests are based on the **ECO** wash program. Standards testing information and wash data can be viewed online by going to <https://www.fisherpaykel.com> and searching your model code.

New Zealand / Australia / Singapore: 7 place settings per drawer.

United Kingdom / Ireland / British Isles : 6 place settings per drawer.


SET A CYCLE

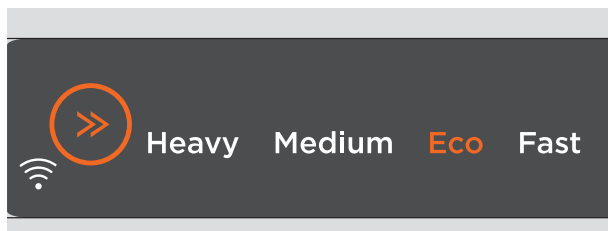

Setting a wash program

1. Press program selector » to scroll and select a wash program.


Press **START ►** then close the drawer.

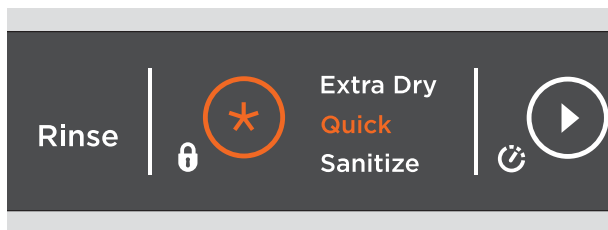

Setting a wash modifier


Press modifier selector ★ to select a wash modifier.

Press **START ►** on the control panel, or **START ►||** on the door to start the wash, then close the drawer.

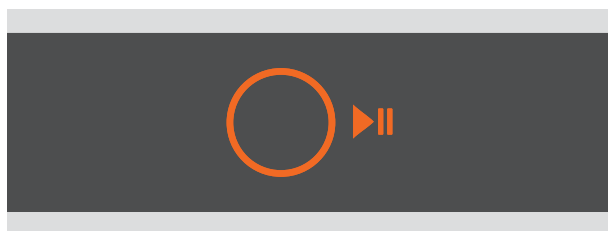

Pausing a wash*

On the door of the drawer, press **START ►||**, and wait for three short and one long tone before opening.

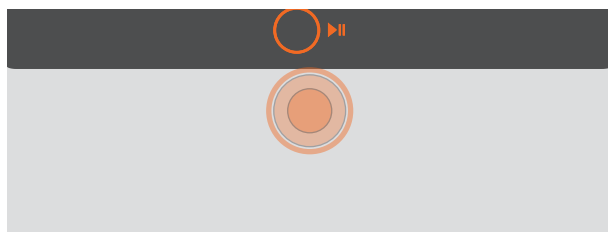

Pausing a wash*

Knock twice on closed drawer to pause the wash. This unlocks the drawer so you can open it.

*some models only

SET A CYCLE



Resuming a wash

Press **START ▶** on the control panel and close the drawer, or press **START ▶||** if the drawer is closed.



Cancelling a wash

Press and hold **START ▶** on the control panel or **START ▶||** on the door to cancel. The drawer will turn off when water has drained.

SET UP WI-FI AND REMOTE MODE

Connect your appliance to your home Wi-Fi to get software updates, receive wash notifications, customise settings and control your wash cycles remotely.


Getting started

- Ensure your home Wi-Fi network is turned on and there is no wash cycle in progress.
- You will be given step-by-step guidance on your mobile device.
- It may take up to 10 minutes to connect your appliance.




On your mobile device:

- 1 Scan the QR code to download the app from www.fisherpaykel.com/connect.
- 2 Register and create an account.
- 3 Add your appliance and set up the Wi-Fi connection.

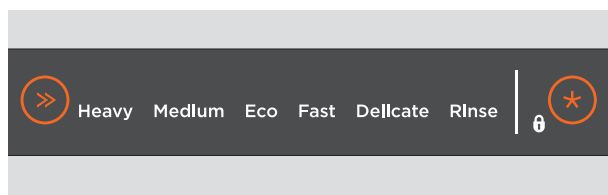


Connecting to Wi-Fi


1. Press and hold program selector » and modifier selector ★ together for four seconds.

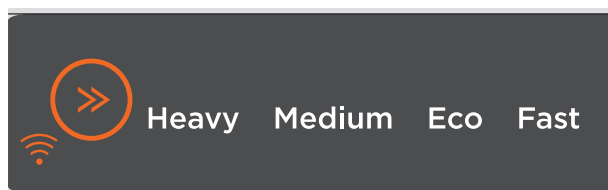

2. Press and hold program selector » until Wi-Fi icon  flashes, then follow instructions in the app to complete set-up.

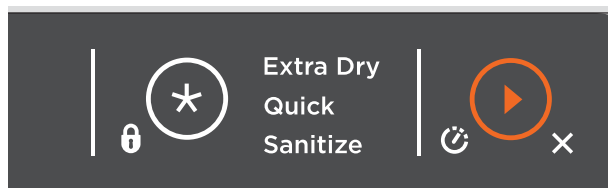

3. Press **START** ▶ to save and exit the menu.

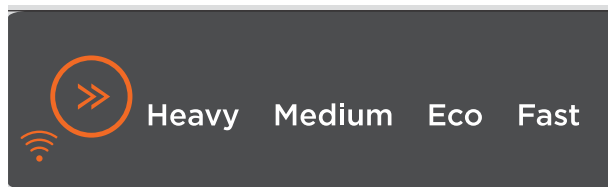

Turning remote mode ON

Press and hold program selector » until Wi-Fi icon  flashes. Close the drawer.


Turns off when you open the drawer or after 72 hours.

ADJUST THE SETTINGS

Go to the app to adjust and customise your settings or follow the steps below to adjust settings directly on your dishwasher. Each setting is displayed using a different combination of indicator lights. Adjust a setting by matching the indicator combinations as shown in 'Settings'.


Before adjusting settings, clear active wash cycles and make sure the controls aren't in sleep mode:

- **If an indicator is flashing** - Press and hold **START ▶** to cancel an active wash cycle.
- **If all indicators are off** - Press the program selector **»** or close and open the drawer to wake up the controls.

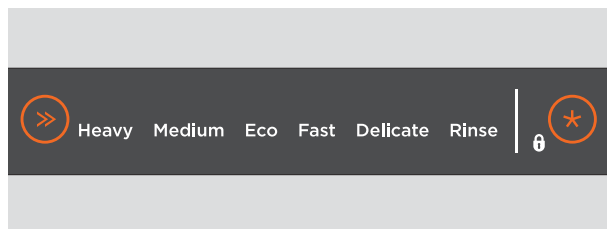


Access settings


1. Press and hold program selector **»** and modifier selector **★** together for four seconds to access settings mode.

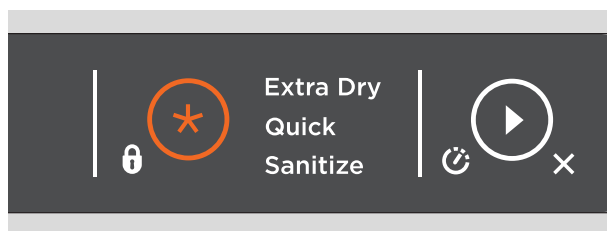

2. Press modifier selector **★** to scroll through the settings.

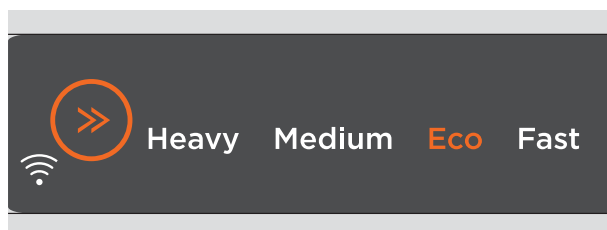


3. Press program selector **»** to change the options within a setting.

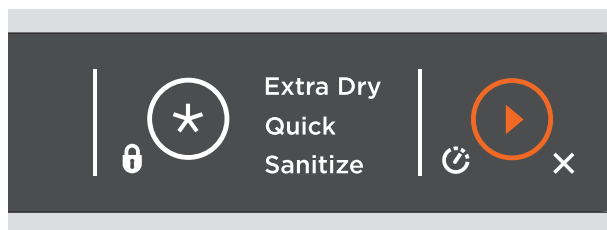

4. Press **START ▶** to save and exit the menu, or press and hold **START ▶** to cancel. Settings apply to both drawers in double models.


SETTINGS

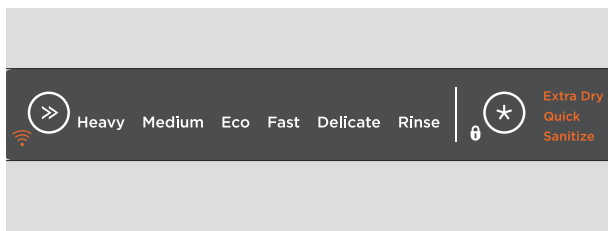

Wi-Fi (recommended)

Extra Dry, Quick, Sanitize: ON.
Wi-Fi: ON/OFF to set.


Connect your dishwasher to your home network to operate it via the app and to receive updates.

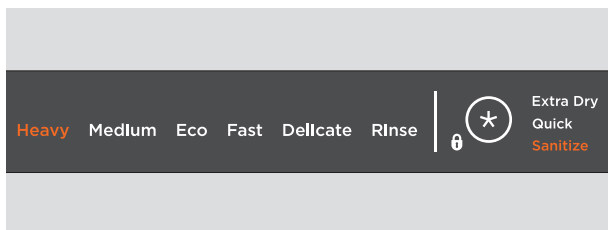

Auto power-on

Sanitize: ON.


Your DishDrawer™ Dishwasher is set to automatically power on for 30 seconds after a drawer is opened. This can be turned off.

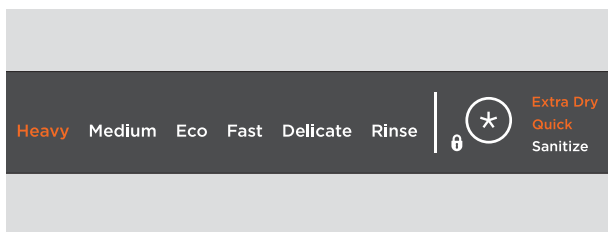

Tones

Extra Dry, Quick: ON.


Adjust tone settings. When set to **OFF**, all tones will be silenced except fault alerts.

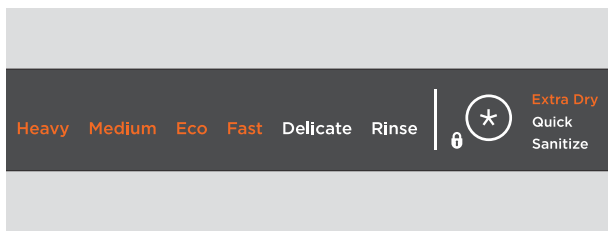

Rinse aid

Extra Dry: ON.
Wash programs: 0—5 to set level.

Control the amount of rinse aid dispensed from 0—5 units. Units correspond to wash program indicator lights. Defaults to 4.

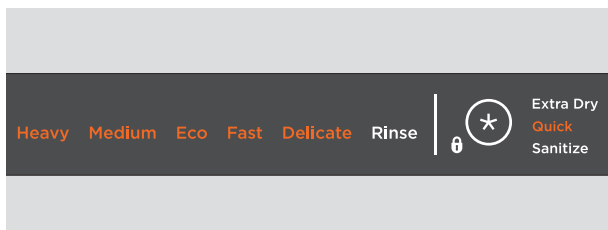


Water softener (some models)

Quick: ON.
Wash programs: 0—5 to set level.

Set water hardness from 0—5. Setting corresponds to wash program indicator lights.

See Care and Maintenance guide for details.


SETTINGS

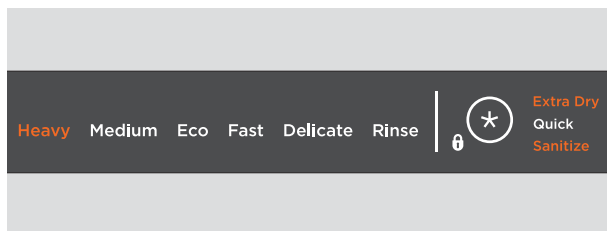

Auto lock

Extra Dry, Sanitize: ON.
Heavy: ON/OFF to set.


Automatically lock the drawer after 30 seconds to prevent opening during a wash cycle.

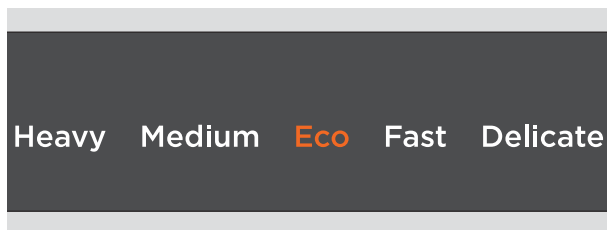

Default (some models)

Sanitize: ON.


Automatically default to **ECO** when in standby mode. This can be turned off.

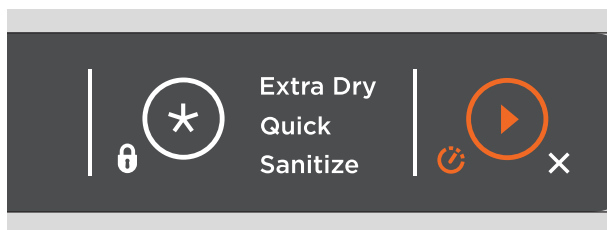

Setting DELAY START

Delay start indicator: ON/OFF.


Press and hold **START ▶**. Each tone indicates +1 hour (12 max). Timer begins when you close the drawer. Press and hold **START ▶** or **START ▶||** to cancel.

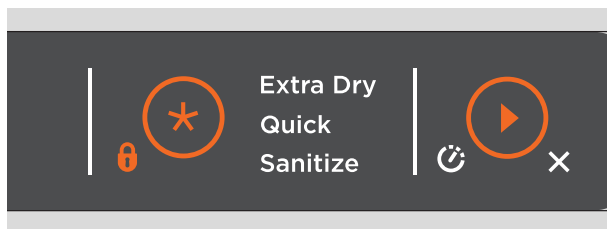

Locking the controls

Lock indicator: ON.

Press and hold modifier selector ***** until **LOCK**  flashes. Press **START ▶** and close the drawer to start cycle.

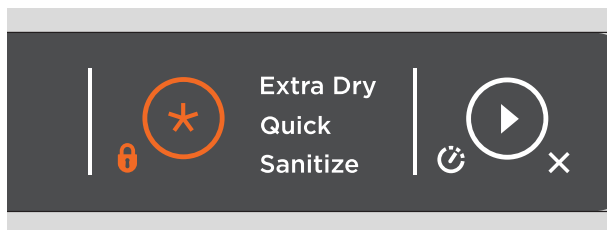

Unlocking the controls

Lock indicator: OFF.

Press and hold modifier selector ***** on the control panel or **START ▶||** on the door until **LOCK**  turns off.

MAINTAIN WASH PERFORMANCE

Make these steps a regular part of your cleaning routine to get the best results from your appliance.

Keep the spray arm clear

Check that nothing is obstructing the spray arm. Regularly remove and clean it with hot water and a cloth to unblock the spray holes.

Use correct detergent quantity

You may need to adjust detergent quantity based on local water hardness. Scan the QR code below for recommended detergent quantities.

Use rinse aid

Rinse aid prevents water beading on dishes, glasses and cutlery, so dishes dry faster and do not develop white spots.

Clean the filter

A blocked filter reduces the water pressure required to clean dishes. Remove and clean the filter regularly in hot, soapy water to remove food and grease buildup.

Run regular deep clean cycles

Run a cycle every few months to remove grease and buildup and more often if you use Eco detergents or low-temperature cycles. Use a premium dishwashing cleaner, follow label instructions, and run the **HEAVY** or **HEAVY SANITIZE** cycle.

Descale to remove mineral buildup

Fill the detergent dispenser and secondary compartment with citric acid crystals or descaler. Run the dishwasher on the **HEAVY** cycle followed by a wash program with detergent immediately after.



Care, maintenance and troubleshooting information

Scan the QR code or visit fisherpaykel.com and search for your model code.

DD60SDFTX9, DD60SDFTB9, DD60DDFX9, DD60DDFB9, DD60SDFHX9,
DD60DDFHX9, DD60DDFHB9, DD60SDFHTX9, DD60D4HNX9, DD60D4HNB9,
DD60D4HQB9, DD60ST4HNX9, DD60ST4HNB9, DD60ST4HQB9

