
COMBI-MICROWAVE OVEN

SAFETY & WARNINGS

Safety and warnings	3
Service and warranty	9

FISHER & PAYKEL

NZ AU UK IE SG

MINIMAL

OM76NMUB3, OM76NMUG3, OM76NMUNB3, OM76NMUNG3,
OM60NMUNB5, OM60NMUNG5, OM60NMTB5, OM60NMTG5,
OM60NMUB5, OM60NMUG5

CONTEMPORARY

OM76NCUDX3, OM60NCTDX5, OM60NCTDX5

PROFESSIONAL

OM76NPUX3

⚠ WARNING!

Precautions to avoid possible exposure to excessive microwave energy

- Do not attempt to operate this microwave with the door open. This can result in harmful exposure to microwave energy. It is important not to damage or tamper with the safety interlocks.
- Do not place any object between the microwave oven and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the microwave oven if it is damaged. It is particularly important that the microwave oven door close properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- Do not repair or replace any part of the appliance unless specifically recommended in this guide. All other servicing should be done by a Fisher & Paykel trained and supported service technician.
- If the door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

⚠ WARNING!



Electric Shock Hazard

Failure to follow this advice may result in electric shock or death.

- Before carrying out any work on the electrical section of the appliance, it must be disconnected from the mains electricity supply.
- Connection to a good ground wiring system is absolutely essential and mandatory.
- Alterations to the domestic wiring system must only be made by a qualified electrician.
- Turn the oven off at the wall before replacing the oven lamp.

⚠ WARNING!



Cut Hazard

Failure to use caution could result in injury.

- Take care – some edges are sharp.

⚠ WARNING!



Fire Hazard

Failure to follow this advice may result in overheating, burning, and injury.

- Do not use adapters, reducers, or branching devices to connect this appliance to the mains power supply.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating or warming pads, slippers, sponges, damp cloths and similar may lead to risk of injury, ignition or fire.

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

WARNING!

To reduce the risk of fire, electrical shock, injury to persons or damage when using the appliance, follow the important safety instructions listed below. Read all the instructions before use. Use only for its intended purpose as described in these instructions.

Installation

- Ensure your appliance is properly installed and grounded by a qualified technician in accordance with the provided installation instructions.
- This appliance is intended to be built-in.
- Install or locate this appliance only in accordance with the provided installation instructions.
- Do not install or operate the appliance if it is damaged or not working properly. If you receive a damaged product, contact your dealer or installer immediately.
- The appliance must not be installed behind a decorative door in order to avoid overheating.
- Do not mount this appliance over a sink.
- This oven is not approved or tested for marine use.
- Do not store this appliance outdoors. Do not use this near a swimming pool, near a sink or in similar locations.
- Do not immerse cord or plug in water. Do not let cord hang over edge of table or counter. Keep cord away from heated surfaces.
- Do not cover or block any openings on the appliance.

Servicing

- User servicing: do not repair or replace any part of the appliance unless specifically recommended in this guide. All other servicing should be done by a Fisher & Paykel trained and supported service technician.
- **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a trained person.
- If the microwave oven light fails, contact a Fisher & Paykel trained and supported service technician or Customer Care.

Fire hazard

- Do not overcook food. Carefully attend appliance when paper, plastic or other combustible materials are placed inside the microwave oven to facilitate cooking.
- Remove wire twist-ties from paper or plastic bags before placing in microwave.
- If materials inside the microwave oven should ignite, keep microwave oven door closed, turn microwave oven off and disconnect the power cord or shut off power at the fuse or circuit breaker panel.
- Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
- Utensils should be checked to ensure that they are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, check the oven frequently due to the possibility of ignition.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

SAFETY AND WARNINGS

- During and after use, do not touch, or let clothing or other flammable materials contact any interior area of the oven; allow sufficient time for cooling first.
- In case of fire, smother the flame or use a dry chemical or foam type extinguisher.
- Use only dry oven mitts or potholders. Moist or damp potholders on hot surfaces could result in burns from steam. Do not let potholders touch hot areas or heating elements. Do not use a towel or a bulky cloth for a potholder. It could catch fire.

Food safety

- Safe food handling: leave food in the oven for as short a time as possible before and after cooking. This is to avoid contamination by organisms which may cause food poisoning. Take particular care during warm weather.

General

- This product has been designed for use in a domestic (residential) environment. This product is not designed for any commercial use. Any commercial use by the customer will affect this product's manufacturer's warranty.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential environments
 - bed and breakfast type environments
- Household appliances are not intended to be played with by children.
- Do not leave children alone. Children should not be left alone or unattended in the area where the appliance is in use. They should never be allowed to sit or stand on any part of the appliance.
- **HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO USE THE MICROWAVE.** Use caution when removing hot items.
- Children of less than 8 years old must be kept away from the appliance unless continuously supervised. This appliance can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and they understand the hazards involved. Cleaning and user maintenance shall not be done by children without supervision.
- Do not place heavy objects on the oven door.
- Do not let aluminium foils and food probes touch the heating elements.
- Do not operate your appliance by means of an external timer or separate remote control system.
- Placement of oven shelves: always position shelves in the desired location while the oven is cool (before preheating). If a shelf must be removed while the oven is hot, do not let the oven mitts or potholder contact hot heating elements in the oven or the base of the oven.
- During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- Do not heat unopened food containers. They can build up pressure that may cause the container to burst and result in injury.
- Only use the temperature probe recommended for this oven.
- Do not change or modify the wireless communication device in any way. Changes or modifications not expressly approved by Fisher & Paykel could void the user's authority to operate the equipment.

SAFETY AND WARNINGS

Cleaning

- The oven must be cleaned periodically and all food residues must be removed.
- Failure to keep the oven clean could cause deterioration of the surfaces that could reduce the life of the appliance and cause dangerous conditions.
- Do not use oven cleaners, harsh/abrasive cleaning agents, waxes, or polishes. No commercial oven cleaner, oven liner, or protective coating of any kind should be used in or around any part of the oven. Do not use harsh/abrasive cleaners, scourers or sharp metal scrapers to clean the oven door glass since they scratch the surface, which may result in the glass shattering.
- Avoid using products containing chlorine, acids or abrasives, especially for cleaning painted parts. In addition, avoid using acid or alkaline substances.
- Do not spray water or use a steam cleaner to clean any part of the oven. Use only slightly damp cloths.

Microwave cooking

- Do not operate microwave functions while the oven is empty.
- Eggs in their shells and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the container.
- Liquids, such as water, coffee or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.**
- Do not use straight-sided containers with narrow necks. Use a wide-mouthed container.
- After heating, allow the container to stand in the microwave oven for at least 20 seconds before removing the container.
- Ensure a free space of at least 2 cm above the top surface of the oven for adequate ventilation
- Use extreme care when inserting a spoon or other utensil into the container.
- **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.

Unsuitable dishware

- Never turn on the microwave oven before you have put in the food.
- Only use plates and crockery that are microwave safe.
- Never heat food covered in tin foil when using microwave or combination functions.
- Use only bakeware approved for oven use. Follow the manufacturer's instructions.
- Metallic containers for food and beverage are not allowed during microwave cooking.

Pacemakers

- Most pacemakers are shielded from interference from electronic products, including microwaves. However, patients with pacemakers may wish to consult their physicians if they have concerns.

SAFETY AND WARNINGS

Arcing

- Arcing can occur during both speed cooking and microwave cooking. If you see arcing, press **CANCEL/OFF** and correct the problem. Arcing is the microwave term for sparks in the oven. Arcing is caused by:
 - Metal or foil touching the side of the oven.
 - Metal cookware used during microwave or combination functions.
 - Metal such as twist-ties, poultry pins, or goldrimmed dishes in the oven.
 - Recycled paper towels containing small metal pieces being used in the oven.
 - The temperature sensor touching the microwave racks and shelves. To prevent this, remove the temperature sensor from the oven when not in use and ensure it does not protrude from your food during use.

Light Source Information

- This product contains a light source of energy efficiency class G. The light source used in this appliance is not suitable for room illumination

SERVICE AND WARRANTY

Before you call for service or assistance

Check the things you can do yourself. Refer to the installation instructions and your user guide and check that:

- ① Your product is correctly installed.
- ② You are familiar with its normal operation.

If after checking these points you still need assistance or parts, please refer to the Service & Warranty book for warranty details and your nearest Authorised Service Centre, Customer Care, or contact us through our website www.fisherpaykel.com.

Requirements of EEC Directive 93/68

European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE) (for European Union countries only)

GB: This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets
and are subject to change at any time.

The product specifications in this guide apply to the specific products and models
described at the date of issue. Under our policy of continuous product improvement,
these specifications may change at any time.

For current details about model and specification availability in your country,
please go to our website or contact your local Fisher & Paykel dealer.

433039B 04.26