
DISPLAY-FREE HEAT PUMP DRYER FIRST USE

Get to know your heat pump dryer	3
Control panel	4
Get the best results from your dryer	5
Understand fibre types	6
Sort your items	7
Load the dryer	8
Set a cycle	9
Cycle options	11
Connect to Wi-Fi	12
Enable Remote mode	13
Fit the drying rack	14
Cycle selections	15
Clean and maintain your appliance	16

FISHER & PAYKEL

UK IE EU SG HK

DISPLAY-FREE HEAT PUMP DRYER

 
 
DH9060YLZB5

GET TO KNOW YOUR HEAT PUMP DRYER




Download the app for a smarter experience

- Access extra features and information
- Track and run cycles from your phone
- Customise your favourite cycles
- Get the latest software updates
- Register your product for streamlined support

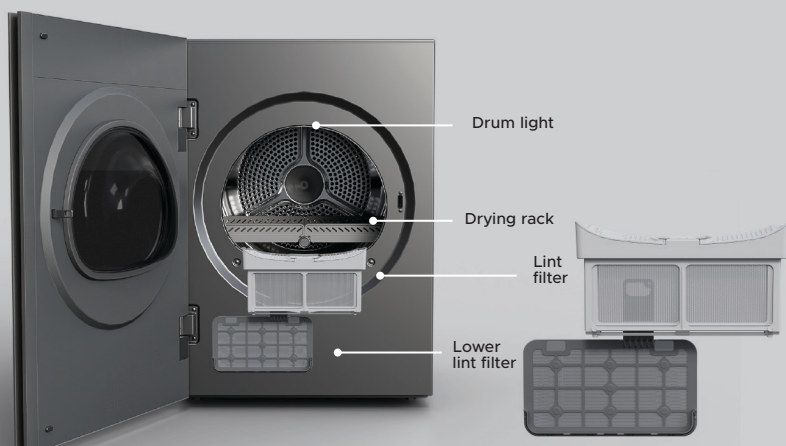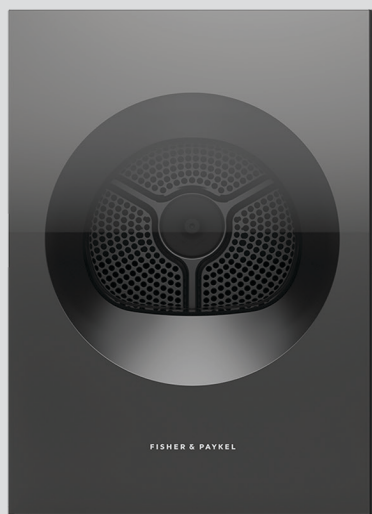

CONTROL PANEL

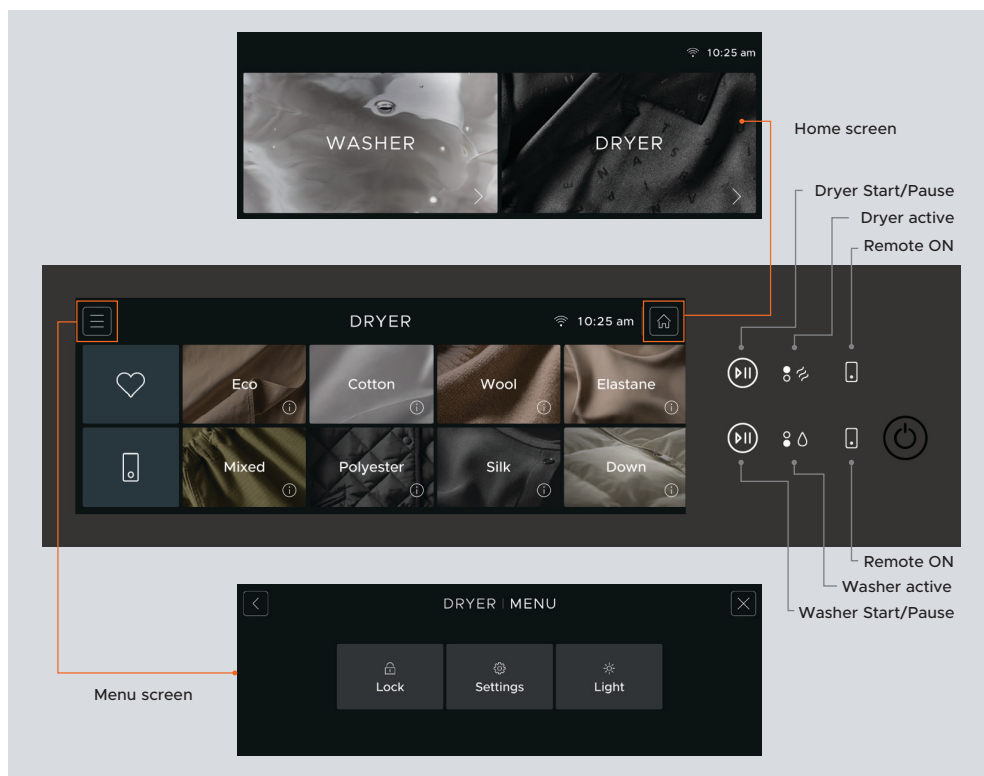 

	HOME	Return to the home screen and switch between washer and dryer.
	MENU	Access additional features and settings.
	FAVOURITES	Access saved favourites and preset cycle.
	REMOTE	Connect to your mobile device and operate it via the app.
	START/PAUSE	Start or pause a cycle or enable Remote mode.
	POWER	Press and hold to turn the appliance ON/OFF .
	LOCK	Lock the controls and prevent accidental use.
	SETTINGS	Adjust the clock, display, volume and other settings.
	LIGHT	Turn the drum light off or set it to turn on automatically.
	BACK	Go back one level.
	EXIT	Return to the home screen.

 
GET THE BEST RESULTS FROM YOUR DRYER

Heat pump dryers use lower temperatures and longer cycles than vented dryers. This approach provides gentle, energy-efficient care and helps to prevent overdrying. Follow these tips for the best results.



Check that items are well spun before drying

If items are still very wet after a wash cycle, run an additional spin cycle in the washer before placing items in the dryer. Excess water can increase drying time and may affect performance.




Load items one at a time

Separate and shake out each item after washing, then place it in the dryer. This reduces tangling and creasing and helps the load dry evenly.



Let items cool before checking dryness

 Because heat pump dryers use lower temperatures, items may feel slightly damp when first removed. Spread them out for a few minutes—they should feel dry once cool. If needed, increase the dryness level for future loads.



Use a timed drying cycle to finish partially air-dried items

Timed drying is better suited to finish partially dry items because Auto cycles use moisture to determine when the load is dry. Run the cycle for at least 30 minutes so the dryer has time to reach its operating temperature.



Choose a location with a moderate temperature

Place your dryer in a ventilated area where the temperature stays between 10°C and 30°C. Temperatures outside this range may reduce performance.

UNDERSTAND FIBRE TYPES



Choose a cycle to suit the most delicate fibre listed on the care label, even if it is only a small percentage. Use this guide to identify the most delicate fibres.

MOST DELICATE FIBRE TYPES

●	Cashmere, Angora, Mohair
●	Down
●	Silk
●	Wool, Merino, Lambswool
●	Elastane, Spandex, Lycra
●	Viscose, Bamboo, Rayon, Modal
●	Lyocell, Tencel™
●	Acrylic
●	Linen
●	Hemp
●	Ramie
●	Nylon, Polyamide
●	Polyester
●	Cotton

LEAST DELICATE FIBRE TYPES

SORT YOUR ITEMS

Sort your laundry by fibre type and item type before loading the dryer to help items dry evenly and to achieve the best drying results.



1. Check each care label to see the fibre composition and how each garment should be cared for. Care labels may be on the inside seam of your item.



2. Sort items into loads of similar fibre, item type and item colour.



3. Check pockets and close fasteners and zippers. Untangle items and load them one at a time.

LOAD THE DRYER



The maximum recommended load size varies by item type. For best drying performance, follow this load size guide to allow enough room for items to tumble freely and expand as they dry.




ITEM TYPE	LOAD SIZE
Ultra delicate	Extra small
Delicate	Small
Moderate / Durable / Sheets / Towels	Medium or large


If items are still damp after a cycle, separate and reposition them, then set a timed drying cycle for at least 30 minutes.

SET A CYCLE

 
Set a cycle according to fibre type, item type and treatment. Available cycle options may vary depending on fibre type.

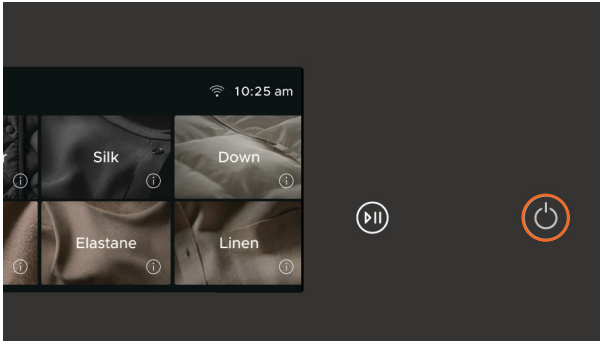

 1. Press and hold **POWER**  to turn the appliance on.

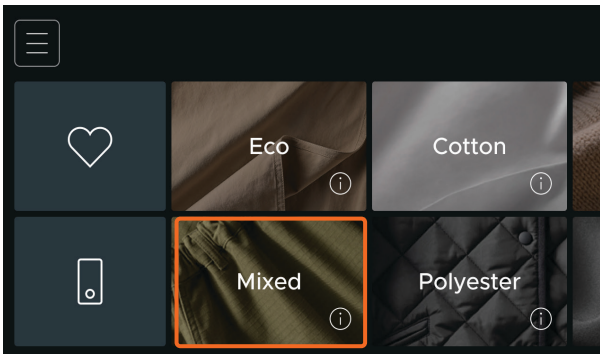


 2. Select **DRYER** from the home screen, then select the fibre type for the most delicate fibre in your load.

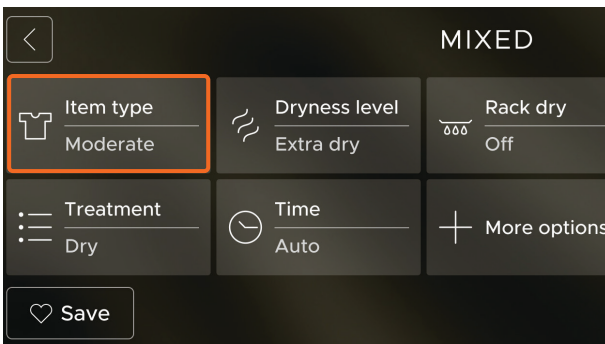


3. Select an item type to suit the durability of items your load.

 
SET A CYCLE

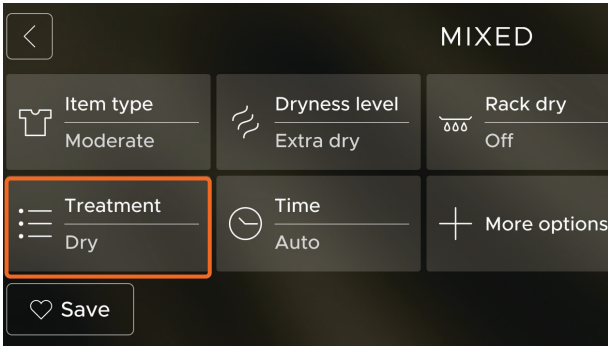

 4. Select a treatment to suit your desired cycle type.

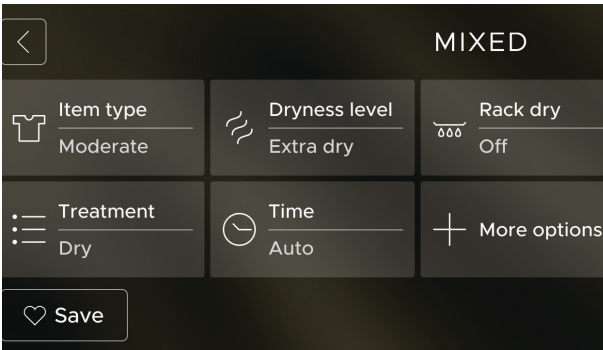

 5. Select other cycle settings and options as required.

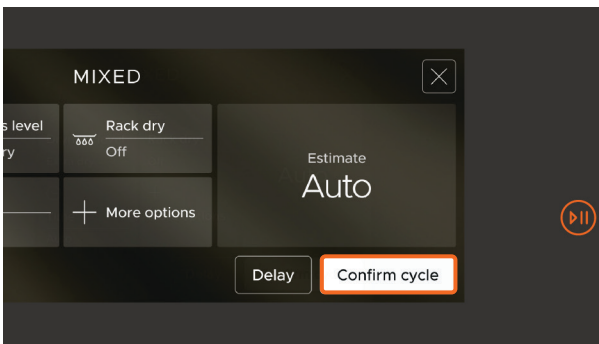


6. Press CONFIRM CYCLE, then press the START/PAUSE button.

CYCLE OPTIONS



 
Press **MORE OPTIONS** to access extra cycle options.

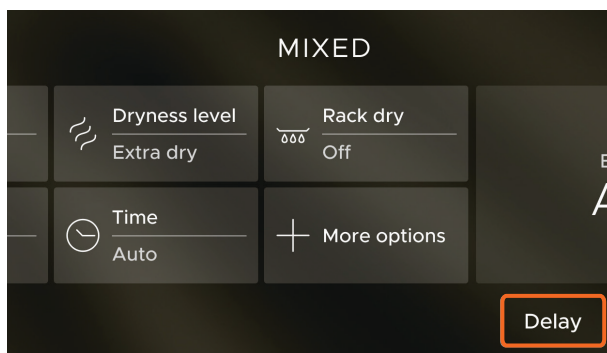

Delay cycle start time

Press **DELAY** to set a start time or enable remote start via the app.

 Follow the onscreen instructions, then press the **START/PAUSE** button.

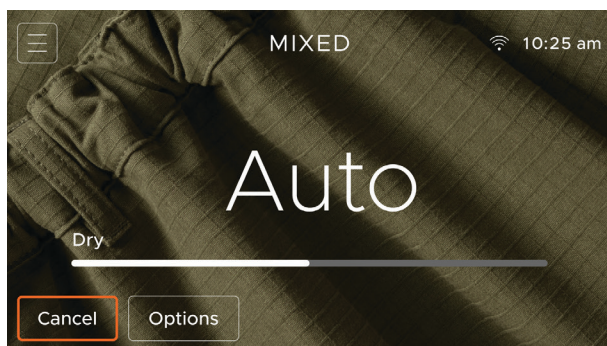


Cancel the cycle

Press **CANCEL**. Remove items immediately and spread them out to cool. Take care as the drum and items may be hot.


CONNECT TO WI-FI



 
Connect your appliance to your home wireless network to access extra features, receive updates and operate the appliance remotely using the app. It may take up to 10 minutes to connect your appliance.

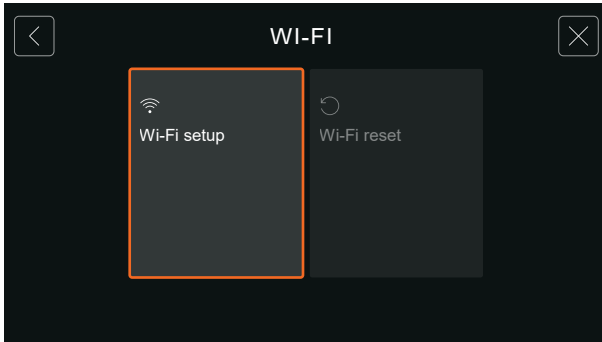

 1. Go to MENU  and select SETTINGS, WI-FI, then WI-FI SETUP.

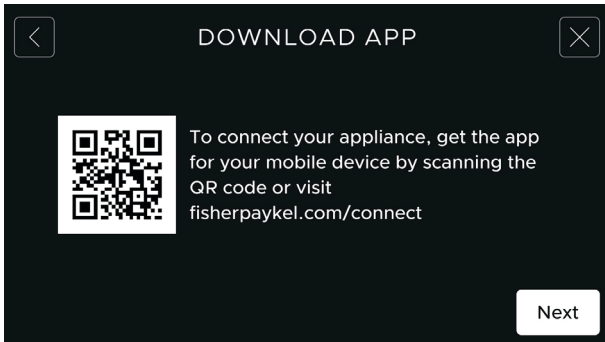

 2. Download the app, and follow the app instructions.

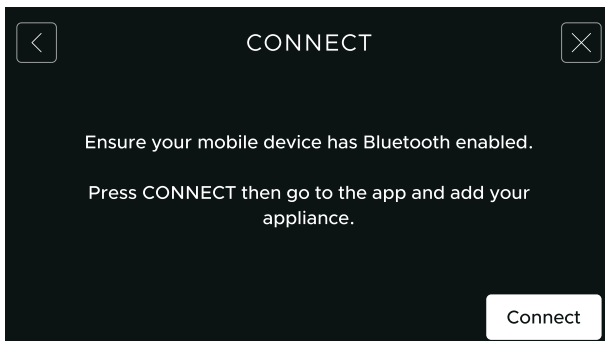


3. Enable Bluetooth on your mobile device, then press CONNECT.

Go to the app to complete the connection.

ENABLE REMOTE MODE



 
Enable REMOTE MODE to operate your appliance remotely via the app. You can enable it from the home screen or during cycle set up.

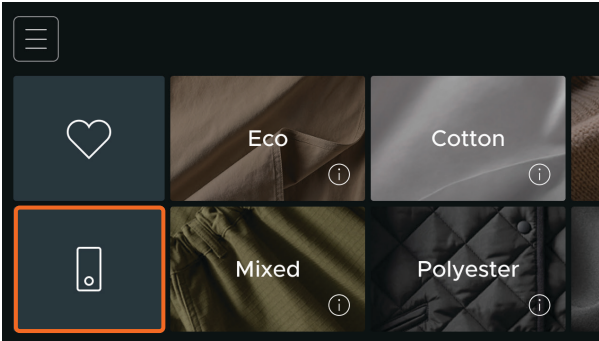

Enable Remote mode from home screen


Press REMOTE  on the home screen.

 Select ENABLE, then press the START/PAUSE  button to confirm.

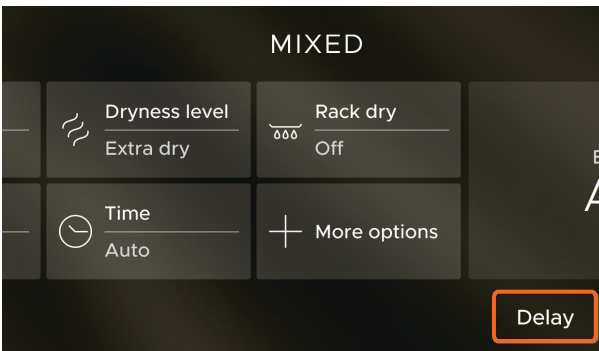

Enable Remote mode during cycle setup

 
1. Press DELAY in the cycle setting screen.

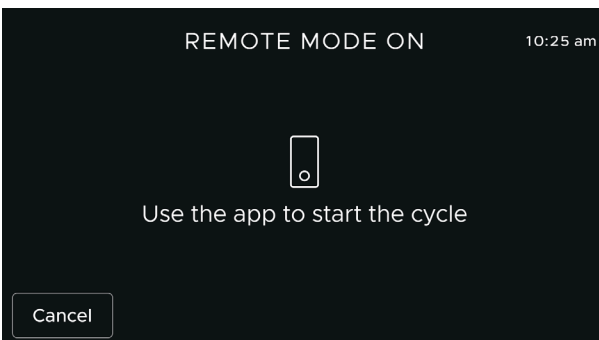

2. Select START BY REMOTE, then press the START/PAUSE  button to confirm.

FIT THE DRYING RACK

 Use the drying rack and turn on RACK DRY when setting a cycle for items that are not suitable for tumble drying. DRYNESS LEVEL is not available with RACK DRY. Select Time in cycle settings and set a drying duration.

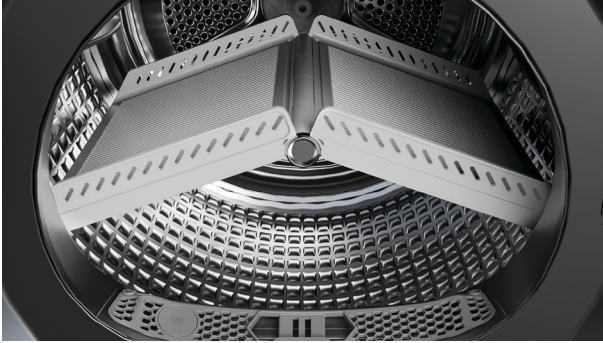

1. Fold the rack slightly and place it inside the dryer drum.



2. Press down on the centre of the rack so it lies flat and level.
Follow the onscreen instructions to confirm the rest of the settings and begin the cycle.



3. When drying sneakers, check them throughout the cycle. Save as a Favourite if intending to use this cycle regularly.

CYCLE SELECTIONS

Select cycle settings to suit your load. Available options may change according to cycle selections.

FIBRE TYPE

Eco*	Silk	Cashmere	Acrylic
Mixed	Elastane	Viscose	Hemp
Cotton	Down	Lyocell	Ramie
Polyester	Linen	Nylon	Wool

ITEM TYPE

Ultra delicate	Denim	Bulky	Sportswear
Delicate	Towels	Quilts & Duvets	Soft toys
Moderate	Sheets	Outdoors	Shoes
Durable			

TREATMENT

Dry	Sanitise	Rack dry
Steam refresh	Allergy care	

METHOD

Auto	Time
------	------

DRYNESS LEVEL

Iron ready	Dry	Dry plus	Extra dry
------------	-----	----------	-----------

MORE OPTIONS

Crease free	Iron ready alert
-------------	------------------

*The Eco programme is suitable for drying wet cotton laundry and achieves a dryness level between Iron ready and Dry.

CLEAN AND MAINTAIN YOUR APPLIANCE

Make these steps a regular part of your cleaning and maintenance routine to get the best results from your appliance. See the Care & Maintenance guide for details.



Clean the lint filter

Clean the lint filter before or after every load.

Blocked filters reduce performance, and a build-up of lint can cause a fire.

Cleaning

- General cleaning
- Cleaning the upper and lower lint filters

Maintenance and troubleshooting

- Troubleshooting common issues
- Faults and alerts

Compliance information

- Product compliance
- Certified drying performance
- Woolmark-approved fabric care programs



Care, maintenance and troubleshooting information

Scan the QR code or visit fisherpaykel.com and search for your model code.

DH9060YLZB5

