
OVEN

INSTALLATION GUIDE

Components required	3
Accessing your product specifications	4
Unpack product	7
Remove door	8
Connect power	10
Position in cavity	11
Refit door	12
Align to surroundings	13
Secure to cavity	14
Refit shelves	15
Checklist	16

FISHER & PAYKEL

NZ AU SG

MINIMAL

OS60SAMHUNB5, OS60SAMHUNG5, OS60SAMHUB5, OS60SAMHUG5,
OS60SAMVUB5, OS60SAMVUG5, OS60SAMVTB5, OS60SAMVTG5,
OS60NAMHUNB5, OS60NAMHUNG5, OS60NAMHUB5, OS60NAMHUG5,
OS60NAMVUB5, OS60NAMVUG5, OS60NAMVTB5, OS60NAMVTG5,
OB60SAMPUNB5, OB60SAMPUNG5, OB60SAMPUB5, OB60SAMPUG5,
OB60SAMPTB5, OB60SAMPTG5, OB60SAMTB5, OB60SAMTG5

CONTEMPORARY

OS60SACHUDX5, OS60SACVUDX5, OS60SACVTDX5, OS60NACHUDX5,
OS60NACVUDX5, OS60NACVTDX5, OB60SACPUDX5, OB60SACPTDX5,
OB60SACTDX5, OB60SACPGX5, OB60SACPGB5, OB60SACGX5,
OB60SACGB5

COMPONENTS REQUIRED

..... **TOOLS**

Not supplied

- ☐ Powered driver
- ☐ Cross-head screwdriver

..... **PARTS**

Supplied



- ☐ Screws (2)
- ☐ Cabinetry trim (some models only)



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

STANDARD (MINIMAL & CONTEMPORARY MODELS)

OS60SAMHUNB5, OS60SAMHUNG5, OS60SAMHUB5, OS60SAMHUG5,
OS60SAMVUB5, OS60SAMVUG5, OS60SAMVTB5, OS60SAMVTG5,
OS60SACHUDX5, OS60SACVUDX5, OS60SACVTDX5, OB60SAMPUNB5,
OB60SAMPUNG5, OB60SAMPUB5, OB60SAMPUG5, OB60SAMPTB5,
OB60SAMPTG5, OB60SAMTB5, OB60SAMTG5, OB60SACPUDX5,
OB60SACPTDX5, OB60SACTDX5, OB60SACPGX5, OB60SACPGB5,
OB60SACGX5, OB60SACGB5

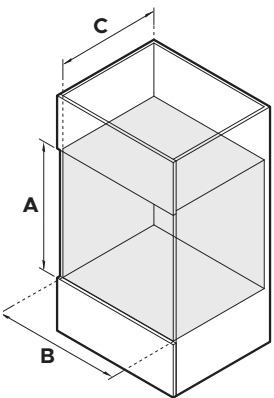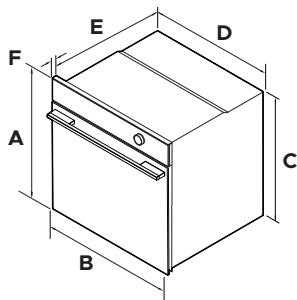

PRODUCT DIMENSIONS		mm
A	Overall height	598
B	Overall width	596
C	Chassis height	575
D	Chassis width	556
E	Chassis depth	545
F	Control panel thickness	20



CAVITY DIMENSIONS		mm
A	Minimum inside height of cavity	580
B	Minimum inside width of cavity	560
C	Minimum inside depth of cavity	550
Recommended cabinet width		600



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

COMPACT (MINIMAL & CONTEMPORARY MODELS)

OS60NAMHUNB5, OS60NAMHUNG5, OS60NAMHUB5, OS60NAMHUG5,
OS60NAMVUB5, OS60NAMVUG5, OS60NAMVTB5, OS60NAMVTG5,
OS60NACHUDX5, OS60NACVUDX5, OS60NACVTDX5

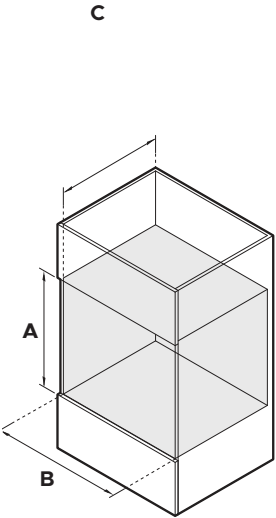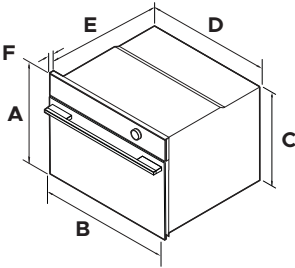

PRODUCT DIMENSIONS		mm
A	Overall height	458
B	Overall width	596
C	Chassis height	435
D	Chassis width	556
E	Chassis depth	545
F	Control panel thickness	20

CAVITY DIMENSIONS		mm
A	Minimum inside height of cavity	440
B	Minimum inside width of cavity	560
C	Minimum inside depth of cavity	550
Recommended cabinet width		600

PRIOR TO INSTALLATION



fisherpaykel.com/specify

1. Refer to the Planning Guide for cabinetry, cavity, panel and service specifications.

For light cabinetry, ensure clashing has been considered and installed.



2. Ensure the cabinet meets the minimum cavity specifications required.

UNPACK PRODUCT

- Do not lift or move the product using the door handle.
 - Keep all packing materials until the unit has been inspected.
 - Inspect the product to ensure there is no shipping damage. If any damage is detected contact the dealer or retailer you brought the product from to report the damage.
 - Fisher & Paykel is not responsible for shipping damage.
-



1. Cut and remove all straps and outer packaging. Lift off the carton sleeve and remove any internal packing materials.



2. Slide out the front packing support, then lift the oven up and forward to remove it from the pallet

Dispose of packaging responsibly.


REMOVE DOOR



1. Open the door and remove all cable ties and packaging holding the oven shelves in place.




2. Grip the shelves at the front, making sure to hold the wire shelf and frame together. Lift upwards and pull out from the oven. For more guidance on removing the shelves, refer to page 14.

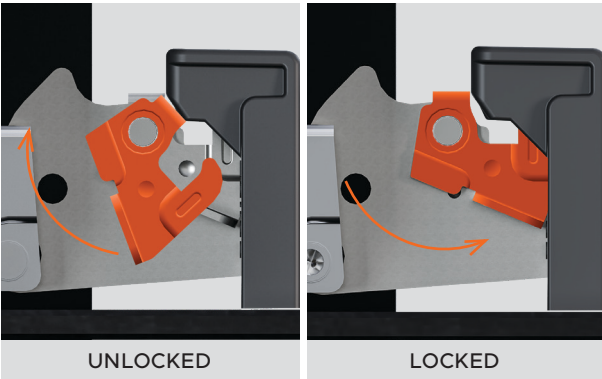

3. Locate the hinge locks on either side of the door. Push the locks upwards to release.

REMOVE DOOR

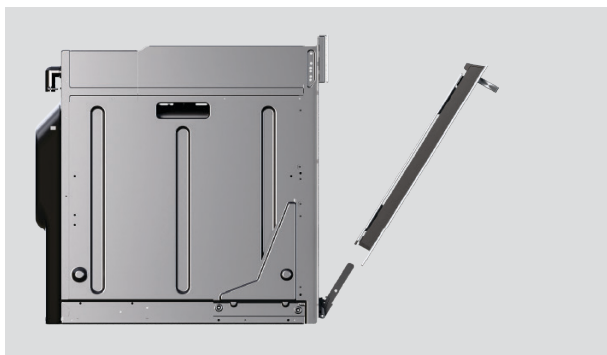


4. Holding the door on both sides, partially close the door and carefully pull the door away from the hinges.

CONNECT POWER




1. Unclip and lift cover to access terminal block.

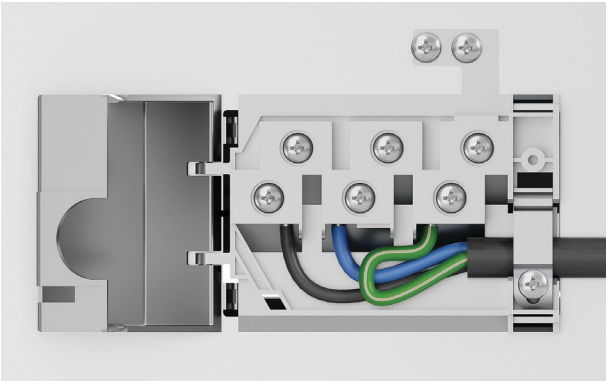

2. Connect wires as shown. Connector and ports may not be present on all models. Ensure oven is correctly Earthed and cable clamp is tightened before closing the cover.

SPECIFICATIONS	OS60/OB60 MODELS
Dedicated Circuit (A)	16
Rated Power (W)	2800 - 3300
Supply (Hz)	50-60
Voltage (V)	220 – 240
Connection	Hard-wired min 1500mm

POSITION IN CAVITY

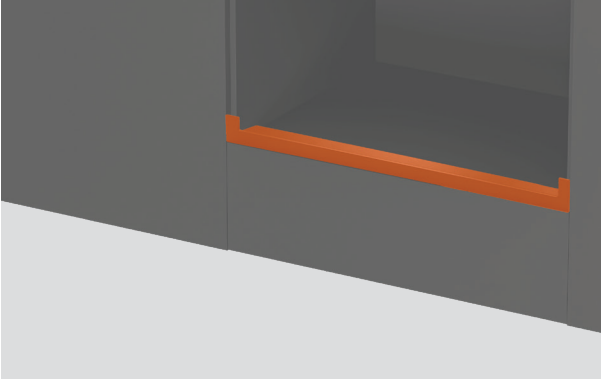


1. For light cabinetry, the supplied trim can be used to enhance clashing finish. To install, remove the trim adhesive and press to secure to cavity*.




2. Apply protective tape to adjacent cabinetry panels before lifting product into place.

*To purchase cabinetry trim as an optional accessory, visit fisherpaykel.com


REFIT DOOR

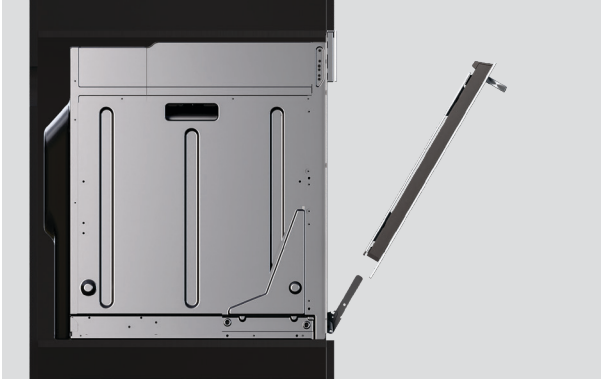

1. Holding the door on both sides, carefully lift door back onto the hinges.

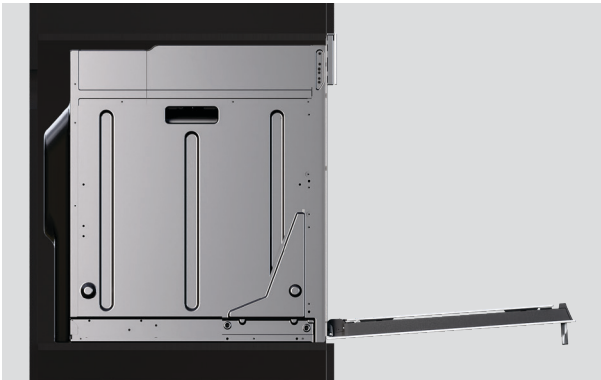

2. Open the door fully and push each locking lever down and lock into place.

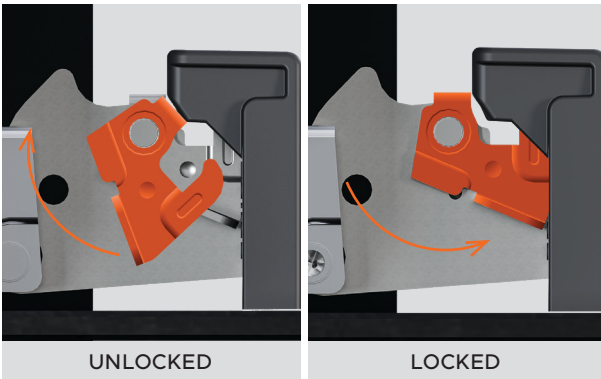

3. Ensure both hinges are fully locked before shutting the door.

ALIGN TO SURROUNDINGS




1. Align oven with surrounding cabinetry and appliances.



2. Ensure the vertical gaps are even before making any horizontal adjustments.

SECURE TO CAVITY

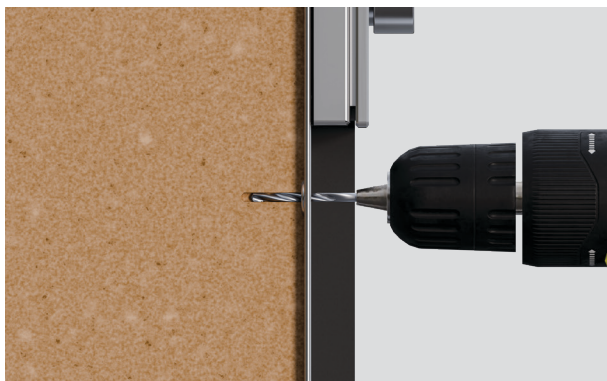

1. Using the product as a guide, pre-drill 2 x 3mm pilot holes.



2. Secure oven to cavity using the 2 x screws provided.

REFIT SHELVES




Sliding shelves

Place shelves back into the oven at the desired level. Ensure shelves are level and correctly positioned with the guard rail at the back.



Wire shelves

Slide shelves into the cavity.

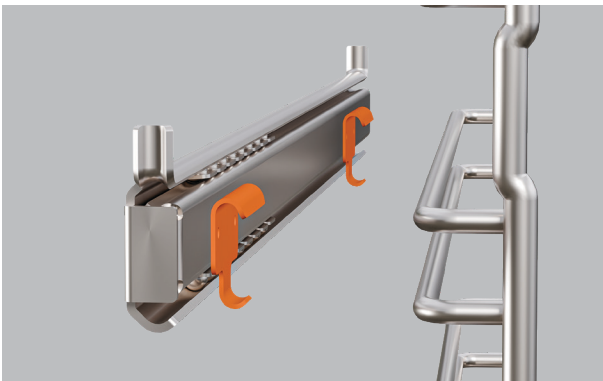

Clip-on runners

Fit the top clips over the side ladder. The front clip should be fitted as close to the front of the side ladder as possible. Click the bottom clips into place.

CHECKLIST

Installation checks

- ☐ All clearances are correct.
- ☐ The product is level and securely fitted in the cabinetry.
- ☐ Check the lower trim is undamaged.
- ☐ All internal packaging is removed.
- ☐ The isolating switch can be easily reached.

Test operation

- ☐ Turn product on at the power supply.
- ☐ Follow the on-screen guidance to connect the product to Wi-Fi and set the clock.

Complete and keep for safe reference:

Model	_____
Serial no.	_____
Purchase date	_____
Purchaser	_____
Dealer address	_____
Installer's name	_____
Installer's signature	_____
Installation company	_____
Installation date	_____

