
COMBI-MICROWAVE OVEN

INSTALLATION GUIDE

Components required	3
Accessing your product specifications	4
Prior to installation	7
Unpack product	8
Remove shelves	9
Connect power	10
Position in cavity	11
Align to surroundings	12
secure to cavity	13
Refit shelves	14
Checklist	15

FISHER & PAYKEL

NZ AU UK IE SG

MINIMAL

OM76NMUB3, OM76NMUG3, OM76NMUNB3, OM76NMUNG3,
OM60NMUNB5, OM60NMUNG5, OM60NMTB5, OM60NMTG5,
OM60NMUB5, OM60NMUG5

CONTEMPORARY

OM76NCUDX3, OM60NCUDX5, OM60NCTDX5

PROFESSIONAL

OM76NPUX3

COMPONENTS REQUIRED

TOOLS

Not supplied

- ☐ Powered driver
- ☐ Cross-head screwdriver

PARTS

Supplied



- ☐ Screw SD #7X13 PAN PH ZP (2)
- ☐ Cabinetry trim (some models only)



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

OM76N MINIMAL AND CONTEMPORARY MODELS

OM76NMUB3, OM76NMUG3, OM76NMUNB3, OM76NMUNG3, OM76NCUDX3

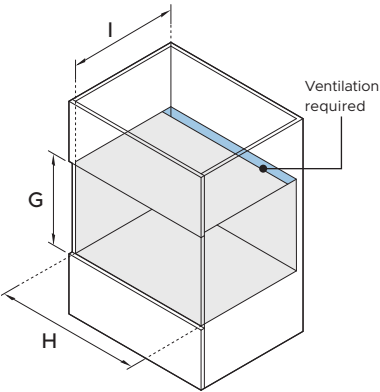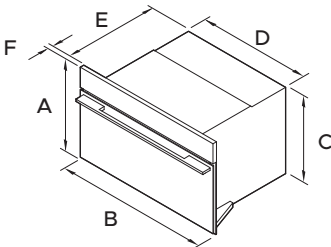

PRODUCT DIMENSIONS		mm
A	Overall height	458
B	Overall width	758
C	Chassis height	435
D	Chassis width	720
E	Chassis depth	545
F	Control panel thickness	20
	Depth with door fully open*	320

*Measured from front of control panel.

CAVITY DIMENSIONS		mm
G	Minimum inside height of cavity	440
H	Minimum inside width of cavity	724
I	Minimum inside depth of cavity*	550**
	Recommended cabinet height	460
	Recommended cabinet width	762



*Excluding control panel thickness.

**Requires ventilation at the rear of the cavity.



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

OM76N PROFESSIONAL MODELS
OM76NPUX3

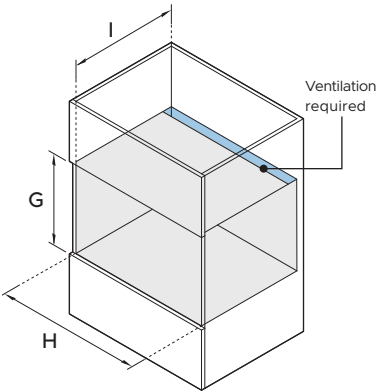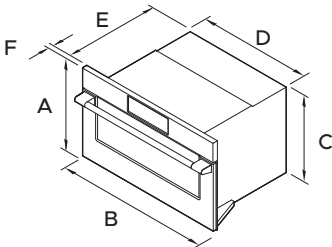

PRODUCT DIMENSIONS		mm
A	Overall height	458
B	Overall width	758
C	Chassis height	435
D	Chassis width	720
E	Chassis depth	545
F	Control panel thickness	24
	Depth with door fully open*	320

*Measured from front of control panel.

CAVITY DIMENSIONS		mm
G	Minimum inside height of cavity	440
H	Minimum inside width of cavity	724
I	Minimum inside depth of cavity*	550**
	Recommended cabinet height	460
	Recommended cabinet width	762

*Excluding control panel thickness.

**Requires ventilation at the rear of the cavity.



ACCESSING YOUR PRODUCT SPECIFICATIONS



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

OM60N MINIMAL AND CONTEMPORARY MODELS

OM60NMUNB5, OM60NMUNG5, OM60NMTB5, OM60NMTG5, OM60NMUB5, OM60NMUG5, OM60NCUDX5, OM60NCTDX5

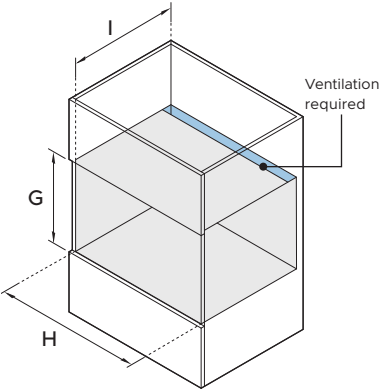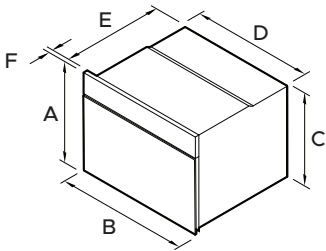

PRODUCT DIMENSIONS		mm
A	Overall height	458
B	Overall width	596
C	Chassis height	435
D	Chassis width	556
E	Chassis depth	545
F	Control panel thickness	20
	Depth with door fully open*	324

*Measured from front of control panel.

CAVITY DIMENSIONS		mm
G	Minimum inside height of cavity	440
H	Minimum inside width of cavity	560
I	Minimum inside depth of cavity*	550**
	Recommended cabinet height	460
	Recommended cabinet width	600

*Excluding control panel thickness.

**Requires ventilation at the rear of the cavity.


PRIOR TO INSTALLATION




fisherpaykel.com/specify

1. Refer to the Planning Guide for cabinetry, cavity, panel and service specifications.

For light cabinetry, ensure the exposed cabinet edges have a suitable finish.

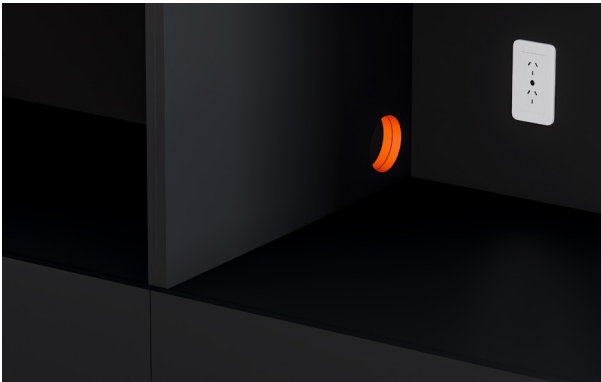

2. Ensure the cabinet meets the minimum cavity specifications required.

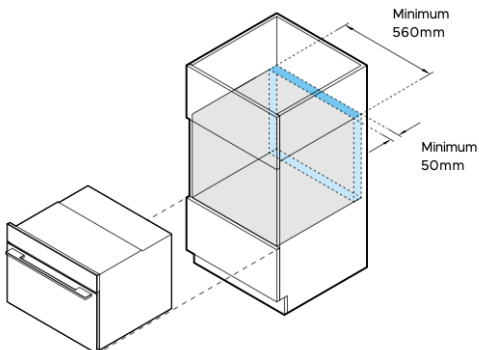

3. Ensure ventilation has been set up correctly.

Refer to the planning guide for details.

UNPACK PRODUCT

- Do not lift or move the product using the door handle.
 - Keep all packing materials until the unit has been inspected.
 - Inspect the product to ensure there is no shipping damage. If any damage is detected contact the dealer or retailer you bought the product from to report the damage.
 - Fisher & Paykel is not responsible for shipping damage.
-



1. Cut all straps and remove the carton top cap.




2. Lift the carton sleeve and remove any transit packaging. Set aside any accessories.

Dispose of packaging responsibly.

REMOVE SHELVES



1. Open the door and remove all cable ties and packaging holding the oven shelves in place.

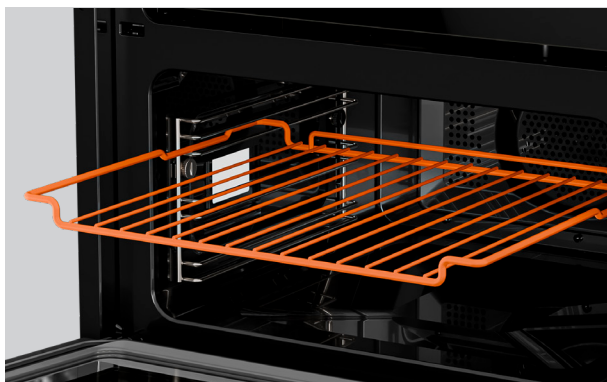


2. Grip the shelves at the front. Lift upwards and pull out from the microwave.

CONNECT POWER

SPECIFICATIONS	OM76 OM60 MODELS
RATED POWER (W)	3800
Hz	50
VOLTAGE (V)	220 – 240V
MICROWAVE RATED INPUT (W)	2000
MICROWAVE RATED OUTPUT (W)	900
MICROWAVE FREQUENCY (MHz)	2450




1. Unclip and lift cover to access terminal block.

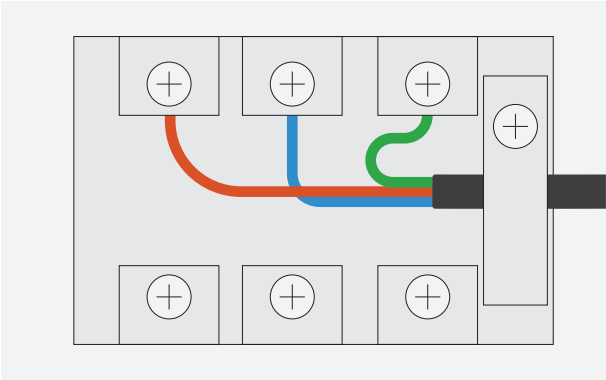

2. Based on your terminal block configuration, connect wires as shown. Connector and ports may not be present on all models.

Ensure oven is correctly earthed and cable clamp is tightened before closing the cover.

POSITION IN CAVITY

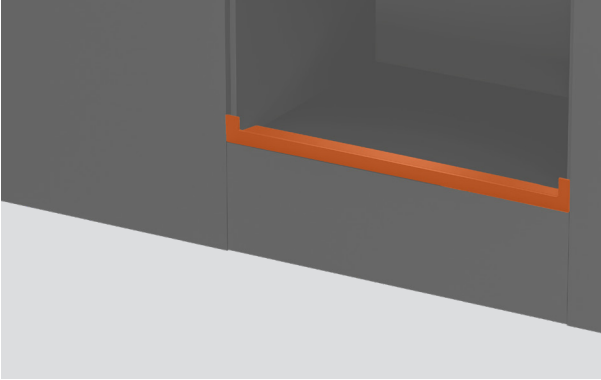

1. For light cabinetry, the supplied trim can improve the overall finish. To install, peel off the adhesive backing and press the trim firmly into place on the cavity*.



2. Lift product into cavity.

*To purchase cabinetry trim as an optional accessory, visit fisherpaykel.com

ALIGN TO SURROUNDINGS




1. Align microwave with surrounding cabinetry and appliances.




2. Ensure the vertical gaps are even before making any horizontal adjustments.

SECURE TO CAVITY

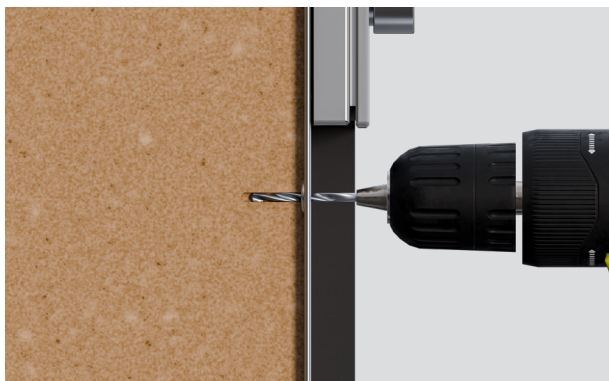


1. Using the product as a guide, pre-drill 2 x 3mm pilot holes.

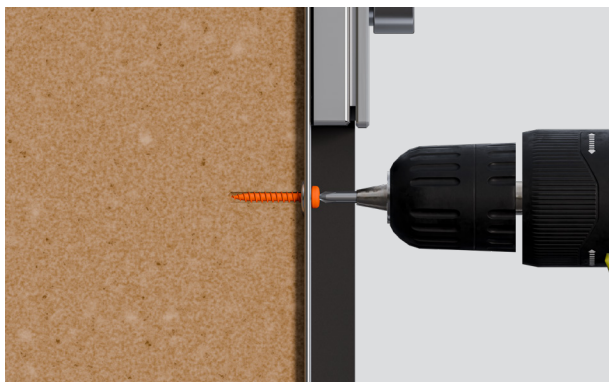

2. Secure oven to cavity using the 2 x screws provided.

REFIT SHELVES

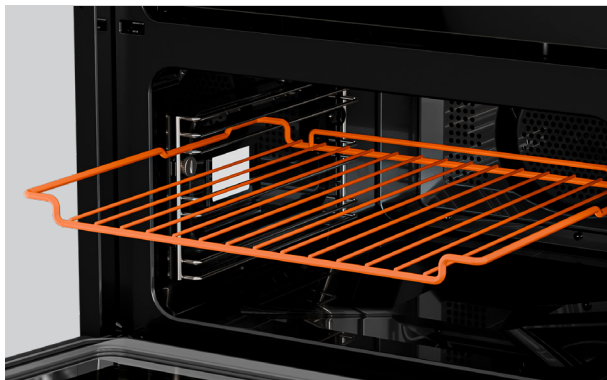

1. Reposition shelves in the oven at the desired level.

Ensure shelves are level and correctly positioned with the guard rail at the back.

CHECKLIST

Installation checks

- ☐ All clearances are correct.
- ☐ The product is level and securely fitted in the cabinetry.
- ☐ Ensure all ventilation has been set up correctly.
- ☐ All internal packaging is removed.
- ☐ The isolating switch can be easily reached.

Test operation

- ☐ Turn product on at the power supply.
- ☐ Follow the on-screen guidance to connect the product to Wi-Fi and set the clock.

Complete and keep for safe reference:

Model _____

Serial no. _____

Purchase date _____

Purchaser _____

Dealer address _____

Installer's name _____

Installer's signature _____

Installation company _____

Installation date _____

