

FISHER & PAYKEL

HEAT PUMP CLOTHES DRYER

DH1060H5 models

USER GUIDE

CN

CONTENTS

Safety and warnings	4
Product overview	11
Control panel	12
Menu	13
Get the best results from your dryer	14
Understanding fibre types	15
Sort your items	16
Load the dryer	17
Set a cycle	19
Drying options	22
Set delayed start	23
Fit drying rack	24
Adjust settings	25
Save favourite cycles	27
Cycle selections	29
Wi-Fi connection and remote mode	34
Clean and maintain the dryer	38
Empty the water tank	39
Clean the lint filter	40
Clean the lower filter	41
Troubleshooting	42
Fault codes	45
Compliance information	46
Service and warranty	47

⚠ WARNING!



Electric Shock Hazard

Failure to follow this advice may result in electric shock or death.

- If you are using an extension cord or a portable electrical outlet device (eg multi-socket outlet box), ensure that it is positioned so that it does not come into contact with water or moisture.

⚠ WARNING!



Fire Hazard

- Only dry fabrics that have been washed with water.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Never stop a tumble clothes dryer before the end of the drying cycle unless all items are removed and spread out in order to dissipate the heat.
- A clothes dryer produces combustible lint; the lint filter must be cleaned before each drying cycle.
- Failure to follow the warnings outlined in these user instructions can cause a fire hazard.
- Failure to follow these instructions can result in death or personal injury.

⚠ WARNING!



R290

This appliance contains flammable refrigerant isobutane (R290).



Read the instructions

WARNING!

Failure to follow all guides and rules could cause personal injury or property damage. Use this appliance only for the intended purpose as described in the user guide and installation guide of this appliance. When using this appliance, always exercise basic safety precautions including the following:

General

- This product has been designed for personal, family or household use. This product is not designed for any commercial use.
- This product is suitable for sale and use in mainland China only.
- This is a general guide only. For detailed information such as rated capacity, dimensions, Restriction of Hazardous Substances declaration and installation instructions refer to the website refer to fisherpaykel.cn
- If there is any inconsistency between this guide and the available version online, refer to the online version in the first instance.
- Do not touch or operate the appliance with wet hands or with bare feet.
- Do not operate this appliance if it has been damaged during transport. Contact your Fisher & Paykel dealer or Fisher & Paykel trained and supported service technician.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or given instructions on how to use the appliance by someone responsible for their safety.
- Supervise children to ensure they do not play with the appliance or climb inside the drum.
- Never allow small children, pets or dangerous items inside the drum, to prevent suffocation, death or other accidents.
- Prevent children and pets from approaching, playing with, or operating the appliance, including doors and water tank.
- Supervise children to ensure they do not play with the appliance, climb inside the drum or inhale small parts.
- Do not place stools or similar climbing aids near the appliance.
- Do not swing on or put weight on the door.
- Undergarments that contain metal reinforcements should not be placed in the dryer. Damage to the dryer can result if the metal reinforcements come loose during drying. If you wish to dry these items use a drying rack or place in a garment bag.
- Check and remove all objects from pockets, eg lighters and matches.
- Items should go through the cooling phase in the final part of the cycle. This ensures items are left at a temperature where they will not be damaged. If for any reason the cycle is stopped before it has finished, dry clothes should be removed immediately and not left in the appliance. Items should be quickly spread out flat to cool so heat can dissipate, not left bunched up, eg in a clothes basket or in a pile.
- In the event of a power outage the cycle will be paused when power is restored. Press Confirm, then Start/Pause to resume the cycle.
- The only user-removable parts of the dryer are the filters, water tank and drying rack. No other parts are designed to be removed by anyone other than a Fisher & Paykel trained and supported service technician.

SAFETY AND WARNINGS

- For problems that cannot be solved from information in the user guide, turn off and unplug your appliance and contact a Fisher & Paykel trained and supported service technician.
- Never attempt to repair the appliance yourself.
- Never put dripping wet clothes in or on top of the dryer as excess water may cause an electrical hazard.
- Do not under any circumstances place an electric blanket or any other electrical, plastic or rubber items in the appliance, unless the care label specifically states it is safe to do so.
- Do not dry curtains in your dryer.
- Only items that are suitable for tumble drying may be dried. Before drying, check the care label on the garment and strictly follow the drying instructions on the label. Items without a care label, or with a label that does not clearly indicate suitability for tumble drying, must not be dried, otherwise damage may occur.
- Do not dry fabrics that have been treated with starch. Hardened starch residue may form a thin powdery layer, which can reduce drying performance.
- For models with a water tank, never run the dryer without the water tank in place unless drain hose is connected. For models without a water tank, the drain hose must be connected.
- Do not use the water collected in the water tank for drinking or food processing.
- If the water tank becomes full, the appliance will pause and sound an alarm. You must empty the water tank before the appliance can continue running.
- Do not unplug or switch off the power during operation. Disconnect the power supply when not in use or when cleaning. Do not plug or unplug the power cord with wet hands.
- During and shortly after drying, do not touch the drum, metal parts, door glass or metal parts of clothing to prevent burns.
- When removing the water tank, support it with both hands and remove slowly to prevent it dropping due to its weight. Avoid contact with sharp edges and supervise children to prevent injury.
- Do not disassemble, repair, or modify the dryer. If servicing is required, contact Customer Care. Use original spare parts only.
- Do not cover the appliance with plastic dust covers.
- If abnormal noise, odor, overheating, or malfunction occurs during operation, stop using the appliance immediately, switch it off, and disconnect the power supply.
- Use fabric softeners or similar products according to the manufacturers' instructions.
- Do not sit or lean on the open door. The appliance may tip over.
- Do not place items on the appliance, especially hot or heavy items (such as containers filled with hot water).
- Do not climb onto the appliance. The top panel may break.
- Avoid impact to glass parts to prevent injury.
- Do not place flammable items inside or near the appliance. Do not use flammable sprays near the appliance.
- For models with circuit breakers or RCDs, do not change their settings.
- **WARNING:** Keep ventilation openings unobstructed, especially for built-in installation.
- **WARNING:** Do not damage the refrigerant circuit.
- For products charged with a flammable refrigerant, in the event of an abnormal condition, natural ventilation shall be provided before switching the appliance off to prevent the accumulation of flammable refrigerant.
- Do not overload your dryer beyond its rated capacity.

SAFETY AND WARNINGS

MODEL	MAXIMUM CAPACITY* (KG)
DH1060H5	10

*Capacity refers to the maximum dry weight of items the dryer can dry at any one time

Lint

- Do not operate this appliance without the lint filters in place, or allow lint to accumulate in or around the appliance.
- Accumulated lint in the appliance can become a fire hazard; it also reduces the efficiency of the appliance by causing longer drying times and increased power consumption.
- Clean the lint filter before every load.
- Ensure the area around the appliance is clear of lint.
- If the lint filter becomes damaged, contact your Fisher & Paykel trained and supported service technician to arrange getting a new filter. Do not operate your appliance with a damaged lint filter or without the filter in place, as this will cause damage to your appliance.

Spontaneous combustion

To reduce the risk of fire the following should be observed:

- Items that have been spotted or soaked with vegetable oil or cooking oil are a fire hazard and should not be placed in the appliance.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as this appliance. The items become warm causing an oxidation reaction in the oil. This oxidation creates heat. If the heat cannot escape the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping creating a fire hazard.
- If it is unavoidable that fabrics that contain vegetable oil, cooking oil or have been contaminated by hair care products be placed in this appliance, they should first be washed in hot water with extra detergent—this will reduce, but not eliminate the fire hazard. The cooling cycle should be used to reduce the temperature of these items. They should not be removed from the appliance and piled or stacked while hot.
- Items that have previously been cleaned in, washed in, soaked in or spotted with flammable liquids or solids, eg petrol/gasoline, kerosene, dry cleaning solvents, vegetable or cooking oil, acetone, denatured alcohol, some brands of spot removers, turpentine, waxes and wax removers or other flammable or explosive substances should not be placed in the appliance.
- The appliance is not to be used if industrial chemicals have been used for cleaning.
- Fabric softeners or similar products should not be used in the appliance to eliminate the effects of static electricity, unless this practice is specifically recommended by the manufacturer of the fabric softener product.
- Items such as foam rubber (latex foam), shower caps, rubber backed articles, clothes or pillows fitted with foam rubber pads, waterproof textiles, shoes containing rubber or plastic items should not be placed in the appliance. These materials can spontaneously combust when heated.
- Do not dry unwashed items in the appliance.
- When using **STEAM REFRESH** cycles on unwashed clothing ensure there are no flammable substances on them.

SAFETY AND WARNINGS

Installation

- This appliance is heavy. We recommend two persons to move and install the appliance.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- We do not recommend the use of extension cords or portable electrical outlet devices for safety reasons.
- Install the appliance on a solid and level floor surface.
- The appliance must be installed in a well-ventilated, dust-free environment.
- The appliance must not be installed on any textured floor coverings (eg carpet, rugs). Ensure that openings at the base of the appliance are not obstructed.
- The appliance must not be installed behind a lockable door, a sliding door or a door with the hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- If installing behind a cabinetry door, it must be hinged on the same side as the dryer and there must be a minimum clearance of 40mm from the front of the dryer door to the internal face of the cabinetry door for the product to operate safely. The enclosed space must be provided with sufficient ventilation to meet local building code requirements or the door must be open while the product is operating.
- This appliance can be installed on a compatible Fisher & Paykel plinth or a washer with a stacking kit. To ensure stability, the plinth or stacking kit must be fitted correctly with the appliance. For installation instructions and compatible washer, plinth and stacking kit models, refer to www.fisherpaykel.cn and the Side by Side Installation guide or Stacked Installation guide.
- Do not install or operate this appliance on any other plinth or structure.
- For more information refer to the installation guide. To access, go to www.fisherpaykel.com/cn/zh_CN/specify and search by appliance type, product name or model.
- A module may separate from its housing (located at the top-right of the door opening) upon removal of the tape used to secure it for transport. Dislodging of the module might sometimes occur in use. If so, return it to its housing, ensuring it snaps back into place securely.
- During transport, the maximum tilt angle of the appliance must not exceed 45°. Before first use, allow the appliance to stand upright for 2 hours before connecting to the power supply (heatpump dryers only).
- Do not lift or move the machine by protruding parts (e.g. door, plastic parts, water tank). Components may loosen or be damaged. Wear protective gloves during installation and transport.
- Use only the inlet hose supplied with the appliance. Do not reuse old inlet hoses.
- Do not install washer-dryer combinations on an inclined or unstable surface. The appliances may tip over.

Installation location:

- Insects (e.g. cockroaches) may damage the appliance. Keep the appliance and surrounding area clean.
- Install on a hard, level, stable surface. Do not install on sloped, uneven, or soft surfaces (e.g. rough concrete).
- Do not place wood, cardboard, or similar materials under the appliance to level the floor.
- Do not install the dryer behind a lockable door, sliding door, or a door with hinges positioned opposite the appliance hinge, as this may prevent the dryer door from opening fully.
- Do not place or operate microwave ovens, induction cookers, hair dryers, irons, ovens, or other electromagnetic heating appliances near the appliance.

SAFETY AND WARNINGS

- Use the appliance in an ambient temperature range of 5 °C to 35 °C.
- Some cycles will have reduced performance at a room temperature below 10°C or above 30°C.
- Do not install in direct sunlight or near heating devices.
- Do not use near biogas pits or environments containing flammable or explosive gases or liquids.
- Do not install in dusty environments (e.g. coal dust, flour).
- Do not allow lint to accumulate around the appliance.
- Do not place lit candles, cigarettes, mosquito coils, or other ignition sources on the appliance.
- Do not install outdoors or in wet environments.
- Do not install under a shower or allow water spray to directly hit the appliance.
- Maximum operating altitude: 2000m

Water supply requirements

- Inlet water pressure: Max. 1MPa, Min. 30kPa
- Inlet water flow rate: Min. 6 litres/minute
- The cold water temperature should not exceed 35°C. Temperatures above these may cause the appliance to fault or cause damage to it.
- A pressure-reducing valve must be installed if pressure is higher than 1Mpa.
- New hose sets provided should be used to connect the appliance to the water mains. Old hose sets should not be re-used.
- We recommend the inlet hose(s) are changed every 5 years. **WARNING:** Failure to do so may result in a flood and damage to property.

Electrical requirements

- Use a 220 V / 50 Hz AC power supply only. Do not replace the product or supply fuse with a conductor or a fuse exceeding the specified current rating. The electricity meter, wiring, and outlet must be rated for 10 A or higher and must be reliably grounded.
- The power outlet must be located within reach. Ensure the installation provides accessibility to the plug or incorporate a switch in the fixed wiring in accordance with the wiring rules to allow disconnection of the appliance from the supply after installation.
- Use a dedicated power outlet only. Do not connect the appliance to a light fitting. Live, neutral, and earth wires must be correctly and securely connected. The outlet must be CCC-certified or equivalent.
- The grounding terminal must be reliably grounded and kept away from water and gas pipes. If grounding test results are abnormal, have a qualified professional inspect and rectify the issue to prevent damage, electric shock, or other serious hazards.
- Before and after installation, check that the power cord is not trapped, crushed, or damaged. If the power supply cord is damaged, it must only be replaced by a Fisher & Paykel trained and supported service technician.
- Do not remove or modify the grounding pin of the power plug under any circumstances.
- Do not bend, damage, modify, crush, twist, pull, tie or place heavy objects on the power cord or plug. Do not use extension cords or plug adapters.
- In the event of a gas leak, immediately close the gas valve, open doors and windows, and do not insert or remove the appliance power plug or any other electrical plug.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Do not touch or insert/remove the power plug with wet hands. Do not unplug by pulling on the power cord.

SAFETY AND WARNINGS

- Ensure the plug is fully inserted into the outlet and maintains firm contact, and is cleaned of dust regularly, otherwise poor insulation and fire may result.

Cleaning

- Always disconnect the power before cleaning. Do not handle the plug with wet hands.
- Do not use organic solvents or corrosive liquids on the exterior or rubber parts.
- Use a neutral detergent and a soft damp cloth.
- Do not insert hands, feet, or arms under the appliance casing during cleaning.
- Do not use steam cleaners, high-pressure cleaners, hoses, or sprays. Do not spray water directly onto the appliance.

Disposal

- Packaging materials may cause injury. Keep all packaging out of children's reach.
- Dispose of the appliance responsibly at the end of its life or hand over to qualified professionals. Improper disposal may cause environmental harm or other hazards.
- When disposing of this appliance, it is recommended that the door is removed to avoid children getting trapped inside and that the electrical cable is cut off close to the dryer.

Hazardous Substances Declaration Table and Marking


1. Information on the Hazardous Substances declaration for this product is available online. Go to www.fisherpaykel.com/cn/zh_CN/specify and search by appliance type, product name or model.
2. The RoHS mark and the Environment-Friendly Use Period (EFUP) can be identified on the rating label affixed to the product.

Product Quality Certificate

Fisher & Paykel Appliances Ltd hereby declares that:

All models listed in the User Guide are designed in compliance with the applicable Chinese GB product safety standards and manufactured under an established factory quality management system. The model number and manufacture date can be identified on the product rating label. Accordingly, the listed models comply with the requirements of the People's Republic of China Product Quality Law.


PRODUCT OVERVIEW

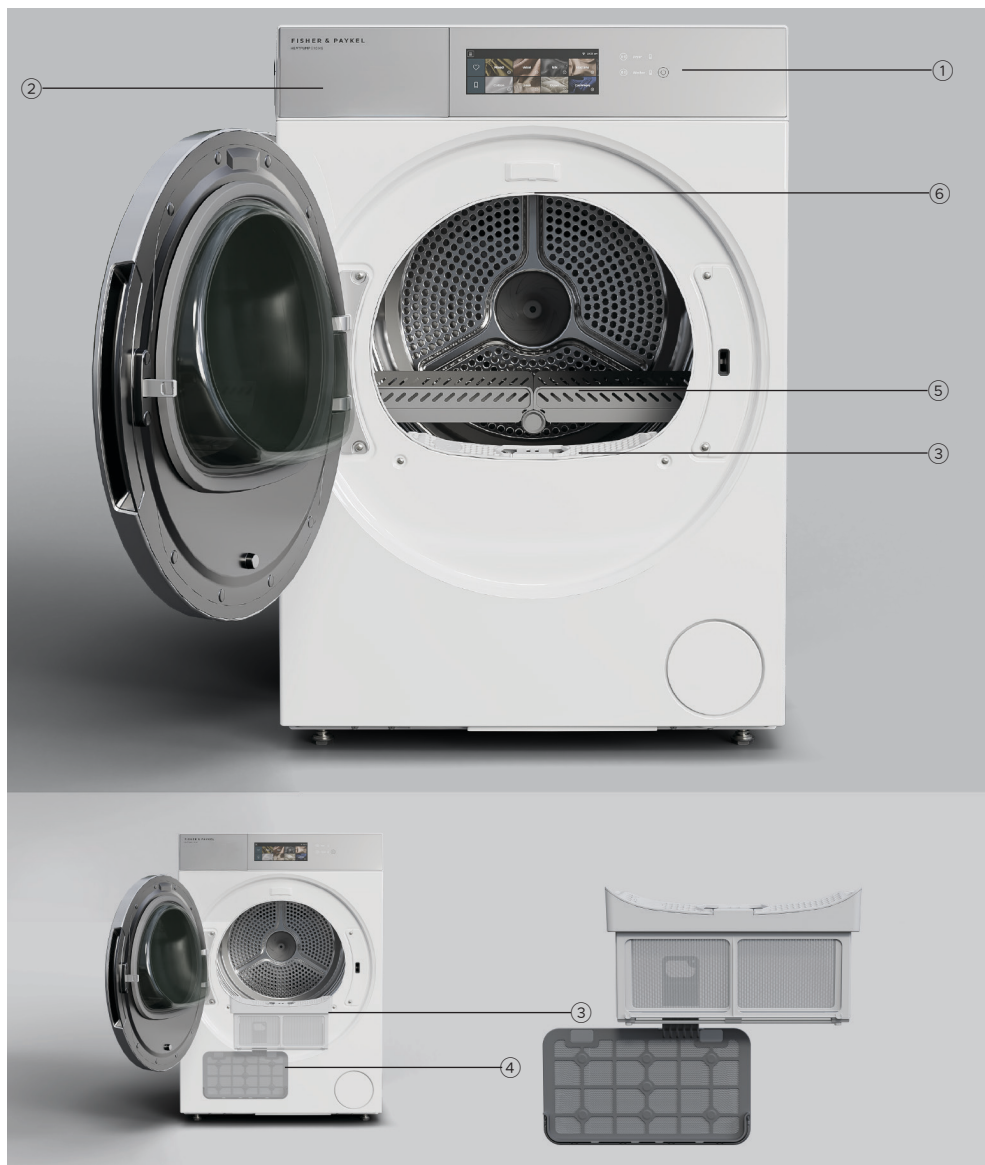

FEATURES AND ACCESSORIES


- | | |
|-----------------|---|
| ① Control panel | ④ Lower lint filter (under lint filter) |
| ② Water tank | ⑤ Drying rack |
| ③ Lint filter | ⑥ Drum light (inside drum) |

CONTROL PANEL

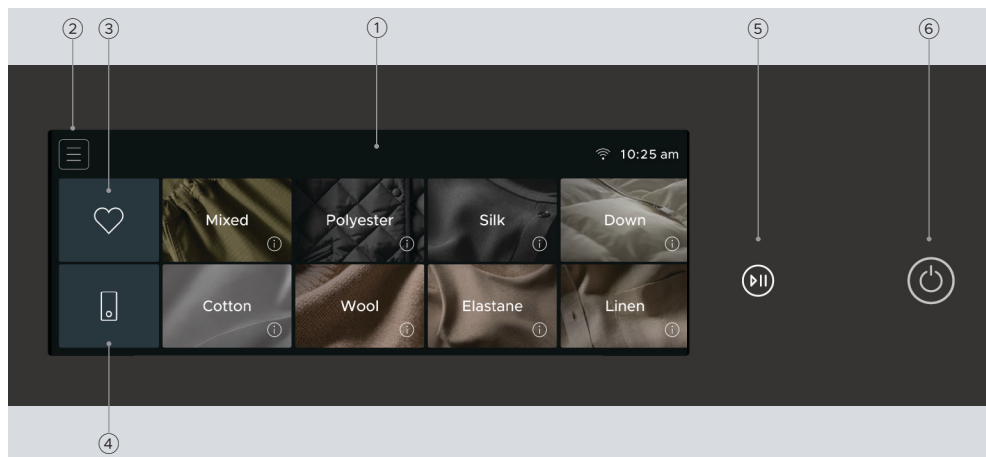

① Touchscreen display	Use to navigate and select cycles, features and settings.
② Menu	Press MENU ≡ to access additional features and settings.
③ Favourites	Press FAVOURITES ♥ to access saved favourite cycles.
④ Remote	Press REMOTE 📱 to connect appliance to your mobile device and operate it via the app.
⑤ Start/Pause	Press to start or pause a cycle or enable Remote mode.
⑥ Power	Press and hold to turn the appliance ON/OFF .

MENU

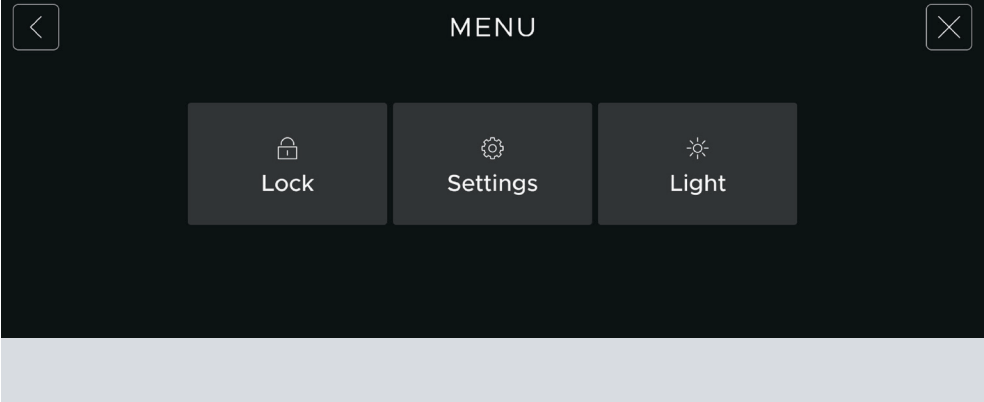

	LOCK	Lock the controls and prevent accidental use.
	SETTINGS	Set and adjust the clock, display, volume and other settings to suit your preferences. See 'Adjust settings'.
	LIGHT	Turn the drum light off or set it to turn on automatically.
	BACK	Go back one level.
	EXIT	Return to the home screen.

GET THE BEST RESULTS FROM YOUR DRYER



Download the app for a smarter experience

- Access extra features and information
- Track and run cycles from your phone
- Customise your favourite cycles
- Get the latest software updates

Heat pump versus vented dryer

Your heat pump dryer is different to a traditional vented dryer. Heat pump technology dries your items at a lower temperature than a vented dryer to ensure gentle, energy-efficient fabric care without overdrying your items.

 
Get to know your dryer

Take the time to become familiar with cycle selections and how they suit your items. Save your favourite cycles for quick and easy access on the product or in the app, and clean and maintain your dryer to keep it performing at its best.



Recognising post-dryer feel

Items may feel slightly damp when first removed from a heat pump dryer, but they will feel completely dry within a few minutes and are ready to wear immediately. If you prefer your items to feel completely dry as soon as the drying cycle ends, you can adjust the dryness level. See 'Select Dryness'.



Finishing air-dried items in the dryer

Use a **TIME DRY** cycle for at least 30 minutes to finish partially dry items. This allows time for the dryer to reach temperature.



Loading items directly from the washing machine

Make sure items have been through a spin cycle to remove excess water before placing them in the dryer. Overly wet items will extend the drying cycle and may affect drying performance.

UNDERSTANDING FIBRE TYPES

Every cycle starts with fibre type

Each fibre type responds differently to washing and drying. This appliance uses a fibre-led system and precision sensing to dry your items, so selecting the right fibre type for each load is key to setting the best cycle each time.

Treat for the most delicate fibre

Items may be a blend of multiple fibres — some more delicate than others. The care label on an item will tell you what fibre or fibres the item is made of and how to care for it.

Select the fibre type on your dryer that applies to the most sensitive or delicate fibre in the blend, even if it is only a small percentage.

Identify delicate fibres

This table helps identify the most delicate or sensitive fibres commonly found on care labels. It also offers alternative cycle suggestions for most specialist fibres. Recommendations may not suit all items — always check your care label first.

SENSITIVITY	COMMON FIBRES	FIBRE TYPE
High	Cashmere, Angora, Mohair	Cashmere
	Down	Down
	Silk	Silk
	Wool, Merino, Lambswool	Wool
	Elastane, Spandex, Lycra	Elastane
	Viscose, Bamboo, Rayon, Modal	Viscose
	Lyocell, Tencel™	Lyocell
	Acrylic	Acrylic
	Linen	Linen
	Hemp	Hemp
	Ramie	Ramie
	Nylon, Polyamide	Nylon
	Polyester	Polyester, Mixed
	Cotton	Cotton, Mixed
Low		

SORT YOUR ITEMS


Sorting your items well is essential for taking care of your clothes and getting the best results from your dryer. Follow these steps every time you use the dryer:



1. Check each care label to see the fibre composition and how each garment should be dried. Always follow the care label advice.



2. Sort items into loads of similar fibre, durability and item type.

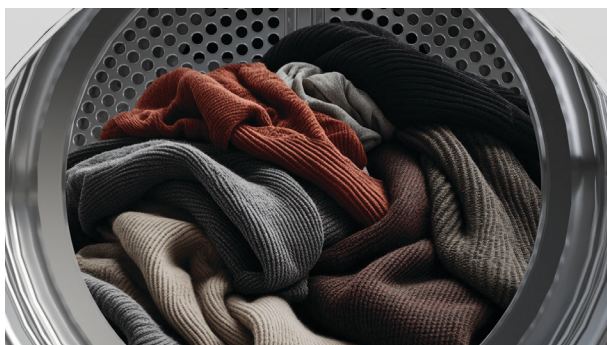

3. Check pockets, secure fasteners and untangle items before loading. Allow enough room for items to tumble freely.

LOAD THE DRYER

Maximum load size

The maximum load size changes based on the type of items in a load. Follow the guide below to avoid overfilling the dryer and to maintain good drying performance.



ITEM TYPES		MAX LOAD SIZE
Mixed, Cotton, Polyester	Ultra delicate	Extra small
	Delicate	Small
	Moderate, Durable	Large
	Outdoors	Small
	Denim, Towels, Sheets, Bulky, Sportswear	Medium
	Soft toys	4 toys
	Shoes	2 pairs
Wool	Ultra delicate, Delicate	Extra small
Elastane	Ultra delicate	Extra small
	Delicate	Small
	Moderate	Medium
Down	Ultra delicate	Extra small
	Delicate	Small
	Bulky	Medium
	Quilts & duvets	1 item
Silk	Ultra delicate	Extra small
Linen	Ultra delicate	Extra small
	Delicate	Small
	Moderate	Medium


LOAD THE DRYER

Nylon	Ultra delicate	Extra small
	Delicate	Small
	Outdoors	Small
Viscose, Acrylic, Hemp, Lyocell, Ramie	Ultra delicate	Extra small
	Delicate	Small
	Moderate	Small
Cashmere	Ultra delicate	Extra small
Other Treatments	Rack dry	1 or 2 items
	Steam refresh	1, 2 or 3 items
	Sanitise dry	Medium
	Allergy care	Medium to large

SET A CYCLE


Your dryer has specialised cycles for specific fibre types. Start by selecting a fibre type, then select an item type based on durability or specific items, such as sheets or towels, and the required treatment. You can also adjust additional settings for dryness and time. The available cycle options may vary depending on the fibre type you select.

See 'Cycle selections' for details.

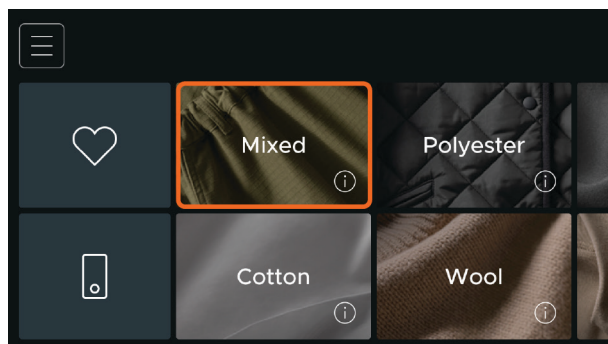


1. Press and hold **POWER**  to turn the dryer on, then select a fibre type.

Press **INFORMATION**  for a description of each fibre.

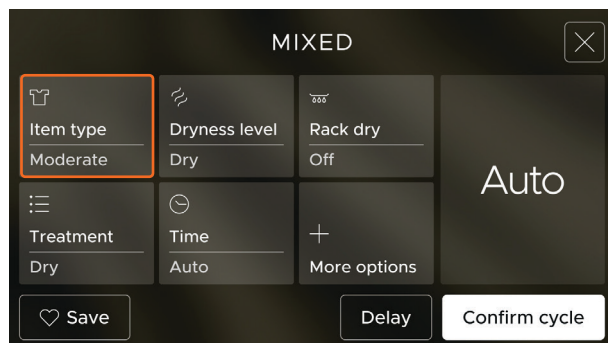


2. Press **ITEM TYPE** to access the options and see a description and examples for each type. Scroll to select an item type.

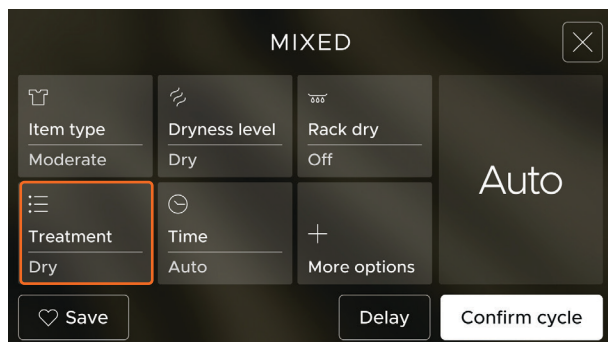

3. Press **TREATMENT** to access the options and descriptions. Scroll to select a treatment.

SET A CYCLE

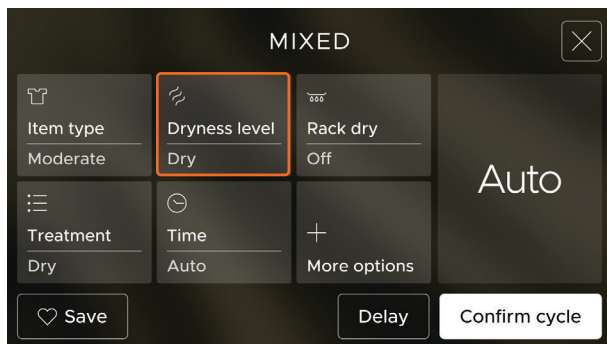


4. Select a **DRYNESS LEVEL** or select **RACK DRY** for items that cannot be tumbled.

See 'Fit drying rack' for how to fit the rack.




5. Set a drying duration or Auto.

Press **MORE OPTIONS** to access additional drying options. See 'Drying options' for details.

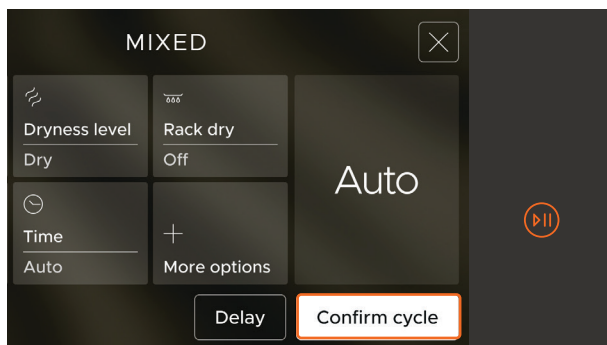

6. Press **CONFIRM CYCLE**, then press the **START/PAUSE** button to begin the cycle.


SET A CYCLE

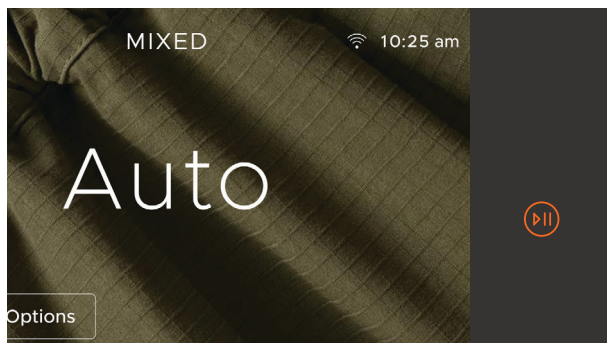

Pausing the cycle

Press the **START/PAUSE** ▷|| button to pause the cycle if you want to add or remove an item.

Press **RESUME**, then the **START/PAUSE** ▷|| button, to resume the cycle.

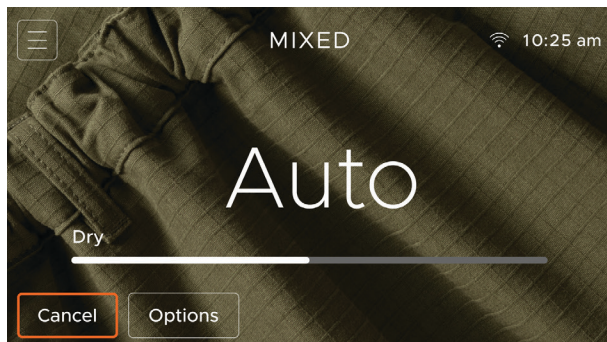

Cancelling the cycle

Press **CANCEL** to cancel the cycle.

Remove items immediately and spread them out to cool. Take care as the drum and items may be hot.

DRYING OPTIONS

Crease free


After the cycle is complete the load will continue to tumble periodically to help reduce creases. Crease free will remain active for up to 8 hours or until cancelled. To cancel, touch the screen or open the door.

Iron ready alert

Set an alert for when the load reaches the iron ready dryness stage. Pause the cycle to remove items that do not need further drying. Resume the cycle to continue drying the remaining load.




1. Press **MORE OPTIONS** to access additional cycle options.

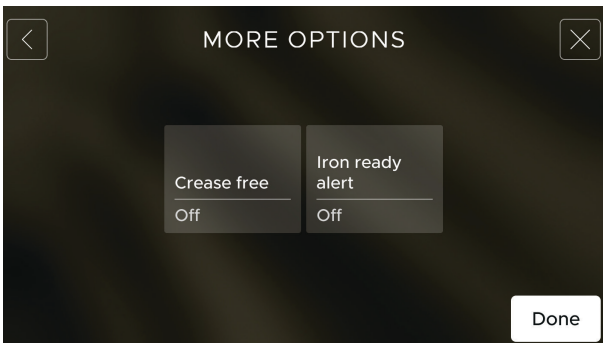


2. Select an option and follow the onscreen instructions to set it.
Press **DONE** to confirm.

SET DELAYED START


DELAY allows you to schedule a cycle to begin at a later time. You can set a time on the dryer or start a cycle remotely through the app.

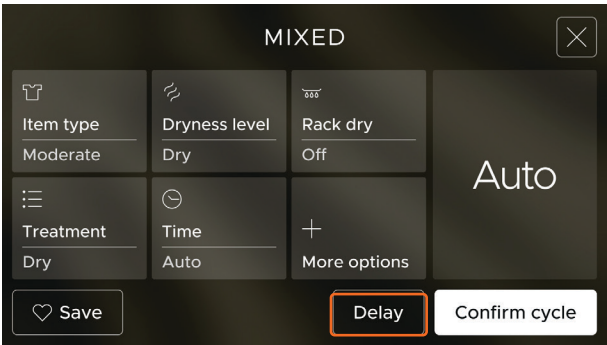

1. After setting the drying cycle, press **DELAY** to open the Delay screen, then press **SET START TIME** and set a start time.

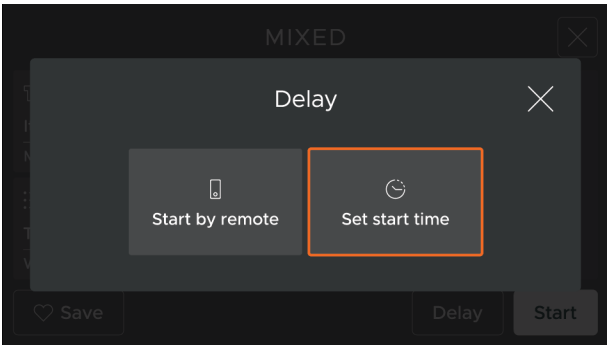

2. Press **SET START TIME** and follow the onscreen instructions to set a delayed start time.

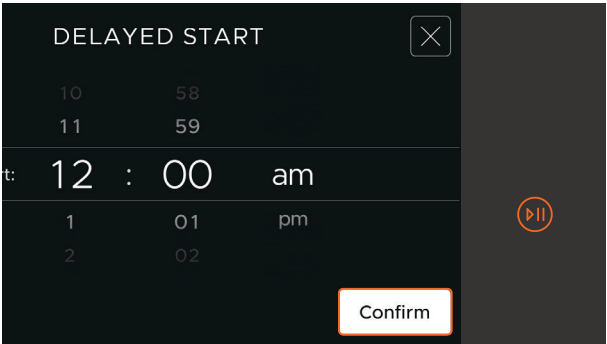

3. Press confirm to save the new start time, then press the **START/PAUSE** button.

FIT DRYING RACK

Fit the drying rack when you use the **RACK DRY** option. The drying rack is designed for items that cannot be tumbled. When **RACK DRY** is selected, you have to set a cycle duration, so **DRYNESS LEVEL** is not available. The drying rack folds for easy storage.



1. Fold the rack slightly and place it inside the dryer drum.




2. Press down on the centre of the rack so it lies flat and level. Follow the onscreen instructions to confirm the rest of the settings and begin the cycle.




3. When drying sneakers, check them throughout the cycle. Save as a Favourite if intending to use this cycle regularly.

ADJUST SETTINGS

Adjust the appliance settings to suit your preferences.

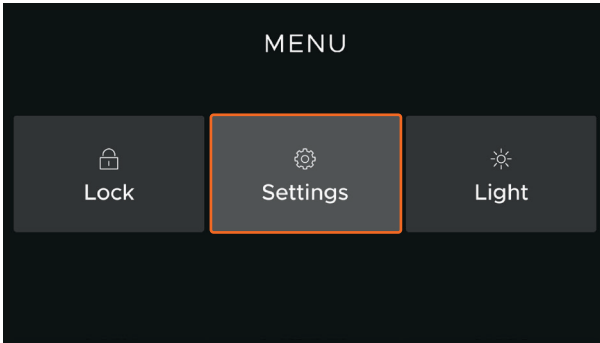


Go to **MENU**  and select **SETTINGS**.

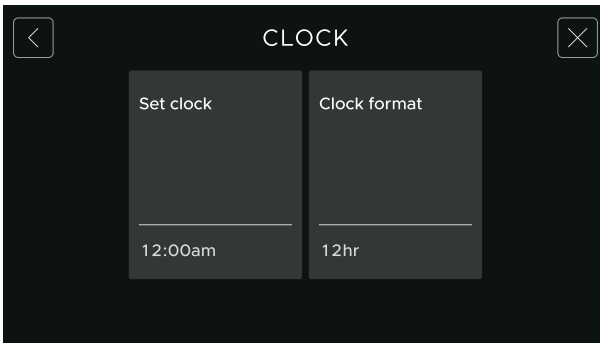

Clock

Set time and format.


Time updates automatically when connected to Wi-Fi.

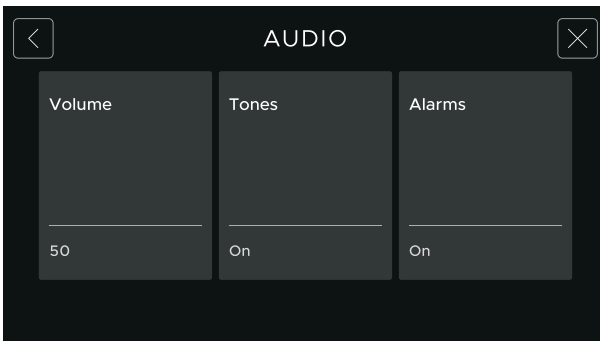

Audio


Set volume or turn sounds on or off.

ADJUST SETTINGS

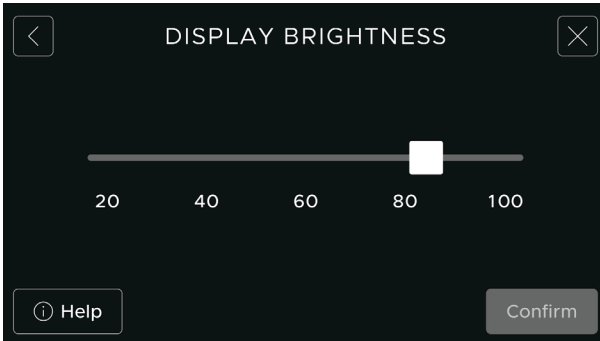


Display

Adjust the brightness of the display screen. Set a lower brightness to improve energy efficiency.

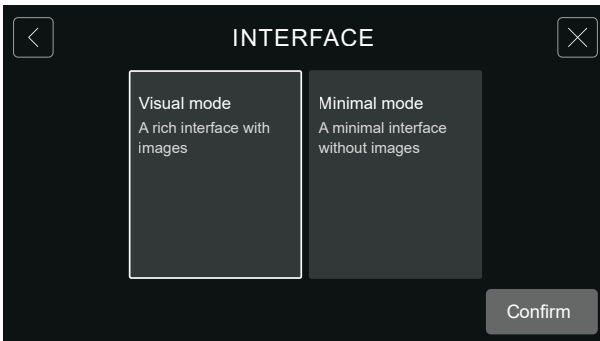

Interface

Set visual or minimal modes on the display.

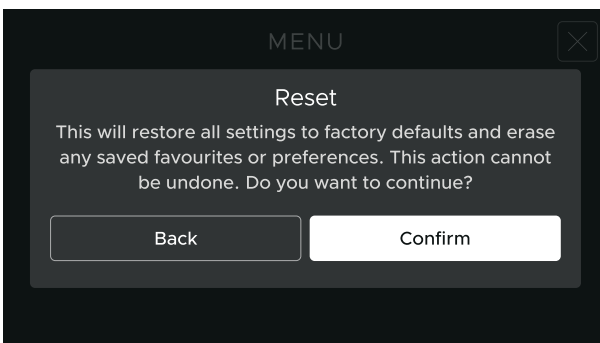


Factory default reset

Restore all settings to factory defaults.


This action cannot be undone.

SAVE FAVOURITE CYCLES


Save your favourite cycles for a quick start next time you use the dryer. Favourites comes with preset **DELICATE REFRESH** cycle, and you can save up to 15 more on the appliance and manage them in the app.

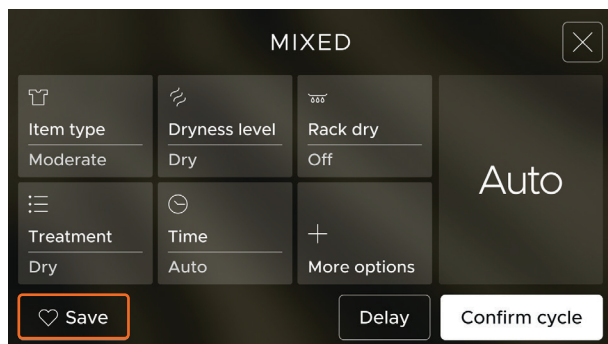

1. Press **SAVE** ♥ from the cycle settings screen, from the Options menu or at the end of a cycle to add the cycle to Favourite.

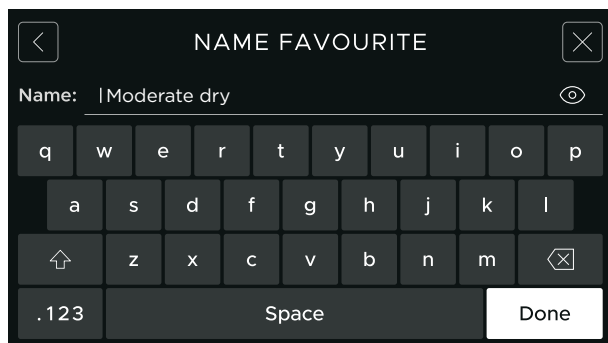

2. Create a custom name for your cycle, or skip that step and save it with a default name.

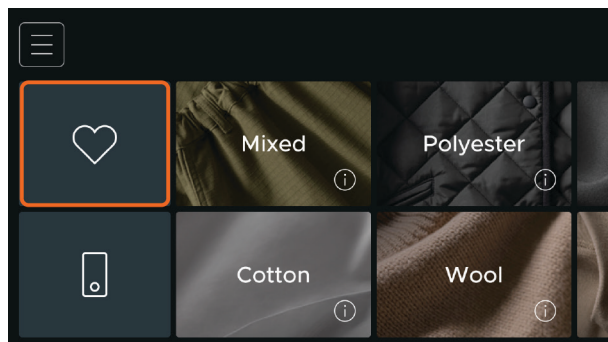


3. Press **FAVOURITE** ♥ on the home screen to access your saved favourite cycles.

SAVE FAVOURITE CYCLES



4. Select a favourite cycle from the Favourites menu.

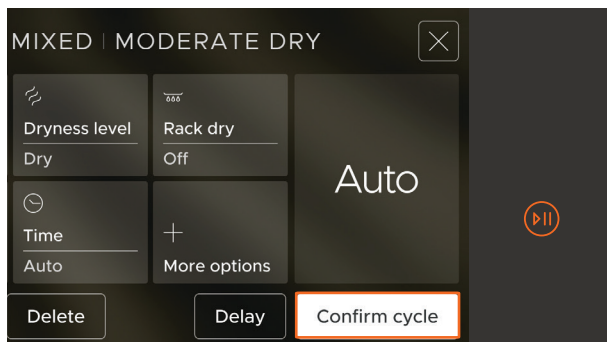

5. Press **CONFIRM CYCLE** to, then press the **START/PAUSE** button to start the wash cycle.

FIBRE TYPE

Select the specific fibre type that matches the load or choose the fibre type that applies to the most delicate fibre. The drying cycle will adjust to suit. See 'Understanding fibre types' for guidance about which fibre types are the most delicate.

Mixed

For everyday mixed loads with a variety of fibres, and for cotton-polyester blends commonly used in everyday clothing.

Cotton

For 100% cotton items, cotton items, cotton blends and compatible fibre types. Cotton is a natural fibre that is soft, breathable and absorbent. Cotton is very versatile and can be used for everything from t-shirts and undergarments to towels, sheets and denim.

Polyester

For 100% polyester items and compatible fibre types. Polyester is a synthetic fibre that is durable, wrinkle resistant and quick drying. It is widely used in everyday clothing for easy care and long-lasting wear.

Wool

For 100% woollen items and wool blends. Wool is a natural fibre that comes from sheep, goats and other mammals, and is warm, insulating and moisture wicking. It is commonly found in suits, sweaters and winter clothing for its warmth and comfort.

Woolmark Black

This cycle meets the Woolmark requirements for drying items labelled 'machine washable'.

Woolmark Blue

This cycle meets the Woolmark requirements for drying woollen items labelled 'hand wash only'.

Silk

For 100% silk items and silk blends. Silk is a natural fibre produced by silkworms that is soft, smooth and luxurious, and requires specialised care.

Elastane

For items containing 10-50% elastane fibre, also known as spandex. A stretchy and resilient fibre, elastane provides ease of movement in close-fitting items and is often found in activewear and leggings.

Down

For items containing down fill. Down is soft and insulating and is harvested from the undercoat of ducks or geese.

CYCLE SELECTIONS

Linen

For items containing linen fibre. Linen is a natural fibre made from the flax plant and is strong, breathable and moisture wicking.

Nylon

For items that contain majority nylon fibre. Nylon is a synthetic fibre that is strong and quick drying. Nylon is commonly found in activewear and outerwear due to its strength and durability.

Viscose

For items containing viscose fibre, also known as rayon. Viscose is a soft and breathable fibre made from wood pulp, and is often found in dresses and blouses due to its draping properties and silky feel.

Acrylic

For items made from acrylic fibre. Acrylic is a synthetic fibre that is lightweight and warm, and often used in knitwear.

Hemp

For items containing hemp fibre. Hemp is a natural fibre made from the hemp plant and is strong, breathable and absorbent. Hemp is often found in casual and sustainable clothing lines.

Lyocell

For items containing Lyocell fibre. Lyocell is a soft, breathable and absorbent eco-friendly fibre made from wood pulp

Ramie

For items containing ramie fibre. A strong and absorbent natural fibre made from the nettle plant, ramie is often found in summer garments.

Cashmere

For items containing cashmere wool fibre. Cashmere is found in items like sweaters and scarves, and offers luxurious softness and warmth.

ITEM TYPE

Item type relates to the durability of items in your load in terms of fabric thickness.

Dry garments and items of similar thickness together to prevent some items becoming over-dried while others are still damp.

Ultra delicate

For items that are very fragile, needing extra gentle care. Ideal for lace, lingerie and fine knitwear.

CYCLE SELECTIONS

Delicate

Light and easily damaged or torn items like dress shirts, blouses, dresses and other items.

Moderate

Everyday items like t-shirts, shirts, lined dresses, shorts, pants and denim.

Durable

Strong and resilient everyday items like workwear and outerwear.

Denim

Items made of denim or stretch denim such as jeans, jackets and skirts.

Towels

High absorbency towelling fabric items like bath, beach and hand towels.

Sheets

Items such as bed sheets, pillow cases and duvet covers.

Bulky

Cotton/Mixed/Polyester - Thick and insulating items like blankets, quilts, comforters and duvet inner.

Down - Smaller thick and insulating items like jackets and sleeping bags.

Sportswear

Durable sportswear items made from synthetic fibre blends.

Quilts and duvets

For larger thick and insulating items like quilts, comforters and duvet inner.

Outdoors

For outdoor items made from weather-resistant materials, such as rain jackets, windbreakers and pants.

Soft toys

For plush items filled with soft stuffing such as soft toys. This cycle is suitable for up to four items at a time.

Shoes

For sneakers and sports shoes with textile or canvas uppers. For best results, use this item type for up to two pairs at a time.

CYCLE SELECTIONS

TREATMENT

Dry

Designed for everyday drying.

Rack dry

For items that cannot be tumbled. This option requires the drying rack to be fitted.

Steam refresh

Designed to refresh dry items using steam and tumbling to reduce creases and odours. For best results use the cycle for one or two items at a time. Ideal for items like dress shirts to refresh before ironing.

Sanitise dry

High temperature drying to reduce bacteria. Ideal for sanitising items that can handle high temperatures like towels and sheets. Not suitable for delicate items.

Allergy care

Uses sustained higher temperatures to reduce allergens like dust mites and pollen. Ideal for helping to manage allergies or sensitive skin.

METHOD

You can select a drying method that automatically ends the cycle when the load reaches the selected dryness level or after a set duration.

Auto

Ends the cycle automatically when the load reaches the selected dryness level. You will be prompted to select a dryness level for the next step.

Not available for Wool cycle.

Time

Ends the cycle after a set duration. You will be prompted to set a drying duration for the next step. Dryness level is not available with this option.

DRYNESS LEVEL

Dryness options let you select a dryness level that prepares items for storing, wearing or ironing. Sensors in the dryer can detect remaining moisture in the load and will end the cycle when the load reaches your preferred dryness level.

Not available if drying method is set as Time.

CYCLE SELECTIONS

Iron ready

Leaves some moisture in the load to help reduce wrinkles and prepare items for ironing.

Dry

Dries the load thoroughly leaving items ready to wear.

Dry plus

Dry plus is ideal for thicker fabrics or absorbent items that might need extra drying time.

Extra dry

An ultra-dry option for thick or heavy items. Ideal for thick or heavy items, or items that are going to be placed in storage.

.....


WI-FI CONNECTION AND REMOTE MODE

Connect your appliance to your home wireless network to access extra features, receive updates and operate the appliance remotely using the app.




Connect to Wi-Fi

1. Go to the menu and select **SETTINGS**, **WI-FI**, then **WI-FI SETUP**.

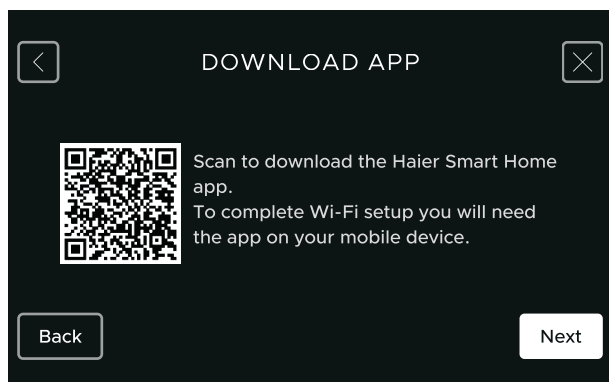


2. Scan the QR code or search “海尔智家” in your device's app store to download the app. Once you have downloaded the app or if you already have it installed press **NEXT**.

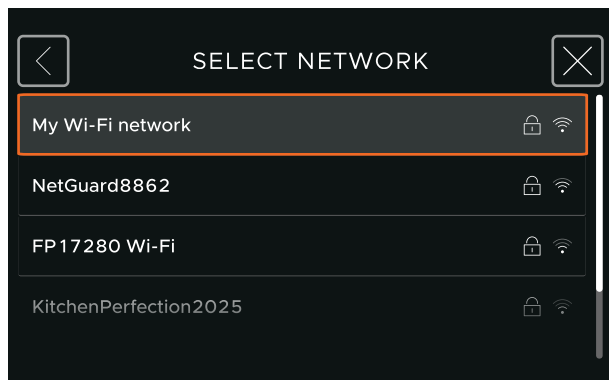


3. Select a Wi-Fi network and enter the password, then press **DONE** to connect to the network.

WI-FI CONNECTION AND REMOTE MODE

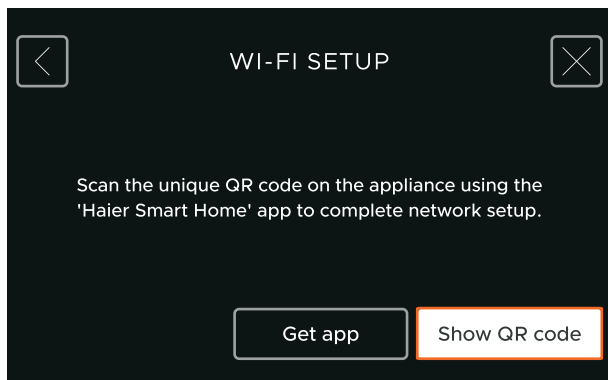


4. To complete the connection, press **SHOW QR CODE** and scan the unique code using the app.

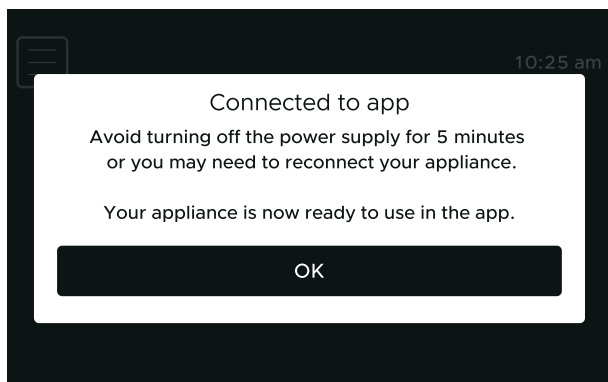

After you have finished connecting your appliance, avoid turning the power supply off for 5 minutes or you may need to reconnect your appliance.


WI-FI CONNECTION AND REMOTE MODE

After connecting your appliance to Wi-Fi, you can use Remote mode to manage cycles in the app. Add items to the drum before enabling Remote mode and ensure the door is fully shut. For safety reasons, opening the appliance door will cancel Remote mode.

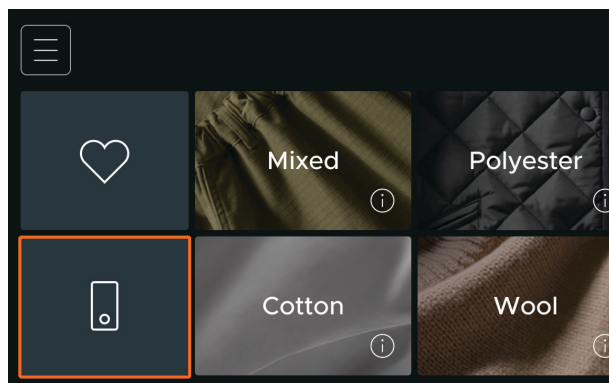


Enable Remote mode from the home screen

Press **REMOTE** , then **ENABLE**. Press the **START/PAUSE**  button to enable Remote mode and manage cycles in the app.

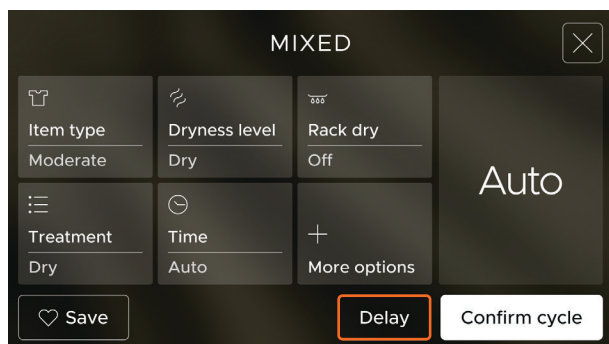


Enable Remote mode during cycle setup

1. Press **DELAY** in the cycle setting screen.

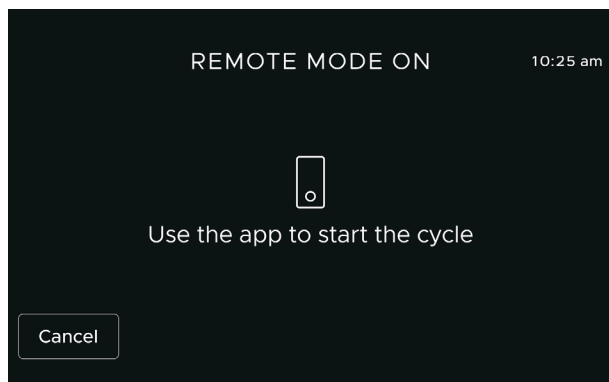


2. Press **START BY REMOTE**, then press the **START/PAUSE**  button to enable Remote mode and manage cycles in the app.

WI-FI CONNECTION AND REMOTE MODE

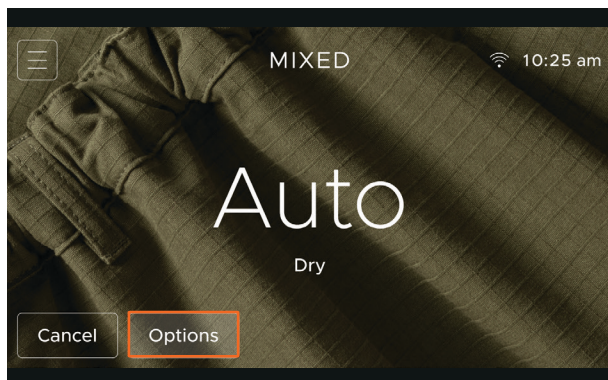

Enable Remote mode while the cycle is running

After starting a cycle, press **OPTIONS**, then **REMOTE MODE** to turn Remote mode on or off.

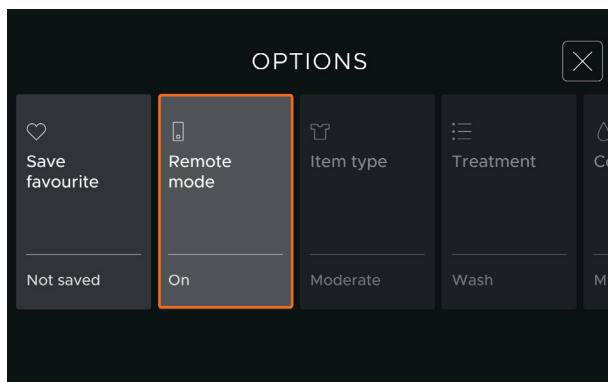


Cancel Remote mode

If the cycle is already running, press **OPTIONS**, then **REMOTE MODE** to turn Remote mode on or off.

Opening the appliance door at any point before or after starting a cycle will also cancel Remote mode.

Reset Wi-Fi to disconnect your appliance or to restart the setup process. This is useful for troubleshooting connectivity issues or if you change your home Wi-Fi network or password.

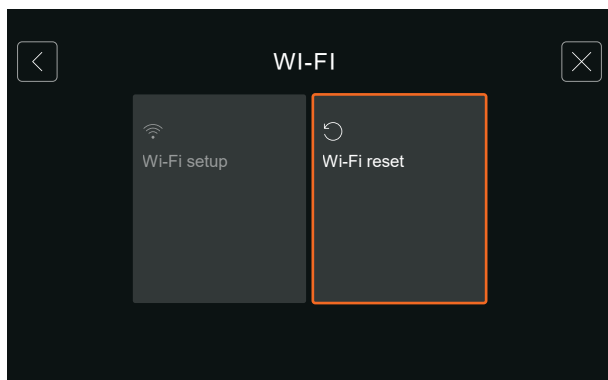

Reset Wi-Fi

Go to **SETTINGS** and select **WI-FI**, then **RESET** to disconnect.

CLEAN AND MAINTAIN THE DRYER

Surfaces and accessories

Wipe with a damp cloth and mild detergent, then dry with a clean, lint-free cloth. We do not recommend using the following cleaning products as they may cause damage:

- Plastic or stainless steel scouring pads
- Abrasive, solvent, household cleaners
- Acid or alkaline cleaners
- Hand washing liquids or soap
- Stainless steel cleaners or polishes
- Laundry detergents or disinfectants

Inside the dryer

Check and clean the inside of the drum regularly with a damp cloth to remove any dirt or lint. Do not leave any metal objects in the drum as these may cause rust.

Sensors

The sensors are located behind the lint filter and detect whether the laundry is dry or not. Clean the sensors regularly to maintain drying performance.




Cleaning the sensors

Wipe clean with a soft, damp cloth.

EMPTY THE WATER TANK


Water collects in the water tank at the top left of the dryer during a drying cycle, unless the drain hose is set up to drain water automatically.

Empty the water tank before or after every load. Never run the dryer without the water tank in place unless the drain hose is installed. Refer to the installation guide for instructions if you want to install the drain hose.

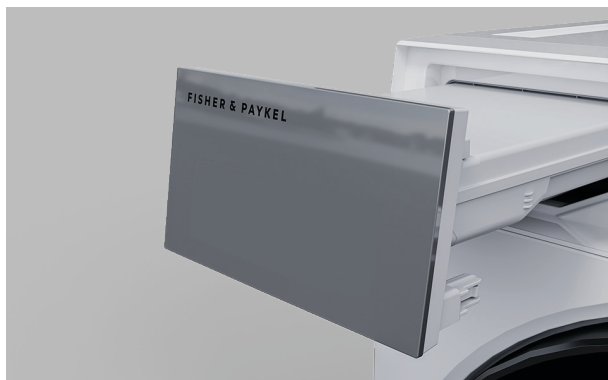

1. Push the water tank to open it, then pull it out.

The tank can be heavy when full. Support the tank and keep it level to avoid spilling water.

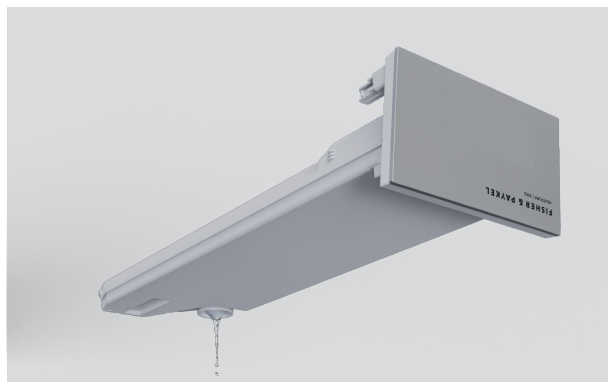

2. Empty the water tank, then place it back in the dryer.

CLEAN THE LINT FILTER

The **CLEAN LINT FILTER** reminder will pop up at the end of a cycle. Remove and clean the filter each time you use the dryer as blocked filters will reduce drying performance, and lint can become a fire hazard if it builds up in or around your dryer.



1. Open the dryer door and remove the lint filter.



2. Open the filter and separate the parts. Use your hand or a soft cloth to remove the lint from both parts.



3. Refit the internal filter part to the outer part, then close the filter and place it back in the dryer.

CLEAN THE LOWER FILTER


The lower lint filter sits below the lint filter. The **CLEAN LOWER LINT FILTER** reminder will pop up after every 10 cycles to prompt you to remove and clean the lower filter. Clean it when the reminder pops up, or when you notice the drying cycle is taking longer than usual. This will help to maintain drying performance.



1. Remove the lint filter to access the lower lint filter.



2. Remove the lower lint filter, open it and take out the foam.

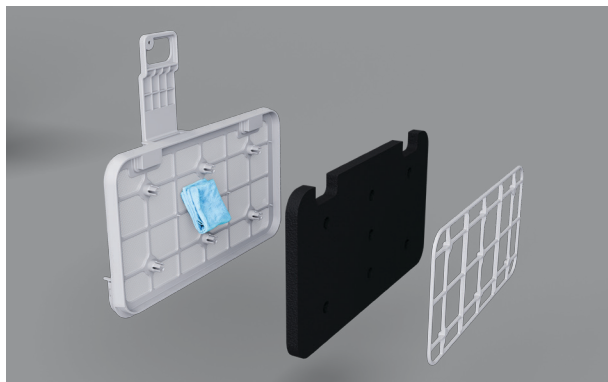

3. Use a cloth or vacuum cleaner to remove lint, then refit the foam to the mesh. Place lower filter back into the dryer, and refit the lint filter.

TROUBLESHOOTING

General use

Why will the dryer not turn on?

- No power. Check the dryer is connected to the power supply.
-

Why can't I see all the cycle settings and features on my dryer?

- Software needs to be updated. Connect your dryer to the app to get the latest updates and access extra features. See 'Wi-Fi connection and remote mode'.
-

Why is the display not responding?

- The appliance needs time to start up when first powered on. This can take up to 30 seconds.
 - Dryer needs to be reset. Press and hold **POWER**  to turn the dryer off. Wait a few seconds, then turn the dryer back on. If the problem persists, disconnect the dryer from the power supply, wait a few seconds, then reconnect to turn the dryer on.
 - Dryer may require a software update. Connect dryer to Wi-Fi and check for updates in the app.
-

Why is the dryer not starting?

- Dryer door not closed. Check nothing is obstructing the door, and close it firmly.
 - Water tank is full or not correctly in place. Empty the water tank and refit it.
 - Dryer is overloaded. Remove some items and restart the cycle.
 - Delayed start is set. See 'Setting Delayed start'.
 - The controls are locked. Press and hold the screen to unlock.
 - There is a fault. See 'Fault codes'.
-

Why is the dryer stopping and starting?

- The crease free setting is turned on. Turn off in Options. See 'Drying options'.
-

Why did the dryer stop mid-cycle?

- Water tank is full. Empty the water tank.
 - Drying cycle has been paused. Press **RESUME**, then **START/PAUSE**  to resume.
 - The door is open. Close the door and press **RESUME**, then **START/PAUSE**  to resume.
-

Why is the dryer vibrating or making noises?

- Dryer is overloaded. Press **START/PAUSE**  to pause the cycle and remove some items.
 - Dryer is not level. Refer to installation guide for instructions about levelling the dryer.
 - The cycle has ended. Items can be removed.
 - The module has fallen into the load. Pause the dryer and find the module. Refit it inside top-right of the drum so it snaps into place. Resume the cycle.
 - Dryer has a fault. See 'Fault codes'.
-

TROUBLESHOOTING

Why do the items feel damp after a drying cycle?

- Items are just warm and will feel dry once they have cooled down.
 - Incorrect drying settings for the load. Check settings and adjust if required.
-

Why is the drying cycle taking so long?

- Dryer is overloaded. Pause the cycle and remove some items.
 - Items are tangled. Untangle the items and resume the cycle.
 - Lint filters need to be cleaned. Remove and clean the lint filters.
 - Incorrect drying settings for the load. Check the selected fibre type, item type, treatment, method and dryness, and adjust if required.
 - Load was overly wet at the start of the cycle. Remove from dryer and run on a spin cycle in the washing machine to remove excess water.
 - Water tank is full. Empty the water tank.
 - Items are very large. Large items, like duvets, require longer drying times.
 - Dryer is not draining. (Plumbed set-up only.) Check the drain hose for blockages and correct if possible. If the problem persists contact Customer Care.
 - Air intake is blocked. Check that nothing is covering the air intake.
 - Air temperature in the space surrounding the dryer is too hot, humid or cold. The dryer is less efficient in very hot or cold conditions. Ensure the dryer is installed in a well-ventilated space. Do not operate this dryer inside a cupboard.
-

Why is there lint on the load after a drying cycle?

- The lint filters need to be cleaned. Remove and clean the lint filters.
 - Lint-shedding items are mixed in a load with lint-collecting items. See 'Sort your load'.
 - Clothes are over-dried and attracting lint. Use **AUTO** method to sense when items are at the appropriate dryness level.
-

Why is the fabric damaged after a drying cycle?

- Cycle settings not appropriate for the load type. Follow instructions on care labels and sort items accordingly. See 'Sort your load'.
 - Metal parts on the items or in the load may catch on fabric. Always fasten zips and other clasps before placing items in the dryer.
-

Why do items in the dryer keep getting tangled?

- Loads not separated before going in the dryer. Load items individually and try separating larger items from smaller items.
 - Load size is too large. Try drying smaller loads. See 'Sort your load'.
 - Cycle settings not the best option for the load type. Try **SHEETS** for sheets, duvet/duona covers and **TOWELS** for towels.
 - Delicate items not separated. Dry pantyhose, bras and stockings in a mesh bag.
-

Why is the dryer beeping?

- The cycle has ended. Items can be removed.
- Dryer has a fault. See 'Fault codes'.

TROUBLESHOOTING

Why do items in the dryer keep getting creased?

- Items have been left in the dryer after the cycle ended. Select options, and turn **CREASE FREE** on at the start of the cycle to minimise creasing.
 - Dryer is overloaded. Pause the cycle and remove some items.
 - Dryness level is not appropriate for the load. Select a lower dryness level.
-

Why is dye transferring onto my clothes?

- Items not sorted before going in the dryer. Separate white and coloured items into separate loads.
 - Wet items left sitting in the dryer before the drying cycle.
-

Why is the dryer not draining?

- Water tank is not correctly fitted. Check it is firmly in place.
 - Drain hose or drain is blocked. (Plumbed set-up only.) Check the drain hose and drain for blockages and correct if possible. If the problem persists contact Customer Care.
 - Drain hose not connected correctly. See the installation guide for instructions.
-

Why is water coming from under the dryer?

- Water tank is full. Empty the water tank.
 - Water tank is not correctly fitted. Check it is firmly in place.
 - Dryer door not closed. Check nothing is obstructing the door, and close it firmly.
 - Drain hose or drain is blocked. (Plumbed set-up only.) Check the drain hose and drain for blockages and correct if possible. If the problem persists contact Customer Care.
 - Drain hose not connected correctly. See the installation guide for instructions.
-

Why is there water in the dryer drum after a cycle?

- Water tank is full. Empty the water tank.
 - Air temperature in the space surrounding the dryer is too hot, humid or cold, and water may be recondensing in the dryer. Ensure the dryer is installed in a well-ventilated space. Do not operate this dryer inside a cupboard.
-

Can I dry my sneakers in the dryer?

- Yes, sneakers can be dried using the drying rack and **RACK DRY**. See 'Fit drying rack'.
-

How do I refresh my shirts?

- Select the relevant fibre type, and set the item type to **MODERATE** and the treatment to **STEAM REFRESH**. Suitable for up to 2 items at a time.
-

Do I need to use the Sanitise cycle on my dryer if I used the Sanitise cycle on my washer?

- No. You only need to use the **SANITISE** cycle on one of your products to sanitise a load.
-

FAULT CODES

How do I know if there is a problem?

Your dryer will beep and an alert will show in the display.

What to do

First try to fix the issue and clear the alert according to the onscreen instructions or the steps in the table below.

If the problem persists

- ① Note down the fault code.
- ② Contact Customer Care or a Fisher & Paykel trained and supported service technician. Refer to the Service and Warranty booklet for contact details.

ALERT	WHAT TO DO
LOCKED	Press and hold the screen to unlock the controls.
CHECK FILTERS	Clean both lint filters and check they are not damaged. Check there is nothing else trapped in the filters that may be blocking the air flow.
WATER TANK FULL	Check if the water tank is full. Empty the water tank. If using the drain hose, check whether the water tank or drain hose is blocked. Check the drain hose is still attached at the back of the machine, and is not kinked or squashed.
CLOSE DOOR	Ensure the door is firmly shut, then press ► to resume the cycle. Try opening and closing the door again. Reposition the load, ensuring items are not in the way of the door.
COOLING DOWN	Wait for the dryer to cool. The cycle will resume once the drum has cooled.
ROOM TEMP LOW	The room temperature is too low for the dryer to work effectively. Ensure that the room temperature is above 5°C to avoid loss of efficiency.
ROOM TEMP HIGH	The room temperature is too hot for the dryer to work effectively. Wait for environment to cool before resuming.
MAX TIME REACHED	There are a number of reasons the maximum cycle time might be reached. Refer to 'Troubleshooting'.

COMPLIANCE INFORMATION

This product complies with the following standard:

Q/0212HRE 024 Tumble dryers for domestic use

Q/0212HRE 045 Household Clothes Drying and Care Machines

This equipment contains a radio transmitter module with CMIIT ID: 26J44B72C392.

Woolmark Wool Care

Woolmark Black

The wool drying cycle of this machine has been tested and approved by The Woolmark Company for the drying of machine washable wool products provided that the products are washed and dried according to the instructions on the garment label and those issued by the manufacturer of this machine. M2445.



The maximum capacity of the Woolmark Wool Care cycle is 1kg.

Approved cycle: WOOL, Item Type: DELICATE, Treatment: DRY, Method: TIMED.

Woolmark Blue

The wool drying cycle of this machine has been tested and approved by The Woolmark Company. The cycle is suitable to dry wool garments which are labelled "hand wash" provided that the garments are washed in a Woolmark endorsed hand washing cycle and dried according to the instructions issued by the manufacturer of this machine. M2443.



The maximum capacity of the Woolmark Wool Care cycle is 1kg.

Approved cycle: WOOL, Item Type: ULTRA DELICATE, Treatment: DRY, Method: TIMED.

SERVICE AND WARRANTY



To access your Warranty and Service Guide

Scan the QR code with your smartphone to access your warranty and book a service, or view online at <https://www.fisherpaykel.com/cn/help-and-support/warranty-information>

This product has been designed for use in a domestic (residential) environment. This product is not designed for any commercial use. Any commercial use by the customer will affect this product's Manufacturer's Warranty.

If you need assistance:

Call the Fisher & Paykel Customer Care Centre and talk to one of our Customer Care consultants.

Telephone: 4006 408 777

Website: www.fisherpaykel.cn

Manufacturing address:

Shanghai Haier Laundry Electric Appliance Co., LTD,

No. 1, 2 and 3, Lane 751, Shuangjin Road, Shihudang Town, Songjiang District, Shanghai

Complete and keep for safe reference:

Model	_____
Serial No.	_____
Purchase Date	_____
Purchaser	_____
Dealer	_____
Suburb	_____
Town	_____
Country	_____

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets
and are subject to change at any time.

The product specifications in this guide apply to the specific products and
models described at the date of issue. Under our policy of continuous product
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,
please go to our website or contact your local Fisher & Paykel dealer.

433707A 07.26