
WARMING DRAWER INSTALLATION GUIDE

Components required	3
Accessing your product specifications	4
Prior to installation	5
Unpack product	6
Position in cavity	7
Adjust drawer	8
Secure to cavity	9
Checklist	10

FISHER & PAYKEL

US CA

MINIMAL

WB24SMG3, WB24SMB3

CONTEMPORARY

WB24SCX3

COMPONENTS REQUIRED

TOOLS

Not supplied

- ☐ T20 star-head screwdriver
- ☐ Hex key to fit adjustment screws
- ☐ Level
- ☐ Shims

PARTS



Supplied

- ☐ Power cords (1)
- ☐ T20 wood screws (4)
- ☐ T20 machine screws (6)
- ☐ Wire shelf (1)

ACCESSING YOUR PRODUCT SPECIFICATIONS



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

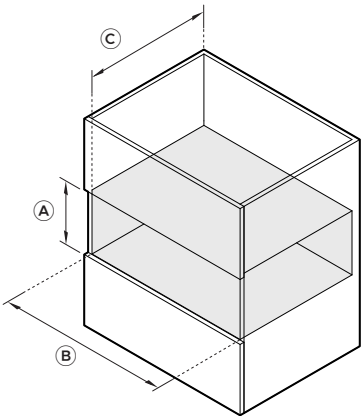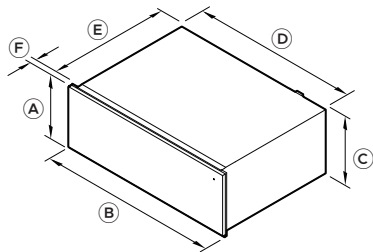

PRODUCT DIMENSIONS	inches
(A) Overall height	5 1/2
(B) Overall width	23 7/16
(C) Chassis height	5 1/2
(D) Chassis width	21 3/8
(E) Chassis depth	21.54
(F) Control panel thickness	13/16

CAVITY DIMENSIONS	inches
(A) Minimum inside height of cavity	5 9/16
(B) Minimum inside width of cavity	22 1/16
(C) Minimum inside depth of cavity*	21 5/8
Recommended cabinet height	5 11/16
Recommended cabinet width	23 5/8


*Measured from front of chassis.

PRIOR TO INSTALLATION



fisherpaykel.com/specify

1. Refer to the Planning Guide for cabinetry, cavity, panel and service specifications.

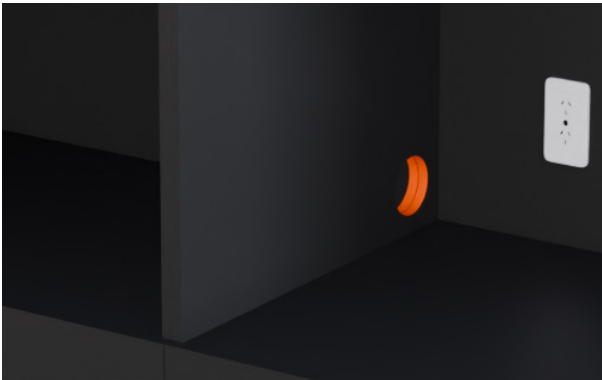

2. Ensure the cabinet meets the minimum cavity specifications required.

The cabinet must be level and square to prevent the need for product adjustments such as shimming.

Electrical supply: 120 V, 60 Hz, dedicated 15 A circuit. Keep the electrical connection accessible after installation. Allow at least 1/16 in clearance above and beside the front panel.

UNPACK PRODUCT



1. Carefully remove the warming drawer and accessories box from the packaging.




2. Dispose of packaging responsibly.


POSITION IN CAVITY



1. Connect the power cable to the product and the power supply.

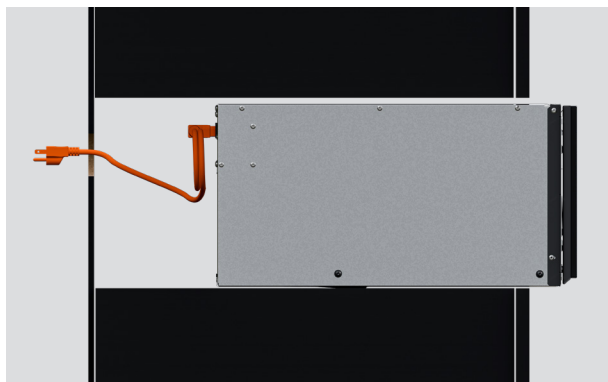


2. Apply protective tape to adjacent cabinetry panels before lifting product into place.

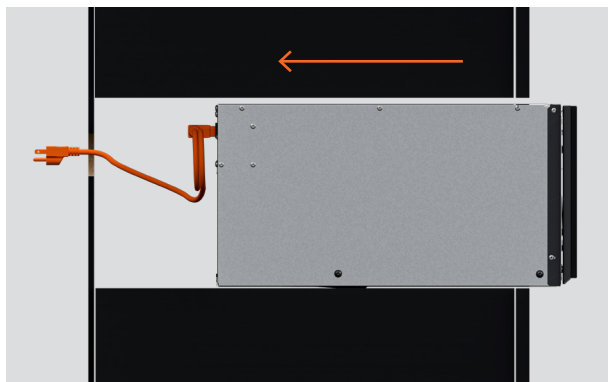

3. Carefully push the warming drawer into the cabinetry.

ADJUST DRAWER

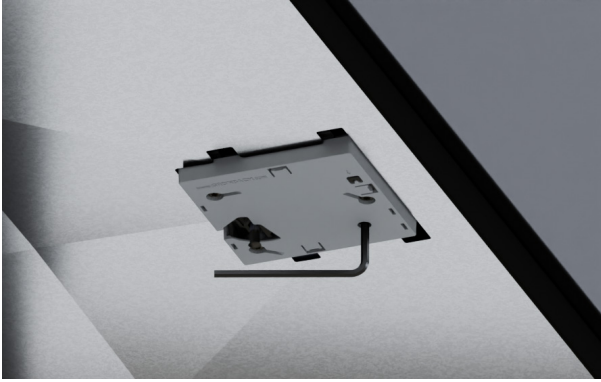


1. Adjust depth:

Open the drawer fully.


Use a hex key to adjust the front panel position by up to 0.157 in.

Turn clockwise to move the panel back, or counter-clockwise to move it forward.

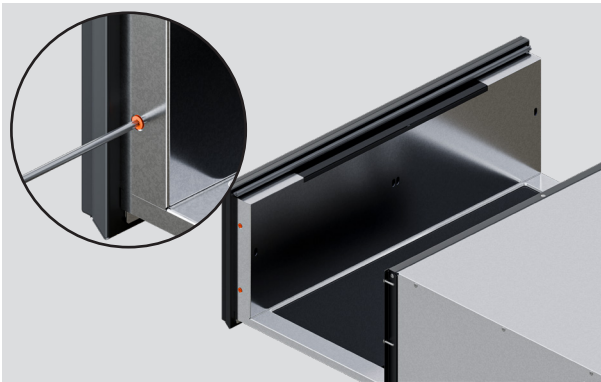

2. Adjust height:

Open the drawer fully and slightly loosen the T20 star head screws.

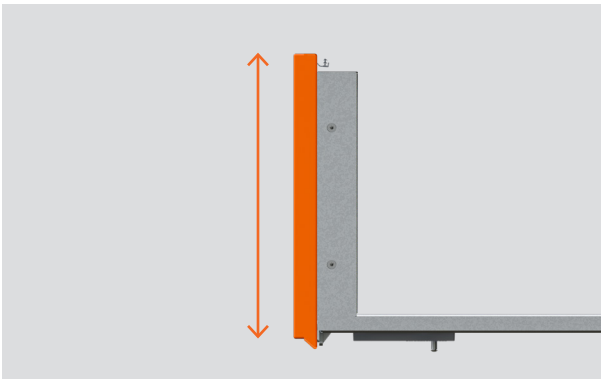


3. Adjust height:

Adjust the drawer height by up to 0.078 in and re-tighten the screws to secure.

SECURE TO CAVITY



1. Open the drawer and secure to the cabinetry using the supplied T20 star head screws.

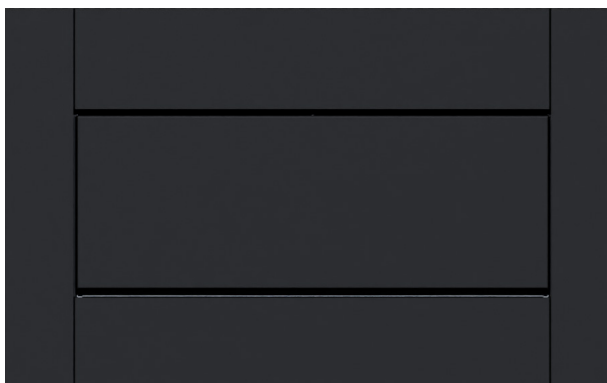

2. Close the drawer to check alignment and readjust if needed.

CHECKLIST

Installation checks

- ☐ All clearances are correct. Refer to the Planning Guide for more details.
- ☐ The product is level and securely fitted in the cabinetry.
- ☐ All internal packaging is removed.
- ☐ The electrical connection remains accessible.

Test operation

- ☐ Open the drawer.
- ☐ Press the power button to turn it on.
- ☐ Close the drawer.
- ☐ After 5–10 minutes, open the drawer to check it is warming.
- ☐ Press the power button to turn it off before closing the drawer.

Complete and keep for safe reference:

Model _____

Serial no. _____

Purchase date _____

Purchaser _____

Dealer address _____

Installer's name _____

Installer's signature _____

Installation company _____

Installation date _____

