

FISHER & PAYKEL

**WALL RANGEHOOD,
90CM, BOX CHIMNEY**

MINIMAL / CONTEMPORARY
HC90BCX2 & HC90BCX3 models

USER GUIDE / INSTALLATION GUIDE
CN HK SG

FISHER & PAYKEL

**WALL RANGEHOOD,
90CM, BOX CHIMNEY**

MINIMAL / CONTEMPORARY
HC90BCX2 & HC90BCX3 models

USER GUIDE
CN HK SG

CONTENTS

Safety and warnings	4
Using your rangehood	6
Control panel	7
Care and cleaning	8
Troubleshooting	14
Manufacturer's Warranty	16
Customer care	17

HC90BCX2 complies with mandatory national energy efficiency standard: GB 29539-2013, scan the QR code on the energy label to obtain information on product energy registration.

Registration

To register your product visit our website: fisherpaykel.com/register

⚠ WARNING!



Electric Shock Hazard

Failure to follow this advice may result in electric shock or death.

- Always disconnect the appliance from the mains power supply before carrying out any maintenance or repairs. Failure to do so can result in death, electric shock, fire or injury to persons.
- Do not immerse cord or plugs in water or other liquid.
- Never touch the power plug or electrical components, or manipulate the power switch with wet hands.
- When cleaning, never allow electrical components such as the motor, switch and connectors to get wet.

⚠ WARNING!



Weight Hazard

Failure to follow this advice may result in personal injury.

- The appliance is heavy. Please ensure adequate care is taken when installing the appliance to prevent personal injury. The appliance must be installed onto a solid wall, stud, beam or truss.
- **Product weight:** 25.5kg

READ AND SAVE THESE INSTRUCTIONS

WARNING!

When using this appliance always exercise basic safety precautions including the following:

- Disconnect the power supply when cleaning or inspecting the product.
- Do not damage or place heavy objects on the power cord. If the power cord is damaged, it must only be replaced by your Fisher & Paykel trained and supported service technician.

SAFETY AND WARNINGS

- The room must have adequate ventilation when the rangehood is used at the same time as appliances burning gas or other fuels. (A partial vacuum in the room could result in too high a concentration of gas in the air).
- The air/gases discharged by the appliance must not be vented into a flue (chimney) that is used for exhausting fumes from appliances burning gas or other fuels
- Never expose the rangehood to a burner or element that is turned on without a pot or pan covering it.
- Never use aluminium foil on the cooktop.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- You must read the details concerning the method and frequency of cleaning.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- Never leave frying food unattended since grease can overheat and catch fire. The risk of fire is even greater in the case of used oil.
- Do not flambé under the rangehood.
- Never use the rangehood without the filters in place.
- CAUTION: accessible parts may become hot when used with cooking appliances.
- Remove all packaging, including protective wrappings, before use.
- Unplug or disconnect the appliance from the power supply before servicing or cleaning.
- The rangehood may stop working during an electrostatic discharge (eg lightning). Switch off the electricity supply to the rangehood and reconnect after one minute.
- Never use abrasive or oil based cleaners.
- Do not clean the inside of the range hood. If you need to clean the inside, please contact your Fisher & Paykel trained and supported service technician.
- The appliance shall be able to work normally under the following environmental conditions: temperature -15°C ~ 40°C, relative humidity ≤90% (at 25°C), altitude ≤1000m.

Energy efficiency label notice

This product complies with the currently applicable mandatory national energy efficiency standard: GB 29539-2025. Scan the QR code on the energy efficiency label to view the product's energy efficiency label registration information.

Product Quality Certificate

Fisher & Paykel Appliances Ltd hereby declares that:

All models listed in the User Guide are designed in accordance with the applicable Chinese national product safety standards or corresponding international standards and manufactured under an established factory quality management system. The model number and manufacture date can be identified on the product rating label. Accordingly, the listed models comply with the requirements of the People's Republic of China Product Quality Law.

Hazardous Substances Declaration Table and Marking

Information on the Hazardous Substances (declaration for this product is available online. Go to http://www.fisherpaykel.com/cn/zh_CN/specify and search by appliance type, product name or model. The RoHS mark and the Environment-Friendly Use Period (EFUP) can be identified on the rating label affixed to the product.

USING YOUR RANGEHOOD

This rangehood should be turned on for a few minutes before cooking in order to establish air currents upward through the rangehood. This will also enable hot air removal from your kitchen and keep the rangehood surface cool. When heat, smoke, moisture, grease and cooking odours are produced, they will be carried outside instead of drifting into other rooms.

Use the low fan speeds for normal use and the higher fan speeds for high heat, strong odours or fumes.

Induction cooking considerations

Induction cooktops use energy efficient technology that only heats the contents of a cooking pot. Unlike gas or traditional electric cooktops, the surrounding air does not get heated when using an induction cooktop. As a result, rangehood filters, splashbacks and surrounding cabinetry do not get warmed up, increasing the likelihood of condensation on these cooler surfaces. Other factors like ambient temperature, humidity, natural ventilation of the room, size of the cookware and how the induction cooktop is being used also influence condensation. For example, rapid boiling on high cooktop heat settings like PowerBoost increases the rate at which water is evaporated, increasing the likelihood of condensation. It is important to understand that neither the rangehood nor the induction cooktop are faulty as a result of this phenomenon.

Condensation can be minimised by:


- Using the rangehood on a lower speed setting when boiling.
- Using the induction cooktop on a lower heat setting when boiling.
- Switching the rangehood on 5 minutes before cooking and letting it run for at least 5 minutes after cooking.

Gas cooking considerations

Using a powerful gas cooktop or multiple gas burners operating at the same time can cause the rangehood surfaces to become hot. This effect can be reduced by:

- Using the maximum speed setting to enable hot air to be extracted quickly.

CONTROL PANEL

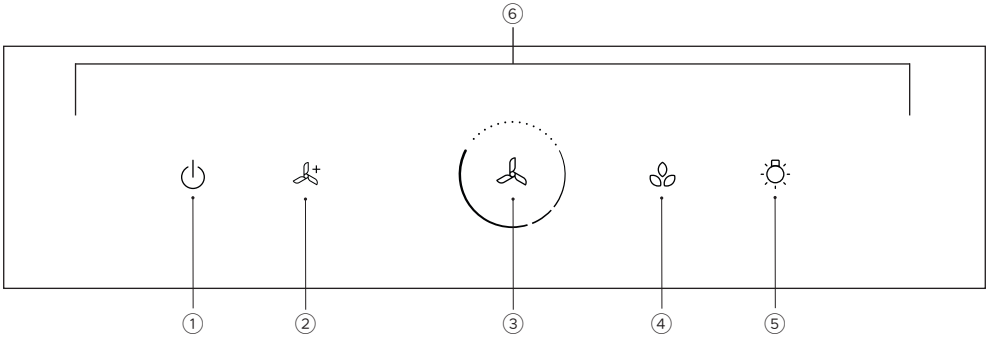

- | | |
|-------------------------------|--|
| ① Power on/off | <p>Press to turn the rangehood on/off. The fan automatically turns on to operate at speed 2.</p> <p>When turning the rangehood off, the fan will continue to operate for 3 minutes. Press a second time to turn the fan off immediately.</p> |
| ② Boost | <p>Press to turn the fan onto boost speed. Press again to revert to previous speed.</p> |
| ③ Fan speed | <p>Press to turn the fan on and to cycle through the fan speeds.</p> <p>Fan speed 1: Suitable for gentle cooking and simmering.</p> <p>Fan speed 2: Optimal airflow for most styles of cooking.</p> <p>Fan speed 3: Suitable for high heat cooking, wok cooking and other heavy use.</p> |
| ④ Air Purification | <p>Press to turn Air Purification on/off.</p> <p>Air Purification analyzes the air quality in the room and selects the most effective fan speed. The fan will run until the air quality is improved. The icon will change colour depending on the air quality.</p> <p>Red icon: Air quality is very poor.</p> <p>Orange icon: Air quality is poor.</p> <p>Green icon: Air quality is good or fan has run long enough to improve air quality.</p> |
| ⑤ Light | <p>Press to turn light on/off.</p> |
| ⑥ Gesture control zone | <p>Use a wave gesture over the control panel to turn the rangehood on/off.</p> |

CARE AND CLEANING

Disconnect the product from the power source before undertaking any cleaning. Clean your rangehood regularly using a mild, liquid detergent and a clean soft cloth to avoid a build-up of grease. Avoid the use of corrosive chemicals, abrasive cleaning products, hard brushes and steel wool pads. In areas of high humidity or coastal environments, cleaning should be carried out more frequently.


Do not operate the hood without oil receptacle and filters in place.

Unplug the power cord if the rangehood will not be used for a long period of time.

Oil receptacle


Empty the oil receptacle regularly to avoid overflow. Do not let it fill further than the MAX mark.

Removing the oil receptacle

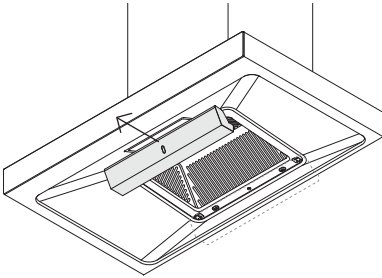

Slide the receptacle straight out to remove it from the rangehood.
Empty the oil receptacle and wash in warm water with detergent.

Replacing the oil receptacle

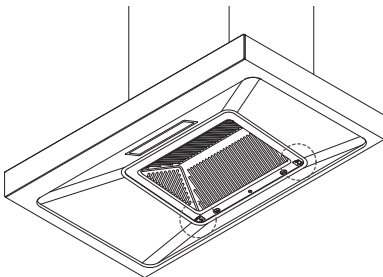


Position the oil receptacle between the tabs on the rangehood and slide back into place.
Ensure it is pushed all the way in.

CARE AND CLEANING


Oil filters

- Clean the filters at least once a month. Filters may need to be cleaned more frequently depending on the cooking methods used and frequency of use.
- Oil filters should be removed and cleaned with hot soapy water or in a dishwasher.
- If washed in a dishwasher, the filter should be placed in an upright position to prevent food from falling on them.
- After rinsing and drying, refit the filters.

Removing the oil filters

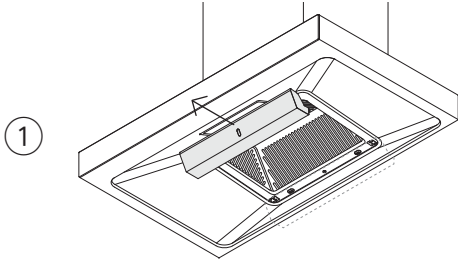


Remove the oil receptacle.

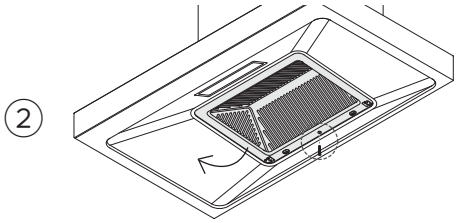


Loosen the screw securing the filter and pull out to remove.

Replacing the oil filters

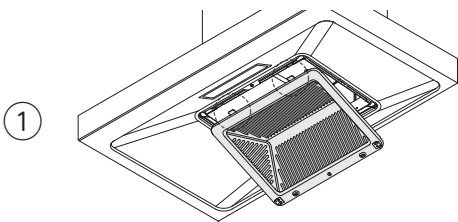

Insert the top edge of the filter into the filter recess. Ensure the tabs are aligned.

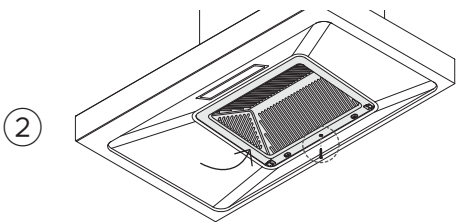


Push the rest of the filter back into place and tighten the screw to secure.
Replace the oil receptacle.

CARE AND CLEANING


Fan

- Clean the fan every 3 months. It may need to be cleaned more frequently depending on the cooking methods used and frequency of use.
- Cleaning the fan will require two people to disassemble and reassemble the rangehood.
- The fan should be removed and cleaned with hot soapy water.
- Ensure that the clips on the fan blades are not moved or lost. This will imbalance the fan and can cause increased noise and vibration.
- After rinsing and drying, replace the fan and reassemble the rangehood parts.


Removing the fan

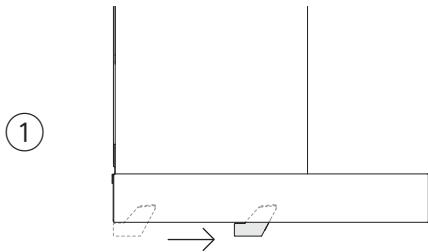


Remove the oil receptacle.

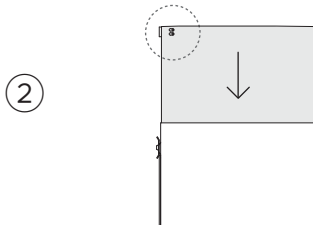

If the upper chimney extension has been used, unhook it from the chimney brackets and slide it back down into the chimney.

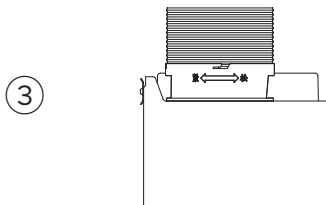


Twist ducting hose anti-clockwise to detach from the check valve assembly.

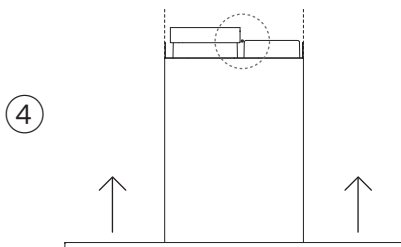

Loosen the stopper screw and detach the main unit from the wall bracket.


CARE AND CLEANING

5

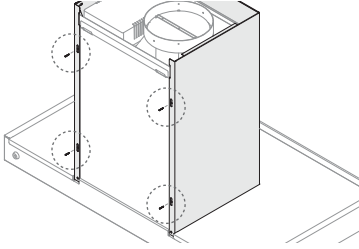


Loosen the screws securing the chimney cover. Remove both the outer and inner chimney covers.

6

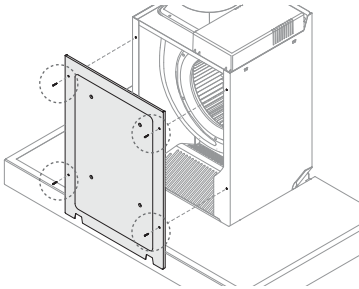


Loosen the screws securing the main housing cover plate and remove it.

7

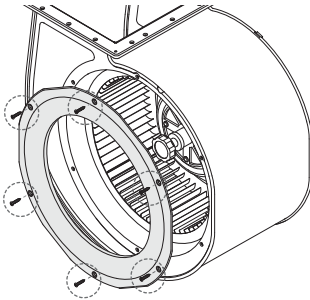

Loosen the screws securing the intake ring and remove it.


8

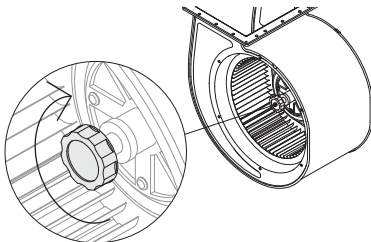


Twist the nut in a clockwise direction to remove the fan.

CARE AND CLEANING


Replacing the fan

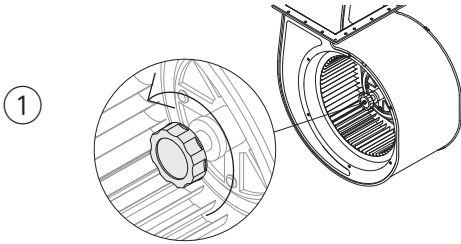


Replace the fan and twist the nut anti-clockwise to secure.

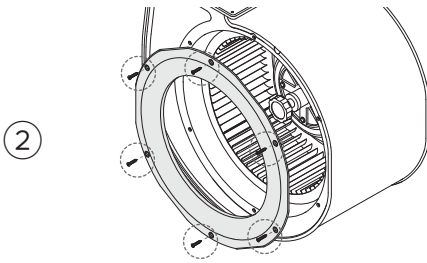

Replace the intake ring and tighten the screws to secure.

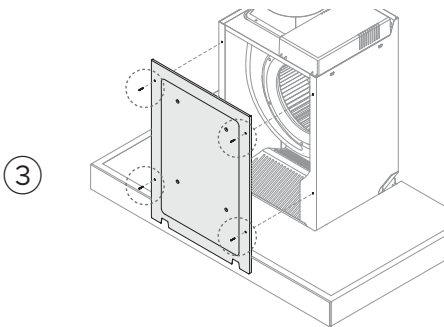


Replace the main housing cover plate and tighten the screws to secure.

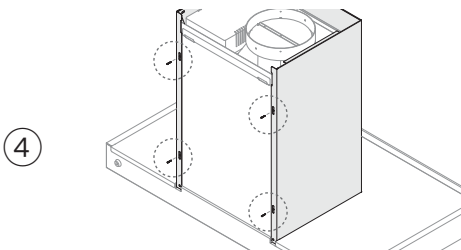

Replace the inner and outer chimney covers and tighten the screws to secure.


CARE AND CLEANING

⑤

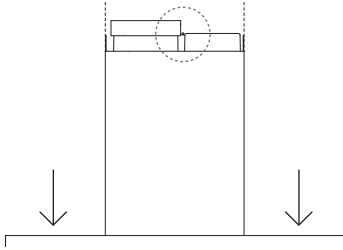


Attach the rangehood back on the wall bracket and tighten the stopper screw to secure.

⑥

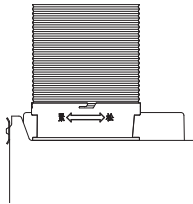


Insert the ducting hose into the check valve assembly.
Twist clockwise to lock into position.

⑦

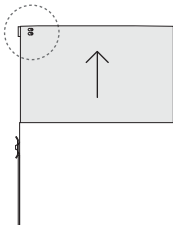

Slide the upper chimney extension back up and attach to the chimney brackets (if using).

⑧

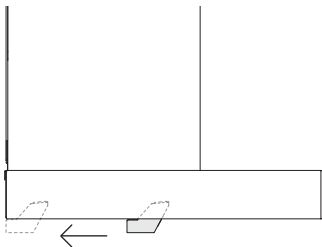

Replace the oil receptacle.

TROUBLESHOOTING

If there is a problem with your rangehood, please check the following points before contacting your local Fisher & Paykel trained and supported service technician or the Customer Care Centre.

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
No power.	Power supply plug is not plugged in or not properly connected.	Check the power plug is properly connected.
	No power is supplied to the electrical outlet.	Restore the power supply or contact an electrician.
	Power is not connected or a fuse has blown.	Reset the fuse or contact an electrician.
Product is not working.	Power supply is not connected or the voltage is incorrect.	Restore the power supply or contact an electrician.
	No fan speed has been selected.	Select a fan speed.
Light not working.	Light not turned on.	Press light button to turn on the light.
	Replacement bulb needed.	Contact Customer Care.
Excessive condensation forms on the rangehood.	Using an induction cooktop.	Condensation can be minimised. Refer to 'Using your rangehood'.
	High ambient temperature, humidity or low natural ventilation in the room.	
	Height of rangehood installation.	
Rangehood makes a clicking noise after turning off.	Check valve blades settling back into place when there is no airflow.	This is normal.
Oil leak.	Too much oil in the oil receptacle.	Remove waste oil in the oil receptacle.
	Filter has not been cleaned.	Refer to 'Care and cleaning' for instructions on cleaning the filter.
	Main housing hasn't been cleaned.	Wipe the main housing every day after use according to instructions.
Oil filter is difficult to remove.	Filter and filter recess have not been cleaned.	Clean the filter and filter recess weekly as per instructions.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
Rangehood is loud.	Main unit is not securely fastened to the wall.	Check that the main unit is fastened securely.
	Fan is not well fitted.	Fit the fan properly.
	Fan is damaged.	The fan needs to be replaced. Contact Customer Care.
	Hand-tightened nut is loose.	Tighten the hand-tightened nut.
Airflow is lower than expected.	Rangehood body is not installed at the correct height.	Re-install at the required height.
	Universal ducting hose is too long, has not been stretched tight, or has too many bends.	Reduce the length of the ducting hose or the number of bends.
	Shared flue aperture is too narrow or the air outlet is poorly sealed.	Widen the flue aperture or improve the outlet sealing.
	The check valve blade is stuck and cannot function properly.	Fix the blade and ensure the valve is working correctly.
	Rangehood has not been cleaned.	Follow the rangehood cleaning instructions.

MANUFACTURER'S WARRANTY

You automatically receive a 2 year Manufacturer's Warranty with the purchase of this Rangehood covering parts and labour for servicing within the country of purchase.

Fisher & Paykel undertakes to:

Repair or, at its option, replace without cost to the owner either for material or labour any part of the product, the serial number of which appears on the product, which is found to be defective within TWO YEARS of the date of purchase.

Note: this Manufacturer's Warranty is an extra benefit and does not affect your legal rights.

This Manufacturer's Warranty DOES NOT cover

- (A) Service calls which are not related to any defect in the product. The cost of a service call will be charged if the problem is not found to be a product fault. For example:
 - ① Correcting the installation of the product.
 - ② Instructing you how to use the product.
 - ③ Replacing house fuses or correcting house wiring or plumbing.
 - ④ Correcting fault(s) caused by the user.
 - ⑤ Noise or vibration that is considered normal, eg drain/fan sounds, refrigeration noises or user warning beeps.
 - ⑥ Correcting damage caused by pests, eg rats, cockroaches, etc
 - ⑦ Replacement light bulbs.
- (B) Defects caused by factors other than:
 - ① Normal domestic use; or
 - ② Use in accordance with the product's user guide.
- (C) Defects to the product caused by accident, neglect, misuse or 'act of God'.
- (D) The cost of repairs carried out by non-trained and supported service technicians or the cost of correcting such repairs.
- (E) Normal recommended maintenance as set out in the product's user guide.
- (F) Repairs when the appliance has been dismantled, repaired or serviced by other than a Fisher & Paykel trained and supported service technician or the selling dealer.
- (G) Pick-up and delivery.
- (H) Transportation or travelling costs involved in the repair when the product is installed outside the Fisher & Paykel trained and supported service technician's normal service area.

Nothing in this manufacturer's warranty is intended to, or does, limit any rights you may have under law to recover the costs of inspecting or returning the goods to us.

This product has been designed for use in a normal domestic (residential) environment. This product is not designed for commercial use (whatsoever). Any commercial use by a customer will affect this product's Manufacturer's Warranty.

Service under this Manufacturer's Warranty must be provided by a Fisher & Paykel trained and supported service technician (refer to the 'Customer Care' section at the back of this book). Such service shall be provided during normal business hours. This Manufacturer's Warranty certificate should be shown when making any claim.

Please keep this user guide in a safe place.

CUSTOMER CARE

Before you call for service or assistance

Check the things you can do yourself. Refer to your user guide and check that:

- ① Your product is correctly installed.
- ② You are familiar with its normal operation.

If after checking these points you still need assistance or parts, please refer to your nearest Fisher & Paykel trained and supported service technician, Customer Care, or contact us through our local website listed on the back cover.

Call your Fisher & Paykel retailer/dealer from whom you purchased the product. They are trained to provide information on your appliance. If we can be of any further help, contact use on:

Phone: +64 9 273 0660

Fax: +64 9 273 0580

Website: fisherpaykel.com

Postal address: Fisher & Paykel Appliances Ltd, PO Box 58550, Botany, Auckland 2163, New Zealand.

CUSTOMER CARE

*If you call, write or contact our website please provide:
your name and address, model number, serial number, date of purchase and a complete description of the problem. This information is needed in order to better respond to your request for assistance.

**Product details can be found on the inside of the chassis.
The filter needs to be removed to be able to see them.**

Registration

Register your product with us so we can provide you with the best service possible.
To register your product visit our website: fisherpaykel.com/register

Complete and keep for safe reference:

Model	_____
Serial No.	_____
Purchase Date	_____
Purchaser	_____
Dealer	_____
Suburb	_____
Town	_____
Country	_____

FISHER & PAYKEL

**WALL RANGEHOOD,
90CM, BOX CHIMNEY**

MINIMAL / CONTEMPORARY
HC90BCX2 & HC90BCX3 models

INSTALLATION GUIDE
CN HK SG

CONTENTS

Safety and warnings	22
Parts supplied	24
Product components	26
Prior to installation	27
Product dimensions	28
Installation height	30
Electrical requirements	32
Attach brackets and mounting screws	33
Prepare rangehood	34
Hang rangehood	35
Connect ducting	36
Attach accessories	37
About your rangehood	38
Final checklist	39

⚠ WARNING!



Electric Shock Hazard

Failure to follow this advice may result in electric shock or death.

- Always disconnect the appliance from the mains power supply before carrying out any maintenance or repairs. Failure to do so can result in death, electric shock, fire or injury to persons.
- Altering of the internal wiring is strictly prohibited, unless performed by professional maintenance personnel.

⚠ WARNING!



Weight Hazard

Failure to follow this advice may result in personal injury.

- The appliance is heavy and requires two people for installation. Please ensure adequate care is taken when installing the appliance to prevent personal injury. The appliance must be installed onto a solid wall, stud, beam or truss.
- **Product weight:** 25.5kg

⚠ WARNING!



Cut Hazard

Failure to use caution could result in injury.


- Take care: some edges are sharp.
- Wear gloves to protect against sharp edges.

READ AND SAVE THESE INSTRUCTIONS


WARNING!

- When using this appliance always exercise basic safety precautions including the following:
- Please read the entire set of instructions before installing or using this appliance.
- Please make this information available to the person installing the appliance – doing so could reduce your installation costs.
- Always switch the power off prior to installation, servicing or cleaning of the appliance.
- This appliance must be installed and connected to the mains power supply only by a suitably qualified person according to these installation instructions and in compliance with any applicable local building and electricity regulations. Failure to install the appliance correctly could invalidate any warranty or liability claims.
- To comply with electrical safety regulations, the appliance must be plugged into a socket near the appliance. The socket must be accessible, or have an accessible isolating switch, to enable the end user to isolate the appliance from the power for the purpose of internal cleaning or maintenance.
- Use a dedicated power outlet: the power cord must not be connected to an extension cord or multi-socket power board. Secure grounding is required, and the power cord should be 1000mm in length.
- If the supply cord of this equipment is damaged, it must only be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- All ducting must comply with local requirements and building codes.
- Attention should be given to ensure that any applicable regulations concerning the discharge of exhaust air are fulfilled.
- Before connecting any pipes, consult municipal ordinances to ensure that any applicable regulations concerning the discharge of exhaust air are adhered to and request permission from the person in charge of the building.
- If using shared ducting, the air outlet must be well sealed.
- Exhaust air must not be discharged into an existing flue that is used for exhausting fumes from appliances burning gas or other fuels.
- Stainless steel or powdercoat is very easily damaged during installation if abraded or knocked by tools. It is recommended to protect the top of the appliance with cardboard or polystyrene during the installation to minimise the risk of damage occurring.
- To reduce the risk of damage occurring to the cooktop, it is recommended that the surface of the cooktop is protected with cardboard or a similar object during installation of the rangehood.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- This appliance is an external exhaust hood, air and smoke is discharged to the outside through the air duct. To properly exhaust air, ensure the duct is straight.
- The minimum distance between the support surface of the cooking vessel on the cooktop and the lowest part of the range hood should be at least 650mm. If the cooktop installation instructions specify a larger installation distance, this should be considered.
- Installation should be performed by a qualified person. The appliance should be tested to confirm proper operation, and the correct use of the appliance should be explained to the user.


PARTS SUPPLIED

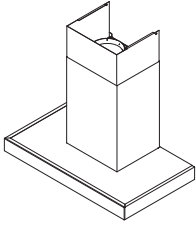

Rangehood (1)

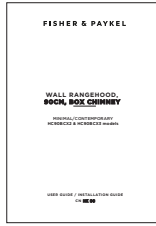


User guide and
Installation guide
(1)

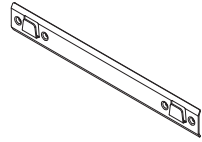


Wall bracket (1)




Upper chimney
bracket (2)

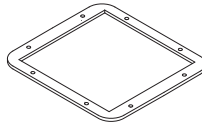


Check valve gasket
(1)

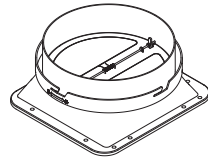

Check valve
assembly (1)

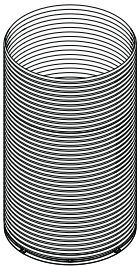

Universal ducting
hose 180 (1)

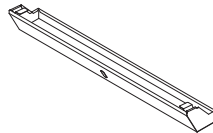

Oil receptacle (1)

PARTS SUPPLIED



Cross recessed
pan head screw
M4 x 20 (8)



Mounting screw*
4 x 48 (7)



Expansion plug*
10 x 48 (7)



Self-tapping screw
ST3 x 8 (2)




Self-tapping screw
ST4 x 8 (2)




Self-tapping screw
ST4 x 10 (4)

* The screws and plugs are to be used in concrete or brick walls only. Different fixings will be required for other types of wall construction.


PRODUCT COMPONENTS

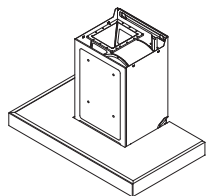


Rangehood main housing

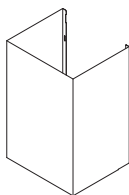


Chimney

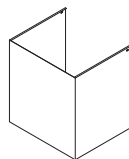


Upper chimney extension

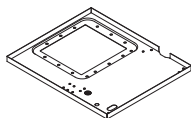

Main housing cover plate

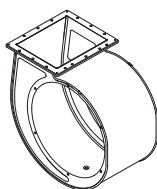


Volute

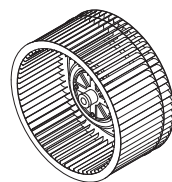


Fan




Hand-tightened nut

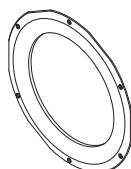


Intake ring

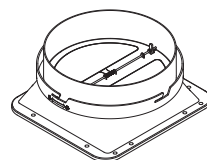

Check valve assembly

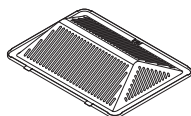

Oil filter

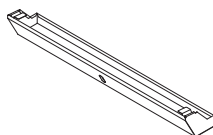


Oil receptacle

PRIOR TO INSTALLATION


Fisher & Paykel is not liable for any damage caused by not following these instructions.

- Please read the instructions carefully before installing the rangehood.
- Unpack the rangehood.
- Ensure the voltage (V) and the frequency (Hz) indicated on the rating plate match the voltage and frequency of the installation site.
- Check all functions are working.
- Check that the area behind the installation surface to be drilled is clear of any electrical cables or pipes etc.
- The rangehood surfaces can be damaged during installation if grazed or knocked by tools. Please take care to protect the surfaces during installation.
- Protect the cooktop surface with cardboard, or similar, to prevent damage occurring whilst the rangehood is being installed above.
- Temporarily mark the height of the bottom of the rangehood and the centre of the cooktop on the wall according to the information given in the 'Installation Height' section.
- The wall used for mounting the rangehood should have sufficient strength and a flat surface.


PRODUCT DIMENSIONS

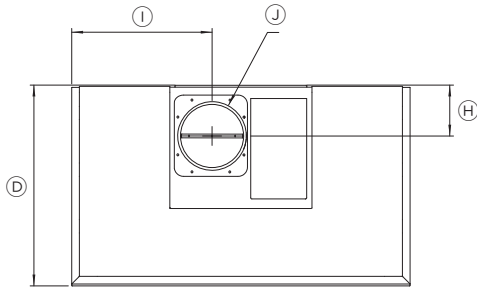


PLAN

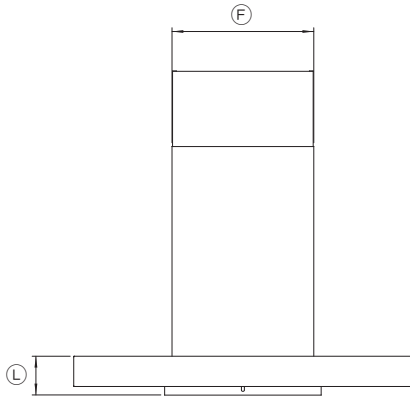

FRONT

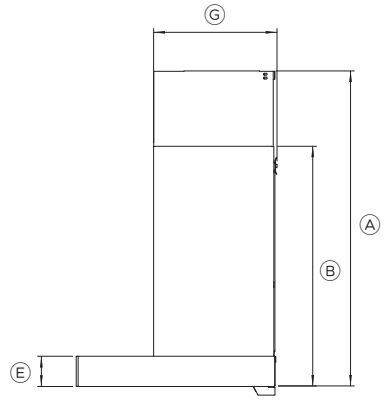

PROFILE

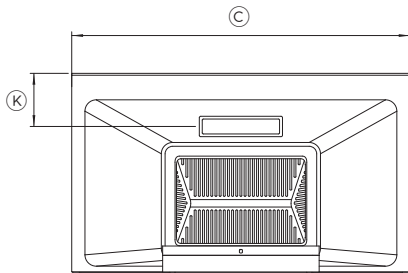

BOTTOM VIEW


PRODUCT DIMENSIONS

PRODUCT DIMENSIONS	HC90BCX
	MM
Ⓐ Maximum overall height of product	1000
Ⓑ Minimum overall height of product	620
Ⓒ Overall width of product	895
Ⓓ Overall depth of product*	520
Ⓔ Height of rangehood control panel	80
Ⓕ Width of chimney	375
Ⓖ Depth of chimney*	327
Ⓗ Distance from centre of ducting outlet to back of product*	135
Ⓘ Distance from centre of ducting outlet to side of product	371
Ⓙ Diameter of ducting outlet	180
Ⓚ Distance from light to front of product	140
Ⓛ Height from bottom of oil receptacle to top of control panel	102
Length of power cord	1000

*Including mounting bracket

Actual product dimensions may vary by ± 2 mm.

INSTALLATION HEIGHT

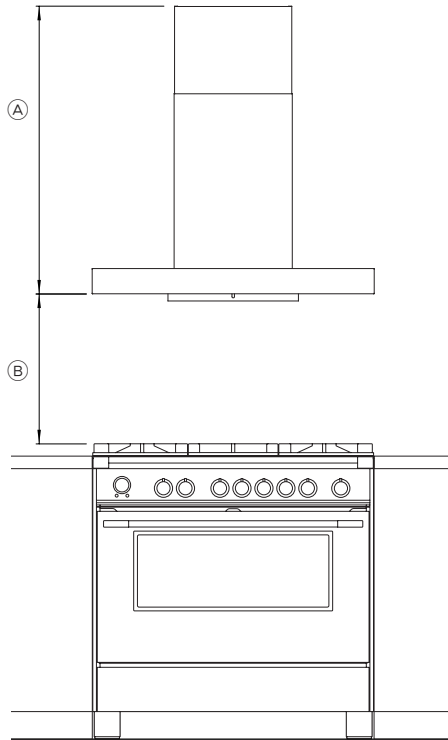

HEIGHT DIMENSIONS

MM

Ⓐ Ducted installation	
• Minimum height	620
• Maximum height	1000
Ⓑ Height top of cooktop to base of product	
• Electric cooktop	min 650 – max 700
• Gas cooktop	min 650 – max 700

This rangehood must be installed no lower than the minimum height indicated in the table above. Minimum installation height may be greater if required by the cooktop, refer to your cooktop installation instructions.

Installation at the minimum height will improve the efficiency of capturing cooking odours, grease and smoke. Installation above the minimum height is the user's preference, it is not recommended to install above the maximum height indicated in the table above.

INSTALLATION HEIGHT


Induction cooktop considerations

- Induction cooktops use energy efficient technology that only heats the contents of a cooking pot.
- Unlike gas or traditional electric cooktops, the surrounding air does not get heated when using an induction cooktop. As a result, rangehood filters, splashbacks and surrounding cabinetry do not get warmed up, increasing the likelihood of condensation on these cooler surfaces.
- Other factors like ambient temperature, humidity, natural ventilation of the room, size of the cookware and how the induction cooktop is being used also influence condensation. For example, aggressive boiling on high cooktop heat settings like PowerBoost increases the rate at which water is evaporated, increasing the likelihood of condensation.
- It is important to understand that neither the rangehood nor the induction cooktop are faulty as a result of this phenomenon.

Condensation can be minimised by:

- Installing the rangehood at the maximum height above the cooktop as specified in this user guide.
- Using the rangehood on a lower speed setting when boiling.
- Using the induction cooktop on a lower heat setting when boiling.
- Switching the rangehood on 5 minutes before cooking and letting it run for at least 5 minutes after cooking.

ELECTRICAL REQUIREMENTS

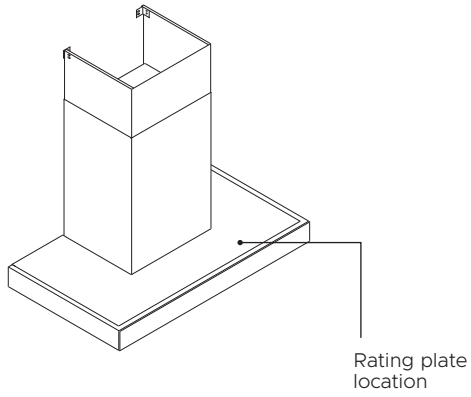


Before connecting the rangehood to the power supply, ensure the voltage and frequency indicated on the rating plate match that of the installation location:

MODEL	FREQUENCY	VOLTAGE
HC90BCX2 & HC90BCX3	50 Hz	220–240 V


ATTACH BRACKETS AND MOUNTING SCREWS

Use the supplied mounting screws and expansion plugs if attaching to concrete or brick walls. Different fixings will be required for other types of wall construction.

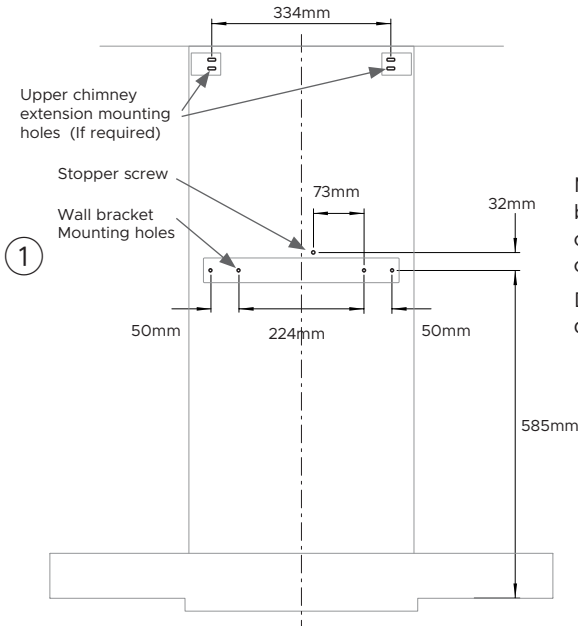


Mark the locations for the wall bracket, stopper screw and upper chimney brackets (if using the upper chimney extension).

Drill 55mm deep holes using an impact drill with a $\text{Ø}10$ mm masonry bit.

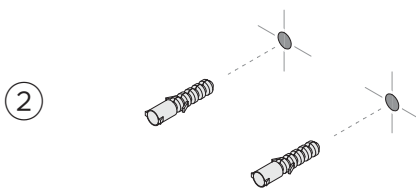


Fit the expansion plugs into the holes.

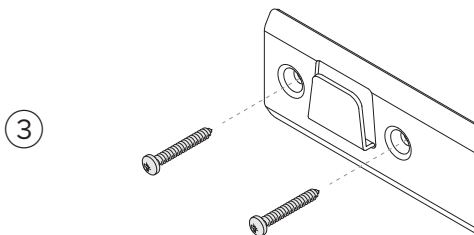

Attach the wall bracket and upper chimney bracket using the mounting screws.

PREPARE RANGEHOOD

Warning: Failure to install the screws or fixing device in accordance with these instructions may result in an electrical hazards.

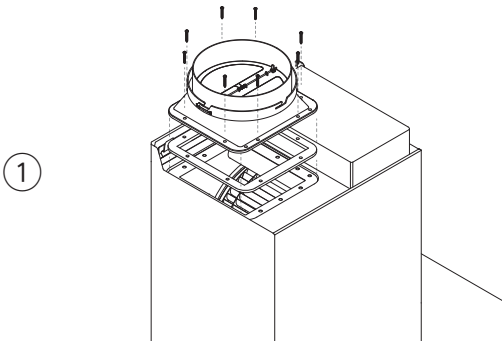


Place the check valve gasket and check valve assembly onto the air outlet at the top of the rangehood.

Attach using the supplied cross recessed pan head screws.


HANG RANGEHOOD

The rangehood is heavy and requires two people to attach to the wall.

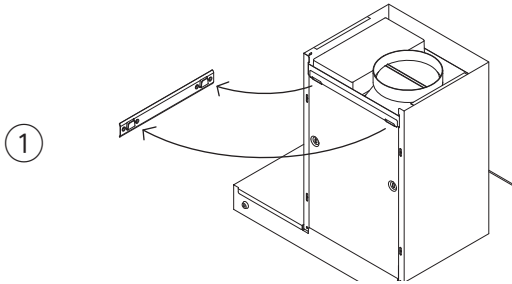

Attach the rangehood to the wall bracket.

Ensure the rangehood and wall bracket are firmly locked together.

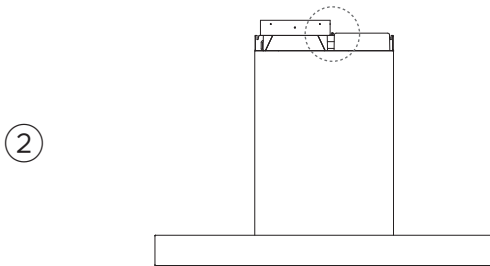


Insert the stopper screw at the top of the rangehood.

Ensure the screw is tightly secured against the rangehood.

CONNECT DUCTING


Ensure the ducting hose is stretched tight and trimmed to suit the installation space. For best performance, the ducting hose should not exceed 3m and should have minimal bends.

①

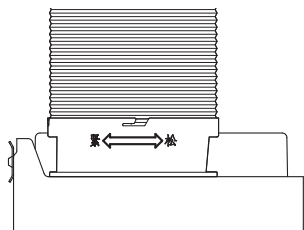

Insert the ducting hose into the check valve assembly.
Twist clockwise to lock into position.


②

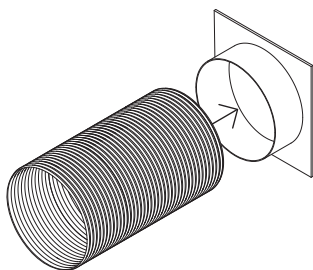

Connect the other end of ducting hose to a shared flue or external wall hole.
Seal with duct tape.


ATTACH ACCESSORIES

①

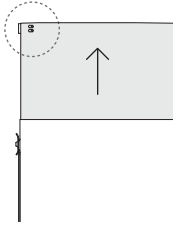


Extend the upper chimney extension (if using) and attach onto the upper chimney bracket.

②

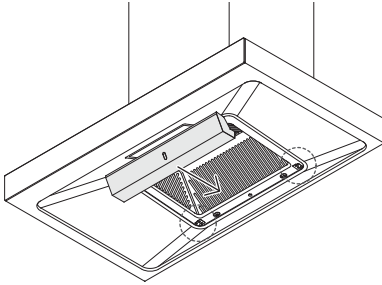

Fit the oil receptacle onto the rangehood. Position it between the tabs on the oil filter and push into place.

③

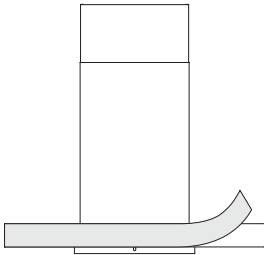


Remove all protective wrappings.

ABOUT YOUR RANGEHOOD

TECHNICAL DATA

Light bulbs	3W x 1
Type of power	Rated voltage: 220-240 V Rated frequency: 50 Hz
Motor input power	219 W
Rated input power	222 W
Maximum air flow	20m ³ / min
Air pressure	Maximum: 850 Pa At air flow of 8m ³ /min: 400 Pa
Noise	68 dB (A)
Universal ducting hose	Outer diameter: 180 mm Length: 1500 mm
Net weight	25.5 kg
Odour removal efficiency	Nominal ≥ 95%
Grease separation	Nominal ≥ 85%
Off power	N/A
Standby power	≤ 2 W
Air flow efficiency	25%
Energy efficiency rating	1st grade

Light

PART	ILLUSTRATION	LIGHT TYPE	RATED VOLTAGE	RATED POWER	DIMENSIONS (MM)
H0230400252B		LED	12V	3W	220 x 58 x 28

FINAL CHECKLIST

TO BE COMPLETED BY THE INSTALLER

- Rangehood is correctly installed
- All connections are secure
- Connections have not pierced any electrical or water lines within the wall
- Ducting has not been crushed or bent in any areas
- Flexible ducting has been pulled taut and any excess removed (if required)
- Power plug switch is accessible to the customer
- Product is plugged in and power switched on
- Operation of the product has been tested

Complete and keep for safe reference:

Model _____

Serial no. _____

Purchase date _____

Purchaser _____

Dealer address _____

Installer's name _____

Installer's signature _____

Installation company _____

Installation date _____

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets
and are subject to change at any time.

The product specifications in this guide apply to the specific products and
models described at the date of issue. Under our policy of continuous product
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,
please go to our website or contact your local Fisher & Paykel dealer.

431543B 06.26