

---

# OVEN

## SAFETY & WARNINGS

---

|                      |    |
|----------------------|----|
| Safety and warnings  | 3  |
| Service and warranty | 8  |
| 安全与警告                | 12 |

**FISHER & PAYKEL**

CN

## MINIMAL

---

OS60SAMHUNB5, OS60SAMHUNG5, OS60NAMHUNB5, OS60NAMHUNG5,  
OB60SAMPUNB5, OB60SAMPUNG5, OS60SAMHUB5, OS60SAMHUG5,  
OS60NAMHUB5, OS60NAMHUG5, OS60SAMVUB5, OS60SAMVUG5,  
OS60NAMVUB5, OS60NAMVUG5, OB60SAMPUB5, OB60SAMPUG5,  
OS60SAMVTB5, OS60SAMVTG5, OS60NAMVTB5, OS60NAMVTG5,  
OB60SAMPTB5, OB60SAMPTG5, OS60NAMVUB5, OS60NAMVUG5,  
OS60NMSVUB5 & OS60NMSVUG5

## CONTEMPORARY

---

OS60SACHUDX5, OS60NACHUDX5, OS60SACVUDX5, OS60NACVUDX5,  
OB60SACPUDX5, OS60SACVTDX5, OS60NACVTDX5, OB60SACPTDX5,  
OS60NACVUDX5 & OS60NCSVUDX5

**⚠ WARNING!****Electric Shock Hazard**

Failure to follow this advice may result in electrical shock or death.

- Turn the oven off at the wall before replacing the oven lamp.
- Before carrying out any work on the electrical section of the appliance, it must be disconnected from the mains electricity supply.
- Connection to a good earth wiring system is absolutely essential and mandatory.
- Alterations to the domestic wiring system must only be made by a qualified electrician.

**⚠ WARNING!****Fire Hazard**

Failure to follow this advice may result in overheating, burning, and injury.

- Carefully follow the instructions for starting a self-clean cycle.
- Do not place aluminium foil, dishes, trays, water or ice on the oven floor during cooking, this will irreversibly damage the enamel. Lining the oven with aluminium foil may cause fire.
- Never use your appliance for warming or heating the room. Persons could be burned or injured or a fire could start.
- Flammable materials should not be stored in an oven or near its surface.
- Do not use adapters, reducers, or branching devices to connect this appliance to the mains power supply.

**⚠ WARNING!****Cut Hazard**

Failure to use caution could result in injury.

- Take care: some edges are sharp.

**⚠ WARNING!****Hot Surface Hazard**

Failure to follow this advice could result in burns and scalds.

- To avoid burns and scalds, keep children away from this appliance.
- Surfaces of the appliance may become hot enough to cause burns. Examples include the oven vent, the surface near the oven vent, and the oven door.
- Do not touch heating elements or interior surfaces of the oven. Heating elements may be hot, even when they are dark in colour.
- Use protection when handling hot surfaces, such as oven shelves or dishes, or when using steam functions.
- Be careful when opening the oven door as hot air and steam can be emitted, especially when using steam functions. Allow hot air and steam to dissipate before removing or replacing food.
- During and after use, do not touch or let clothing or other flammable materials contact heating elements or interior surfaces of the oven until they have had sufficient time to cool.

## READ AND SAVE THIS GUIDE

### WARNING!

To reduce the risk of fire, electrical shock, injury to persons or damage when using the oven, follow the important safety instructions listed below. Read all the instructions before installing or using the oven. Use the oven only for its intended purpose as described in these instructions.

#### Installation

- Ensure your appliance is properly installed and earthed by a qualified technician.
- Ensure this oven is connected to a circuit which incorporates an isolating switch providing full disconnection from the power supply.
- Do not install or operate the appliance if it is damaged or not working properly. If you receive a damaged product, contact your dealer or installer immediately.
- Please make this information available to the person installing the appliance – doing so could reduce your installation costs.
- This appliance must be installed and connected to the mains power supply only by a suitably qualified person according to these installation instructions and in compliance with any applicable local building and electricity regulations. Failure to install the appliance correctly could invalidate any warranty or liability claims.
- If the power supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Isolating switch: make sure this oven is connected to a circuit which incorporates an isolating switch providing full disconnection from the power supply in accordance with the wiring rules.
- The oven must be earthed.
- Do not use adaptors, reducers or branching devices to connect the oven to the mains electricity supply, as they can cause overheating and burning.
- The appliance must not be installed behind a decorative door in order to avoid overheating.
- Please take extra care not to damage the lower trim of the oven during installation. The trim is important for correct air circulation and allows the door to open and close without obstruction. The manufacturer does not accept any responsibility for damage resulting from incorrect installation.

#### Servicing

- Do not repair or replace any part of the appliance unless specifically recommended in the user guide. All other servicing should be undertaken by a Fisher & Paykel trained and supported service technician or qualified person.

#### Fire Hazard

- Do not use water on grease fires. Smother the fire or flame or use a dry chemical or foam type extinguisher.
- Use only dry oven mitts or potholders. Moist or damp potholders on hot surfaces could result in burns from steam. Do not let potholders touch hot areas or heating elements. Do not use a towel or a bulky cloth for a potholder. It could catch fire.
- Do not heat unopened food containers. They can build up pressure that may cause the container to burst and result in injury.

### Food Safety

- Leave food in the oven for as short a time as possible before and after cooking. This is to avoid contamination by organisms which may cause food poisoning. Take particular care during warm weather.

### General Use

- This product has been designed for use in a domestic (residential) environment. This product is not designed for any commercial use. Any commercial use by the customer will affect this product's manufacturer's warranty.
- Household appliances are not intended to be played with by children.
- Children should not be left alone or unattended in the area where the appliance is in use. They should never be allowed to sit or stand on any part of the appliance.
- Children of less than 8 years old must be kept away from the appliance unless continuously supervised.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be carried out by children without supervision.
- Do not store things children might want above the oven. Children could be burned or injured while climbing on the oven to retrieve items.
- Do not place heavy objects on the oven door.
- Always keep oven vents unobstructed. Do not wear loose fitting or hanging garments when using the appliance. They could ignite or melt if they touch an element or hot surface and you could be burned.
- Caution: Hot air can blow from the vent at the top of the oven as part of the oven's cooling system.
- Always position shelves in the desired location while the oven is cool (before preheating). If a shelf must be removed while the oven is hot, do not let the oven mitts or potholder contact hot heating elements in the oven or the base of the oven.
- Use only bakeware approved for ovens. Follow the bakeware manufacturer's guidance.
- Always place oven racks in desired location while oven is cool. If rack must be moved while oven is hot, do not let potholder contact hot heating element.
- Do not touch heating elements or interior surfaces of your oven. Heating elements and interior surfaces may be hot even though they are dark in color and could cause burns. The oven door, vent openings and surfaces near these openings may also become hot.
- This appliance is configurable to allow remote operation at any time. Do not store flammable materials or temperature sensitive items inside, on top or near the appliance.
- Neither the food probe or aluminium foil must come in contact with the oven elements.
- Only use the temperature probe recommended for this oven.
- The appliance must not be installed behind a decorative door in order to avoid overheating.
- **WARNING:** Accessible parts may become hot during use. Young children should be kept away.

### **Cleaning**

- Do not clean the oven seal or use any oven-cleaning products on it. It is essential for a good seal, which ensures that the oven operates efficiently. Care should be taken not to rub, damage, move or remove the oven seal.
- Do not use oven cleaners, harsh/abrasive cleaning agents, waxes, or polishes. No commercial oven cleaner, oven liner, or protective coating of any kind should be used in or around any part of the oven.
- Do not use harsh/abrasive cleaners, scourers or sharp metal scrapers to clean the oven door glass since they scratch the surface, which may result in the glass shattering.
- Clean only the parts listed in this manual.
- Do not use a steam cleaner to clean any part of the oven.
- The door gasket is essential for a good seal. Care should be taken not to rub, damage or move the gasket.

### **Self cleaning**

- Spillages must be removed before starting a self-clean cycle.
- Before starting a self-clean cycle, remove oven shelves and all other cookware and/or utensils, and wipe up large food spills or grease deposits.
- Before starting a self-clean cycle, ensure you move any pet birds to another, closed and well-ventilated room. Some pet birds are extremely sensitive to the fumes given off during a self-clean cycle and may die if left in the same room as the oven during such a cycle.
- During a self-clean cycle, the oven reaches higher temperatures than it does for cooking. Under such conditions, the surfaces may get hotter than usual.

### **Light source information**

- This product contains a light source of energy efficiency class G. The light source used in this appliance is not suitable for room illumination.



### **To access your Warranty and Service Guide**

Scan the QR code with your smartphone to access your warranty and book a service, refer to your separate warranty and service book or view online at:

This product has been designed for use in a domestic (residential) environment. This product is not designed for any commercial use. Any commercial use by the customer will affect this products Manufacturer's Warranty.

For spare parts, please contact Fisher & Paykel Customer Care. Spare parts are available for all Fisher & Paykel products for a minimum period of 10 years from the date of manufacture.

STEAM OVEN

The Environmentally Friendly Use Period (EFUP) for all enclosed products and their parts are per the symbol shown here, unless otherwise marked. The Environmentally Friendly Use Period is valid only when the product is operated under the conditions defined in the user guide.



Names & content information of hazardous substances in product

| PART NAME                             | HAZARDOUS SUBSTANCE |    |    |        |     |      |     |      |     |      |
|---------------------------------------|---------------------|----|----|--------|-----|------|-----|------|-----|------|
|                                       | Pb                  | Hg | Cd | Cr(VI) | PBB | PBDE | DBP | DIBP | BBP | DEHP |
| Control module(s)                     | X                   | O  | O  | O      | O   | O    | O   | O    | O   | O    |
| Display(s)                            | X                   | O  | O  | O      | O   | O    | O   | O    | O   | O    |
| Light module(s)                       | X                   | O  | O  | O      | O   | O    | O   | O    | O   | O    |
| Solenoid                              | X                   | O  | O  | O      | O   | O    | O   | O    | O   | O    |
| Inverter                              | X                   | O  | O  | O      | O   | O    | O   | O    | O   | O    |
| Fan(s)                                | X                   | O  | O  | O      | O   | O    | O   | O    | O   | O    |
| Humidity sensor<br>(some models only) | X                   | O  | O  | O      | O   | O    | O   | O    | O   | O    |
| WiFi module<br>(some models only)     | X                   | O  | O  | O      | O   | O    | O   | O    | O   | O    |

This table is compiled in accordance with the provisions of national standards SJ/T 11364 - 2024 and GB 26572 - 2025.

- O Indicates that the hazardous substance contained in all of the homogenous materials for this part is below the limit specified in the national standards for the restricted use of hazardous substances in electrical and electronic products.
- X Indicates that the hazardous substance contained in at least one homogenous material for this part is above the limit specified in the national standards for the restricted use of hazardous substances in electrical and electronic products.
- Parts not explicitly listed do not contain hazardous substances above the limits specified in the national standards for the restricted use of hazardous substances in electrical and electronic products.

|        |                                |
|--------|--------------------------------|
| Pb     | Lead                           |
| Hg     | Mercury                        |
| Cd     | Cadmium                        |
| Cr(VI) | Hexavalent Chromium            |
| PBB    | Polybrominated biphenyls       |
| PBDE   | Polybrominated diphenyl ethers |
| DBP    | Dibutyl phthalate              |
| DIBP   | Diisobutyl phthalate           |
| BBP    | Butyl benzyl phthalate         |
| DEHP   | Bis(2-ethylhexyl) phthalate    |

