
CONVECTION SPEED OVEN INSTALLATION GUIDE

Components required	3
Accessing your product specifications	4
Unpack product	6
Remove shelves	7
Connect power	8
Position in cavity	10
Align to surroundings	11
secure to cavity	12
Refit shelves	13
Checklist	14

FISHER & PAYKEL

US CA

MINIMAL

OM24NMUNB5, OM24NMUNG5, OM24NMUB5, OM24NMUG5, OM24NMTB5

CONTEMPORARY

OM24NCUDX5, OM24NCTDX5

COMPONENTS REQUIRED

TOOLS

Not supplied

- ☐ Powered driver
- ☐ Cross-head screwdriver

PARTS



Supplied

- ☐ Screw SD #7X13 PAN PH ZP (2)

ACCESSING YOUR PRODUCT SPECIFICATIONS



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

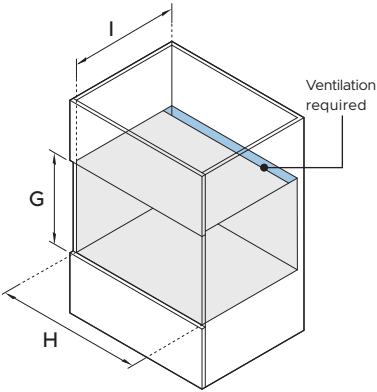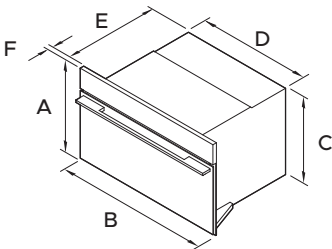

PRODUCT DIMENSIONS	inch	mm
A Overall height	18	458
B Overall width	23 7/16	596
C Chassis height	17 1/8	435
D Chassis width	21 7/8	556
E Chassis depth	21 7/16	545
F Control panel thickness	13/16	20
Depth with door fully open*	12 3/4	324

*Measured from front of control panel.

CAVITY DIMENSIONS	inch	mm
G Minimum inside height of cavity	17 5/16	440
H Minimum inside width of cavity	22 1/16	560
I Minimum inside depth of cavity*	21 7/16**	545**
Recommended cabinet height	18 1/8	460
Recommended cabinet width	23 5/8	600

*Excluding control panel thickness.

**Requires ventilation at the rear of the cavity.


PRIOR TO INSTALLATION




fisherpaykel.com/specify

1. Refer to the Planning Guide for cabinetry, cavity, panel and service specifications.

For dark cabinetry, ensure clashing has been considered and installed.

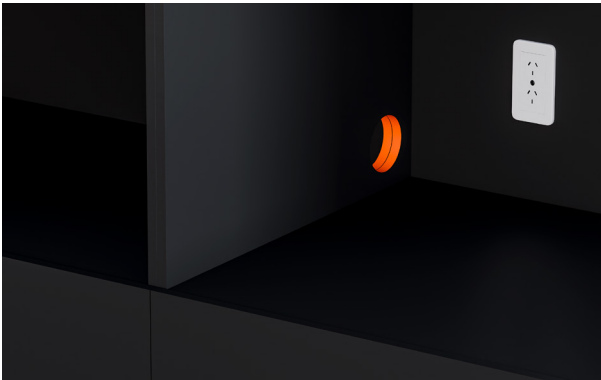

2. Ensure the cabinet meets the minimum cavity specifications required.

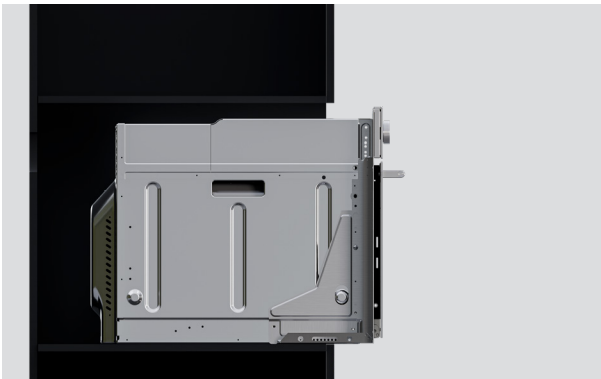

3. Ensure ventilation has been set up correctly.

UNPACK PRODUCT

- Do not lift or move the product using the door handle.
 - Keep all packing materials until the unit has been inspected.
 - Inspect the product to ensure there is no shipping damage. If any damage is detected contact the dealer or retailer you bought the product from to report the damage.
 - Fisher & Paykel is not responsible for shipping damage.
-



1. Cut all straps and remove the carton top cap.



2. Lift the carton sleeve and remove any transit packaging. Set aside any accessories.

Dispose of packaging responsibly.

REMOVE SHELVES




1. Open the door and remove all cable ties and packaging holding the oven shelves in place.




2. Grip the shelves at the front. Lift upwards and pull out from the microwave.

CONNECT POWER


FOUR WIRE CONNECTION

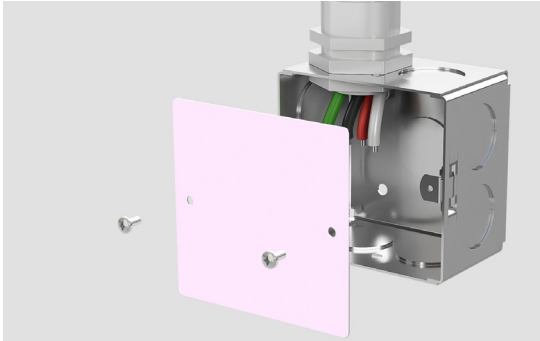

1. Disconnect the power supply and remove the junction box cover.

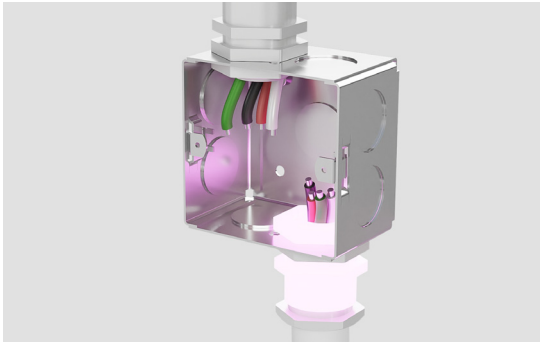

2. Connect the oven cable to the junction box through the U.L. - listed conduit connector.

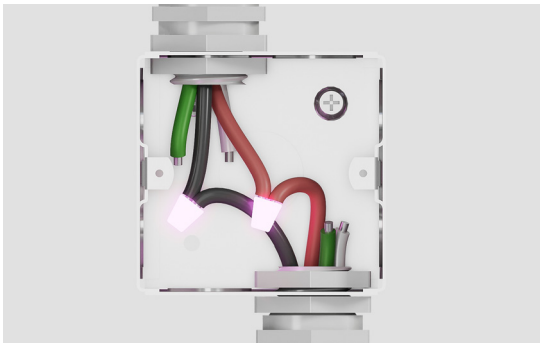

3. Connect the two black wires together with twist-on connectors and the two red wires together with twist-on connectors.

Connect electrical connection according to local codes and ordinances.


ELECTRICAL SPECIFICATIONS

208/240 V, 60 Hz (AC only); rated power 3300/3900 W.


Microwave output 900 W; frequency 2450 MHz.

CONNECT POWER


FOUR WIRE CONNECTION

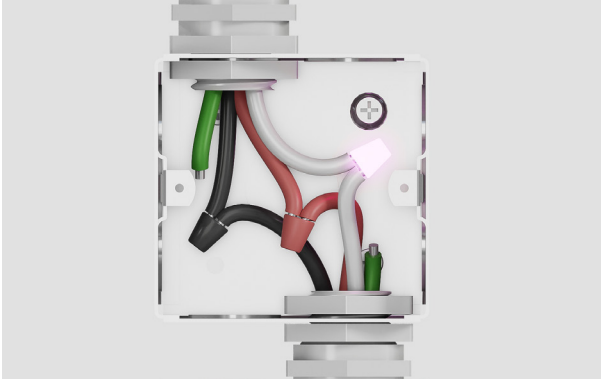

4. Separate the green and white oven cable wires. Connect the white oven cable wire to the neutral (white) wire in junction box.

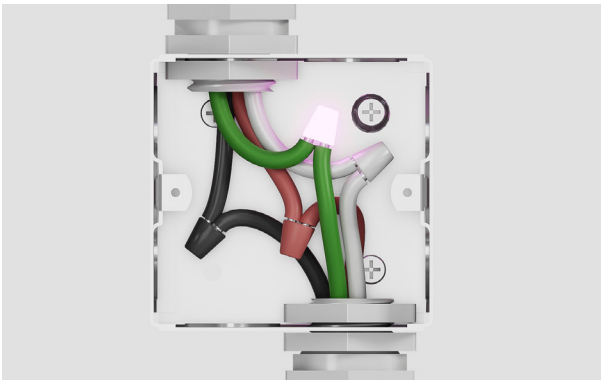


5. Connect the green grounding oven cable wire to the (green) grounding wire in the junction box. Do not connect the green grounding wire to the neutral (white) wire in junction box.

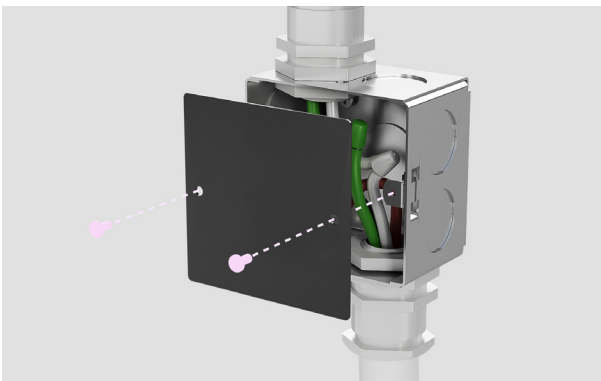

6. Replace the junction box cover.

POSITION IN CAVITY

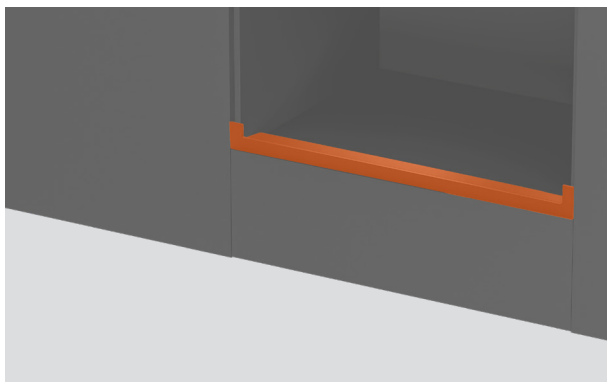

1. For light cabinetry, the supplied trim can improve the overall finish. To install, peel off the adhesive backing and press the trim firmly into place on the cavity*.



2. Lift product into cavity.

*To purchase cabinetry trim as an optional accessory, visit fisherpaykel.com

ALIGN TO SURROUNDINGS




1. Align microwave with surrounding cabinetry and appliances.




2. Ensure the vertical gaps are even before making any horizontal adjustments.

SECURE TO CAVITY

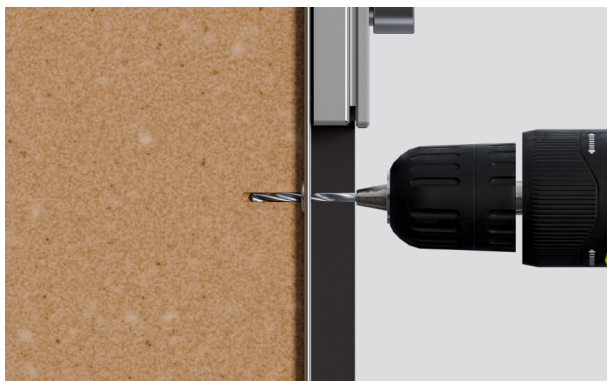

1. Using the product as a guide, pre-drill 2 x 1/8" (3mm) pilot holes.

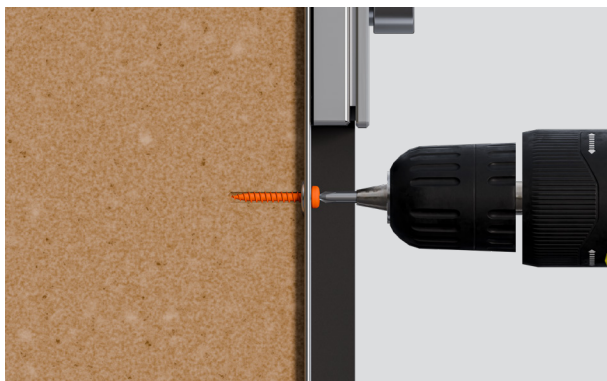

2. Secure oven to cavity using the 2 x screws provided.

REFIT SHELVES



1. Reposition shelves in the oven at the desired level.

Ensure shelves are level and correctly positioned with the guard rail at the back.

CHECKLIST

Installation checks

- ☐ All clearances are correct.
- ☐ The product is level and securely fitted in the cabinetry.
- ☐ Ensure all ventilation has been set up correctly.
- ☐ All internal packaging is removed.
- ☐ The isolating switch can be easily reached.

Test operation

- ☐ Turn product on at the power supply.
- ☐ Follow the on-screen guidance to connect the product to WiFi and set the clock.

Complete and keep for safe reference:

Model	_____
Serial no.	_____
Purchase date	_____
Purchaser	_____
Dealer address	_____
Installer's name	_____
Installer's signature	_____
Installation company	_____
Installation date	_____

