

WASH PROGRAMME DATA

DW60FC3X3, DW60FC3B3

CYCLE	WASH PROGRAMME							
	AUTO	HEAVY	MEDIUM	LIGHT	ECO*	60 MIN	RINSE	GLASSWARE
Pre wash	n/a	45°C	Yes	n/a	Yes	n/a	n/a	n/a
Main wash	45 – 68°C	68°C	55°C	45°C	45°C	60°C	n/a	45°C
Post rinse	35°C	Yes	Yes	55°C	Yes	45°C	n/a	55°C
Final rinse	60°C	60°C	60°C	55°C	40°C	55°C	Yes	60°C
Drying phase	Yes	Yes	Yes	Yes	Yes	Yes	n/a	Yes

*Reference programme for energy label compliance with AS/NZS 2007 and AS/NZS 6400

Wash times can vary depending on the incoming water temperature, ambient conditions and type of dish load. Wash times are only APPROXIMATE on the electronic display (where applicable) and based on 20°C incoming water.

STANDARDS TEST


The dishwasher is tested to AS/NZS 2007 and AS/NZS 6400 standards for wash and dry performance, energy and water consumption using the parameters detailed below.

Wash programme	Eco The door will auto open 100mm - 125mm during drying phase
Powdered detergent quantities (AS/NZS Reference Detergent)	5 g pre-wash + 8 g main wash
Rinse aid dosage level (AS/NZS Reference Rinse Aid)	5
Maximum number of place settings	15
Height adjustment of upper basket	Ensure the upper basket is set in the lowest position

Recommended loading patterns



Upper basket

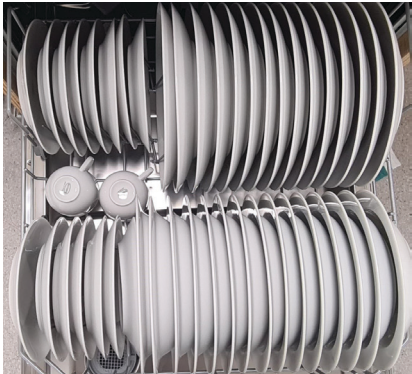


Lower basket



Cutlery tray

STANDARDS TEST

Measuring the auto-door open distance

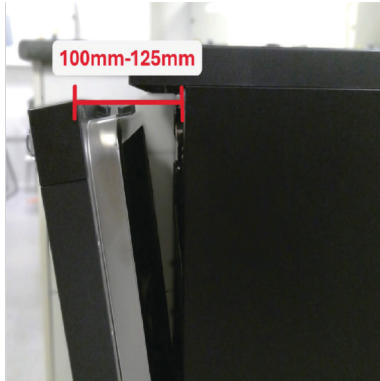

At the end of the program, leave the door open 100mm – 125mm, measured from the inside edge of the door.