
FRENCH DOOR REFRIGERATOR FREEZER **FIRST USE**

Get to know your appliance	10
Set a temperature & food mode	15
Adjust the shelves	17
Use the ice & water dispensers	19
External dispenser models	19
Set up Wi-Fi	25
Clean & maintain your appliance	26

 
GET TO KNOW YOUR APPLIANCE



How to get the best results from your refrigerator:

- Adjust the temperatures for each compartment as required.
- Register your product to get streamlined service support
- Connect to Wi-Fi to access your appliance via the app.

NON ICE & WATER MODEL

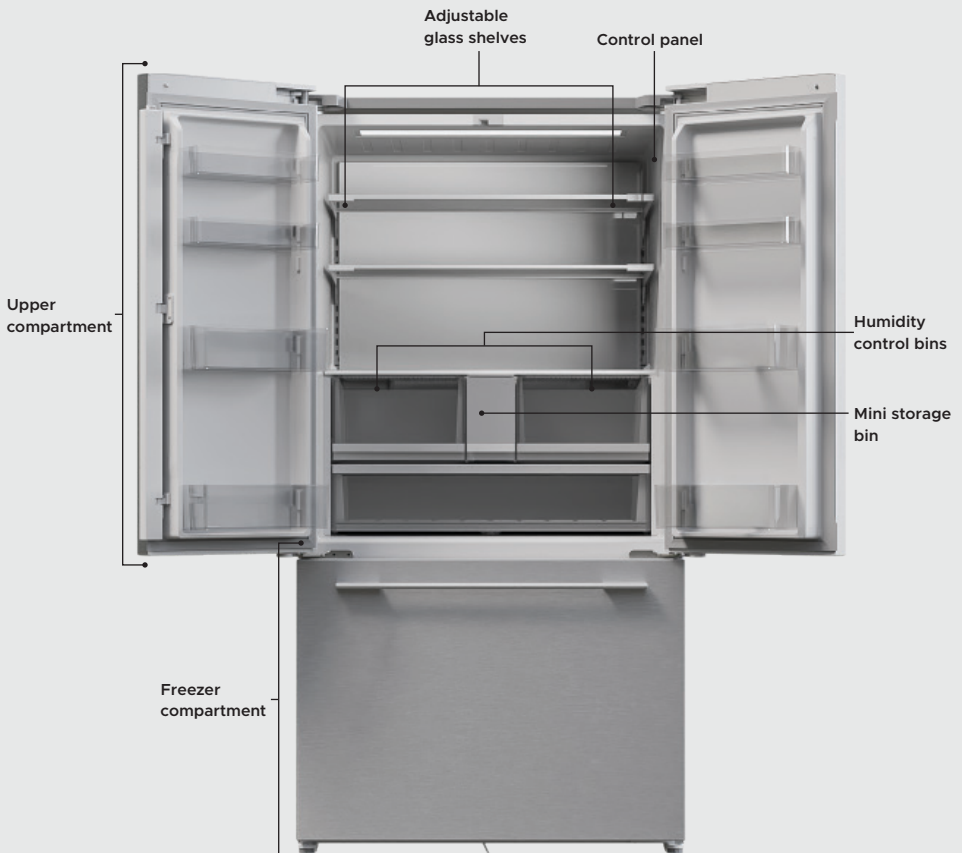


GET TO KNOW YOUR APPLIANCE



How to get the best results from your refrigerator:

- Adjust the temperatures for each compartment as required.
- Register your product to get streamlined service support
- Connect to Wi-Fi to access your appliance via the app.

 NON PLUMBED MODEL

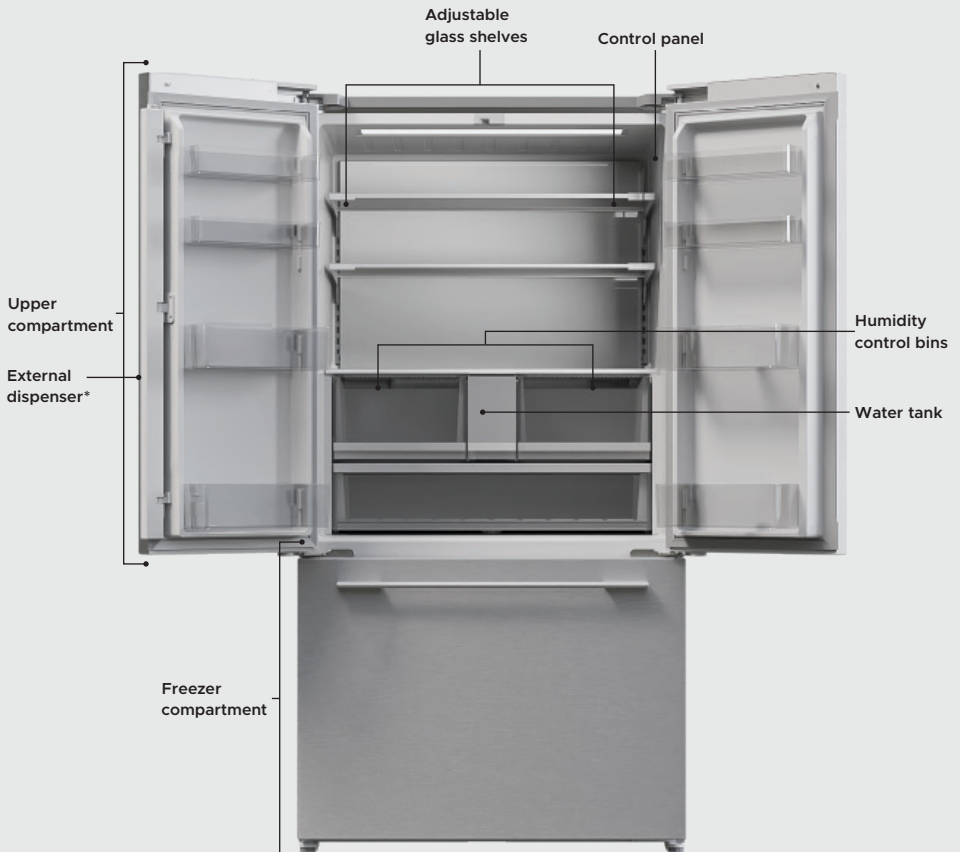

*Located on front of door

 
GET TO KNOW YOUR APPLIANCE



How to get the best results from your refrigerator:

- Adjust the temperatures for each compartment as required.
- Register your product to get streamlined service support
- Connect to Wi-Fi to access your appliance via the app.

ICE & WATER MODEL

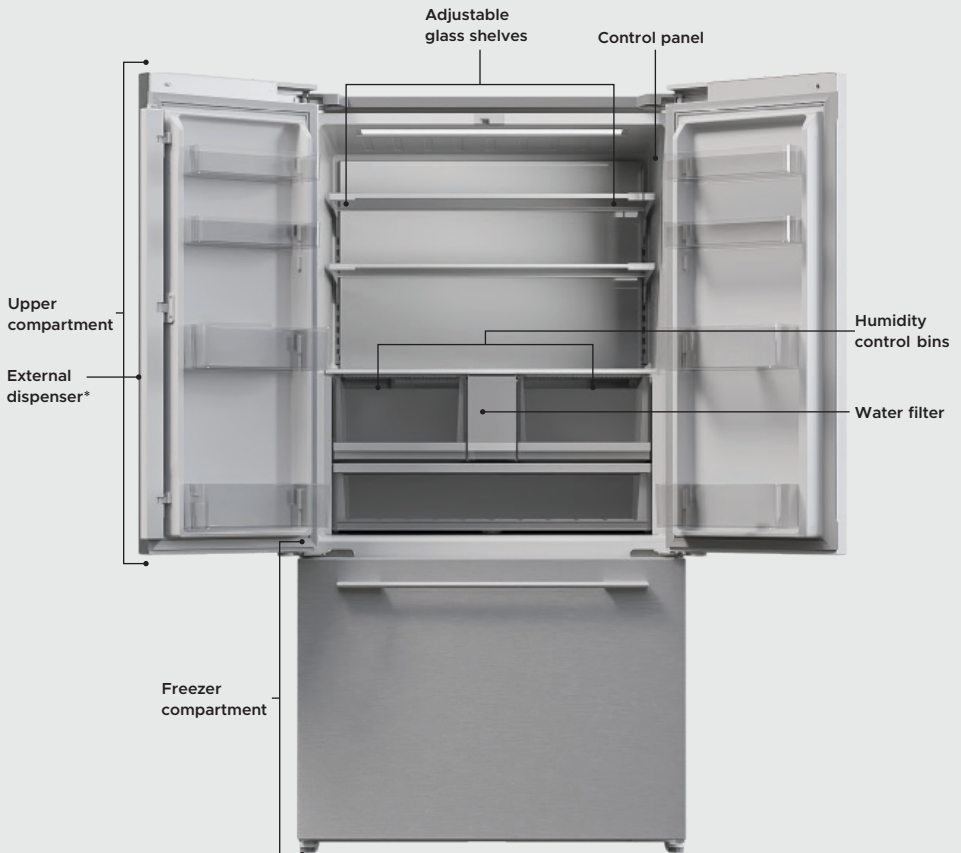

*Located on front of door

 
GET TO KNOW YOUR APPLIANCE



How to get the best results from your refrigerator:


- Adjust the temperatures for each compartment as required.
- Select a food mode for the variable temperature zone to suit the items you are storing.
- Register your product to get streamlined service support
- Connect to Wi-Fi to access your appliance via the app.

INTERNAL PITCHER & DISPENSER MODEL

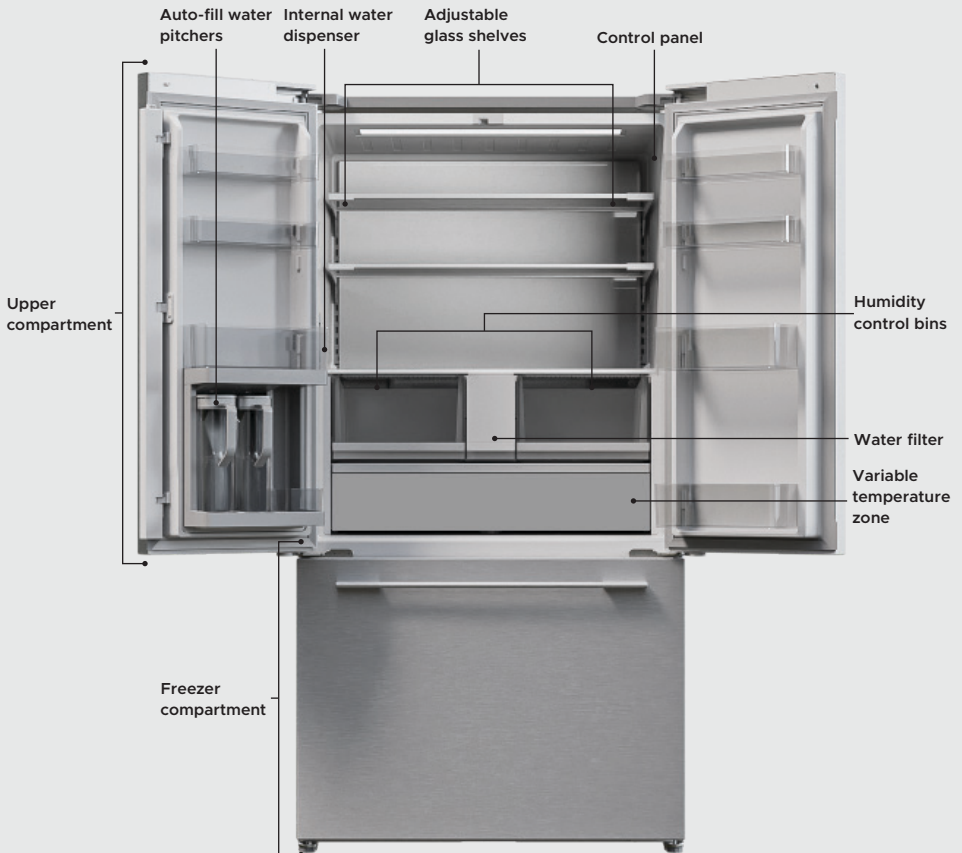

GET TO KNOW YOUR APPLIANCE CONTROL PANEL & MENU

 CONTROL PANEL

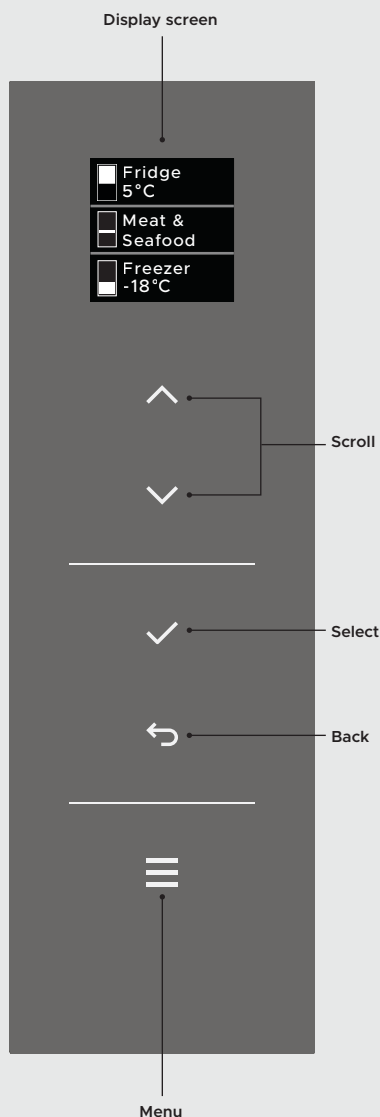

Use the menu to access product features and settings, or to return to standby. If the display has been locked, hold for two seconds to unlock.

Temperature

Select a mode or adjust the temperature.

Ice

Turn the ice maker on or off.

Ice Boost

Boost ice production for the next 24 hours.

Max Cold

Quickly cool down items that have just been added to the product.

Bottle Chill

Set a 15-minute timer when chilling wine or other beverages in the freezer.

Water Dispenser*

Lock the water dispenser to prevent accidental use.

Autofill Pitchers**

Turn autofill on or off.

Door Alarm

Mute the door alarm for 20 minutes or until the door is closed again.

Display Lock

Lock the controls to prevent accidental use.

Sabbath Mode

For the Sabbath observant. In Sabbath Mode, alarms, lights and the display will be deactivated for 80 hours.

The lights will not turn on when you open the door.

- The door alarm will not operate.
- The display will not illuminate.
- The display will be unresponsive.

Settings

Adjust the appliance settings to suit your preferences or set up a Wi-Fi connection. Refer to 'Wi-Fi connection'.

*Only applies to water dispenser models.

**Only applies to internal pitcher and dispenser models.

SET A TEMPERATURE & FOOD MODE



Select a food mode for the variable temperature zone as needed and adjust the temperatures for each compartment to suit the items you are storing.



Select a compartment:

Use the arrows ▼ or ▲ to select a compartment, then press select ✓ to confirm.

Fridge and Freezer compartments:

Use the arrows ▼ or ▲ to adjust the temperature as needed, then press select ✓ to confirm.

Variable temperature zone:

Use the arrows ▼ or ▲ to select a food mode, then press select ✓ to confirm.

Only applies to internal pitcher and dispenser models.

Press the back button ↩ at any point to exit the menu.


SET A TEMPERATURE & FOOD MODE



The following food modes and temperatures are available for each compartment.

COMPARTMENT	MODE	
Fridge compartment	FRIDGE (1 to 8°C)	For fresh, everyday foods such as fruit and vegetables, dairy products, meats, seafood, ready-to-eat foods, leftovers, sauces, preserves and drinks.
Freezer compartment	FREEZER (-22 to -14°C)	For general frozen items that require storage between 1 – 12 months.
Variable temperature zone	FRUIT AND VEGETABLE (3°C)	For fresh fruit and vegetables.
	BEVERAGE (2°C)	For chilling beverages including beer, champagne and wine.
	MEAT AND SEAFOOD (0°C)	Store highly perishable meats and seafood for a longer period of time.

 ADJUST THE SHELVES

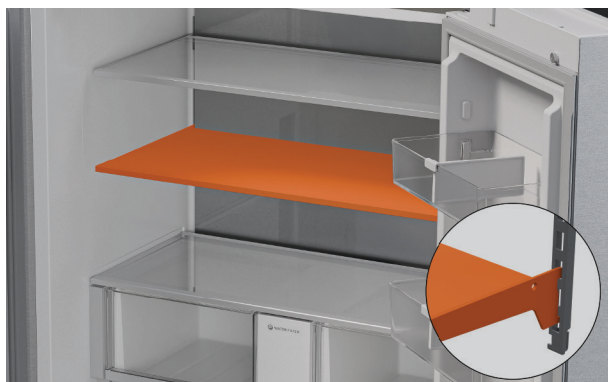

Glass shelves

Adjust height or remove as needed. The shelves hook onto supports at the rear.

To remove, tilt shelf up to dislodge it from support, then pull it out.

To refit, hook the shelf back onto supports at desired height.



Door shelves

Adjust height or remove. Shelves slot onto the hooks on the sides of the door.

Bins

The bins in each compartment can be removed as needed for cleaning or making extra space. Different models have a different system to remove and refit bins. Follow the steps that apply to your model.



System 1. To remove, slide the bin out then tilt up to lift free of the side runners.

To refit, place back on the side runners and push back into place.

ADJUST THE SHELVES



System 2. To remove, pull the bin towards you, and push in tabs on either side to release bin from runners.

To refit, extend the runners and place the bin on top. Slowly push bin onto tabs until you feel them clip into place.

The freezer compartment drawer includes a magnetic latch to assist easy access to the freezer top bin during opening. To remove the top bin, fully extend the drawer until the bin releases automatically, or gently push it away by hand.

 
USE THE ICE & WATER DISPENSERS EXTERNAL DISPENSER MODELS

Your refrigerator comes with a water dispenser located on the front of the left hand door.

For best results:

- Flush the water filter before using the dispenser for the first time. To do this, run 8 litres of water through the water dispenser (only applies to plumbed models).
- Discard the first full bins of ice as they may be discoloured.
- Replace your water filter as soon as possible after you get a reminder.
- When using the dispenser for the first time it may take a few minutes for water to begin flowing.
- When dispensing a lot of water a time-out period may occur. Wait a few minutes before using the dispenser again.

DISPENSER CONTROLS

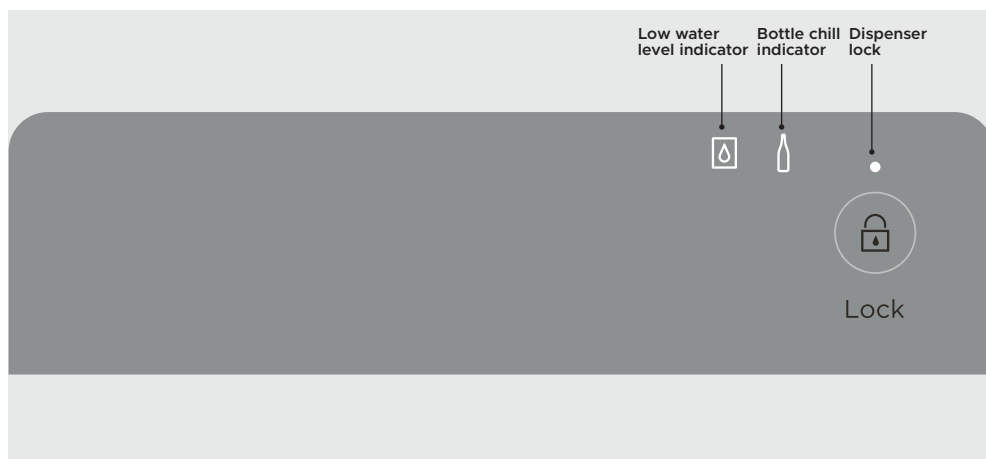

Low water level indicator*	Water tank level is low. Refill tank to continue water dispensing and ice making.
Dispenser lock	Press and hold to lock or unlock the dispenser.
Bottle chill indicator	Icon will illuminate when BOTTLE CHILL is activated and flashes when beverage is ready.

*only for non-plumbed models

USE THE ICE & WATER DISPENSERS EXTERNAL DISPENSER MODELS



Dispensing water

Gently press the dispensing pad with a glass or container.

Pressing harder will not increase the flow of water.

To stop, simply pull your glass or container away from the dispensing pad.

USE THE ICE & WATER DISPENSERS INTERNAL DISPENSER MODELS

Your refrigerator comes with two autofill pitchers, and a water dispenser.

For best results:

 
- Flush the water filter before using the dispenser for the first time. To do this, run 8 litres of water through the water dispenser (only applies to plumbed models).
- Discard the first full bins of ice as they may be discoloured.
- When using the dispenser for the first time it may take a few minutes for water to begin flowing.
- When dispensing a lot of water a time-out period may occur. Wait a few minutes before using the dispenser again.
- Replace your water filter as soon as possible after you get a reminder.

AUTOFILL PITCHERS



Position the pitchers on the dispenser shelf to activate the dispenser.

Tilt the pitchers forward slightly to insert, ensuring they are correctly positioned in the slots.

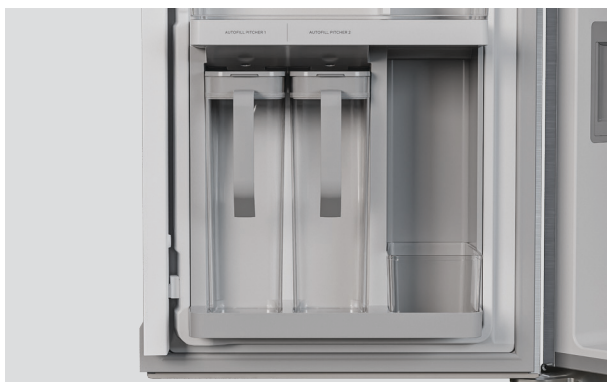

The dispenser light will be illuminated when the pitchers are correctly positioned and the dispenser is turned on.

The autofill pitchers can be turned on or off by going to the menu.

When the doors are closed the pitchers will fill automatically and stop when they are full.

Take care when closing the door and do not over fill the bottom refrigerator shelf. Any bulky or overhanging items on the shelf may dislodge the pitchers when the door is closed.

USE THE ICE & WATER DISPENSERS INTERNAL DISPENSER MODELS



Dispensing water

Gently press the dispensing pad with a glass or container.

Pressing harder will not increase the flow of water.

 
To stop, simply pull your glass or container away from the dispensing pad.

The water dispenser can be locked for cleaning or to prevent accidental use by going to the menu.

USE THE ICE & WATER DISPENSERS NON PLUMBED MODEL



If your refrigerator is non-plumbed but has a water dispenser, water is supplied to the dispenser and ice maker from an internal tank.

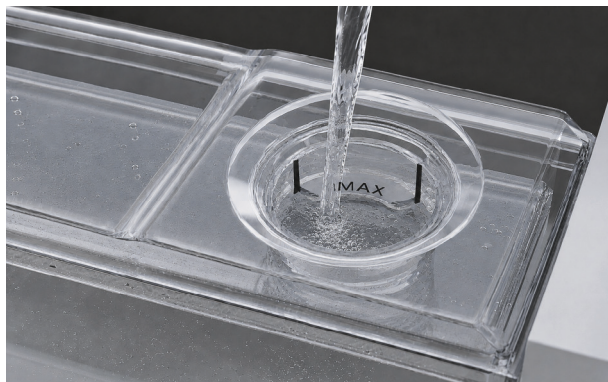

Filling the water tank.

Remove the water tank and unscrew the circular grey lid.

Refill the water tank to the maximum level line with filtered water only. Then return it to the fridge.

Ensure the water tank is correctly in place before using the water dispenser.



Emptying the water tank

Pull out the water tank from fridge. Remove the clear top and empty the tank.

Refill the water tank and return it to the fridge.

Ensure the water tank is correctly in place before using the water dispenser.

USE THE ICE & WATER DISPENSERS

MANUAL ICE MAKER

The manual ice maker is located at the top of the freezer compartment.



Before using the ice tray for the first time, remove it from the freezer compartment and fill with fresh water up to the fill line. Place the tray back into the freezer and allow several hours for the water to fully freeze before using ice.

INTERNAL AUTOMATIC ICE MAKER

The automatic ice maker(s) are located at the top of the freezer compartment and automatically produces ice cubes into the bins below. Keep the ice cubes level in the bin to maximise storage space.

When first turned on it may take several hours to begin producing ice.



There are removable scoops on the front of the bin.

The ice maker can be turned on or off by going to the menu.

Dual ice maker model shown in image.

Turn your ice maker off if:

- There is no water supply for several hours.
- You are removing the ice storage bin for a long period of time.
- You are going on holiday.

Making extra ice

You can turn on **ICE BOOST** to make extra ice for up to 24 hours. Turn **ICE BOOST** on or off via the menu.

 
SET UP WI-FI

Your appliance may be connected to your home wireless network and operated remotely using the app.

Getting started

- Ensure your home Wi-Fi network and Bluetooth on your mobile device are turned on.
- You will be given step-by-step guidance on mobile device.
- It may take up to 10 minutes to connect your appliance.

Connecting to Wi-Fi

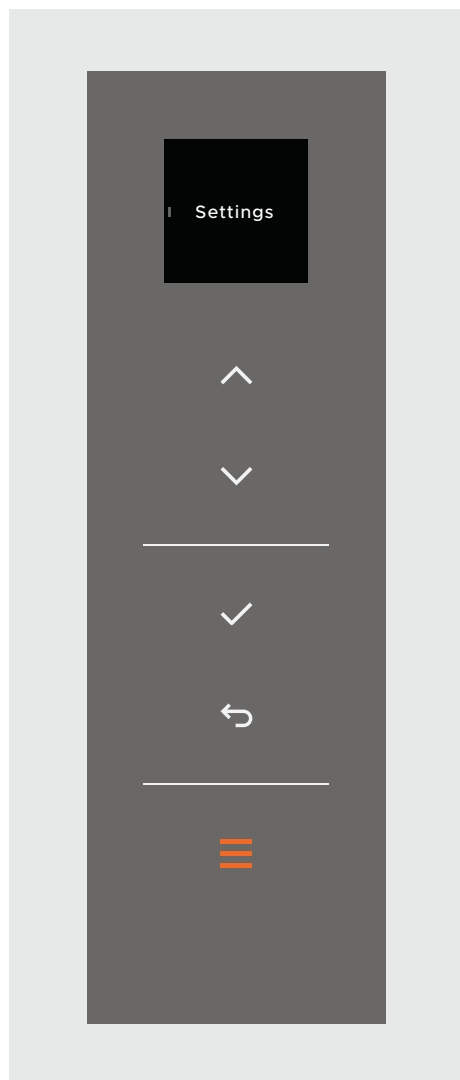

On your mobile device:

- ① Download the app from www.fisherpaykel.com/connect
- ② Register and create an account.
- ③ Add your appliance and set up the Wi-Fi connection.

On your appliance

1. Press the menu button  to access the menu, then use the arrows  or  to scroll to **SETTINGS**.

Press select  to enter settings.

2. Press the arrows  or  to scroll to **WI-FI SETUP**.

Press select  to enter Wi-Fi setup.

3. Follow the prompts on the display and in the app to complete setup.

Make these steps a regular part of your cleaning routine to get the best results from your appliance.

- Remove shelves and bins to make cleaning easier.
- Do not use harsh or abrasive cleaners.
- Replace your water filter regularly.

Internal surfaces, shelves and bins

Remove shelves and bins as needed. Clean with a damp cloth and mild detergent. Dry with a clean, lint-free cloth. Use a small brush to clean difficult to reach spots if needed.

Exterior surfaces and door

Clean with water and mild detergent, rinse, then dry with a clean lint-free cloth. Do not use abrasive cleaners, glass cleaners, solvents, or scourer pads, as these may damage the door surface. Clean around the door seal with a small brush and water or mild detergent as needed.

Cabinet surround

We recommend regularly vacuuming the floor around your appliance and cleaning behind it once or twice a year to maintain optimum performance.

Water filter

You will get a reminder when it's time to replace your water filter. We recommend replacing the filter as soon as possible after getting the reminder. To fit the replacement filter, follow the instructions supplied with new filter.

Water dispenser

Lock the dispenser before cleaning to prevent water spilling. Clean with a damp cloth.

External dispenser models only: Remove the drip tray and clean with water and mild detergent. Ensure the drip tray is back in place before using the dispenser again.

Water tank (non plumbed models only)

Empty the water tank and clean with water and mild detergent. Ensure the tank is back in place before using the dispenser again.

Autofill water pitchers (internal dispenser models only)

The water pitchers can be taken apart and cleaned using hot water and mild detergent. We recommend washing the pitchers before using them for the first time.



Care, maintenance and troubleshooting information

Scan the QR code or visit fisherpaykel.com and search for your model code.

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets
and are subject to change at any time.

The product specifications in this guide apply to the specific products and models
described at the date of issue. Under our policy of continuous product improvement, these
specifications may change at any time.

For current details about model and specification availability in your country,
please go to our website or contact your local Fisher & Paykel dealer.

433415A 08.26