
DISHWASHER

FIRST USE

Get to know your appliance	3
Racking features	5
Load dishware	7
Use rinse aid	8
Load detergent	9
Select a suitable cycle	10
Select a suitable modifier	11
Set a cycle	12
Set up Wi-Fi and remote mode	13
Adjust the settings	14
Settings	15
Maintain wash performance	17

FISHER & PAYKEL

US CA

DISHWASHER

DW24UDT4X4, DW24UDT2X4, DW24UCT2X4

GET TO KNOW YOUR APPLIANCE

How to get the best results from your dishwasher

 
- Check that your dishware is dishwasher safe
- Keep the spray arms clear of obstructions
- Load items so water from the spray arms can reach them
- Use correct detergent quantity
- Choose cycle appropriate for your load
- Use rinse aid
- Clean the filter
- Run regular deep clean cycles
- Descale to remove mineral buildup
- Register your product to get streamlined service support.



Cutlery/Utensil tray

Upper basket
(adjustable height)

Cutlery
basket

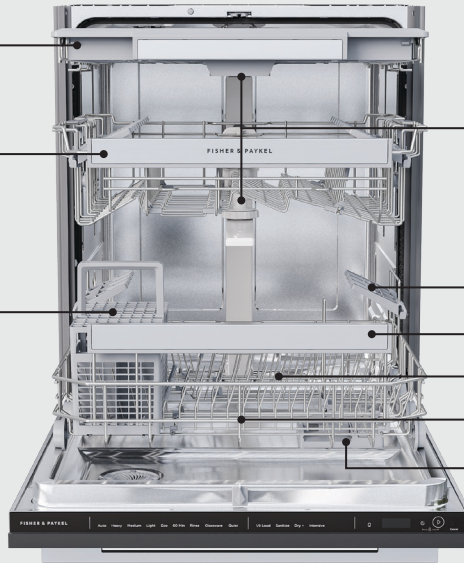

Spray arms*

Cup racks

Lower
basket

Adjustable tines

Filters**

Detergent
& rinse aid
dispenser

 
Control
panel

*A third spray arm is located beneath the lower rack.


** Filters are located below the lower spray arm.

GET TO KNOW YOUR APPLIANCE

MODEL: DW24UDT4X4

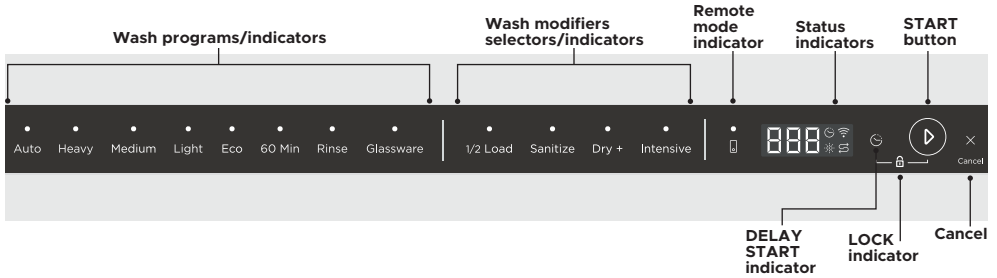

MODELS: DW24UDT2X4, DW24UCT2X4.

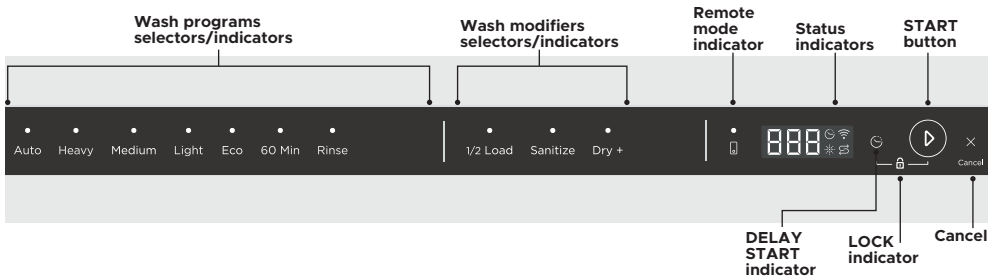 

Wash program selectors	Press to select a wash program.	
Wash modifier selectors	Press to select a wash modifier.	
Wash program indicators	Indicates which program is selected.	
Wash modifier indicators	Indicates which modifier is selected.	
▶ START button	Press to start a wash cycle.	
🕒 DELAY START indicator	Indicates when DELAY START is set.	
🔒 LOCK indicator	Indicates when drawer is locked.	
Status Indicators	📶 Wi-Fi indicator	Indicates when product is connected to Wi-Fi.
	⚙️ Rinse aid indicator	Indicates when rinse aid level is low.
	🧼 Water softener salt indicator	Indicates when the built-in water softener needs more salt.

RACKING FEATURES



This dishwasher features a versatile and adjustable racking system designed to accommodate a wide variety of dish sizes, cookware shapes, and utensil types.



Cutlery basket

Use the grid to separate cutlery items and stop them from nesting together. The grid clips onto the top of the cutlery basket.

Top grid can be removed.



Cutlery/ Utensil tray

Place cutlery into the notches with the head facing inward.

Place larger utensils in the centre of the tray.

Slide the side sections inward to create additional space for items in the basket below.



Upper basket

Has three levels of adjustment.

To raise: Pull the basket upwards until it clicks into place.

To lower: Pull up the levers on each side to release, lower to desired positions and then release the levers to secure.

RACKING FEATURES

 


Lower basket

Place plates, bowls, and larger dishware in the lower basket.

Use cutlery basket for cutlery. Refer to 'Cutlery basket'

Lower basket has adjustable tines and holders to suit your dishware. Refer to 'Cup racks and tines' and tines'

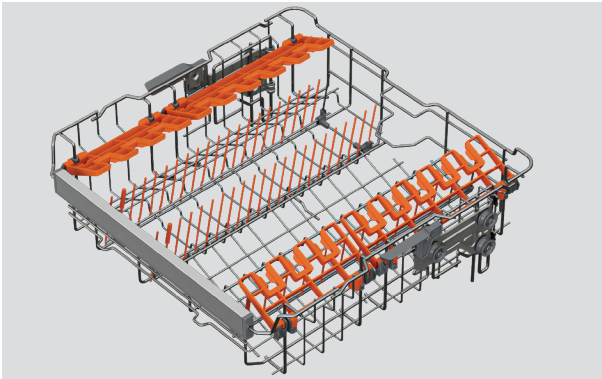

Cup racks and tines.

Adjust the height of cup racks to suit or fold out of the way to make space for other items.

*Use the holders to support wine glass stems.

All tines can be folded down to make space for other items.

 
*Model DW24UDT4X4 features stemware grippers instead of holders.

LOAD DISHWARE

Tips for energy efficiency



- Load the dishwasher to capacity.
- Remove large food scraps, but do not pre-rinse dishes as this uses more water and energy.
- Select the most appropriate program for each load. Use Eco for normally soiled dishes.

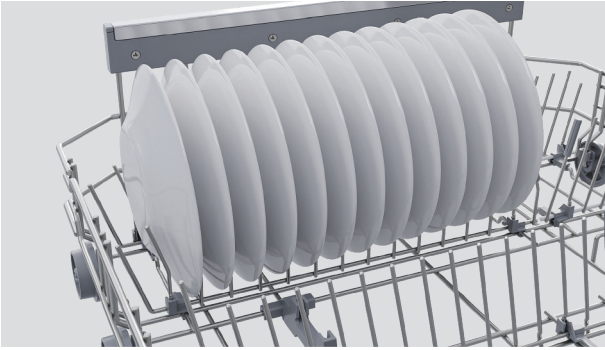

Load items effectively

Space items evenly in the dishwasher, with cups and containers facing down, so water from the spray arms can reach them and drain away. Avoid items touching as food can become trapped and affect performance.



Check for obstructions

Check there are no items that will prevent the spray arms from rotating.



 
Load cutlery correctly

Load sharp knives with handles up. Mix spoons, knives and forks in each section to prevent nesting.


USE RINSE AID




Rinse aid improves dry performance and prevents tarnishing on metal and streaks on glass and dishware. Fill the rinse aid dispenser before adding detergent.

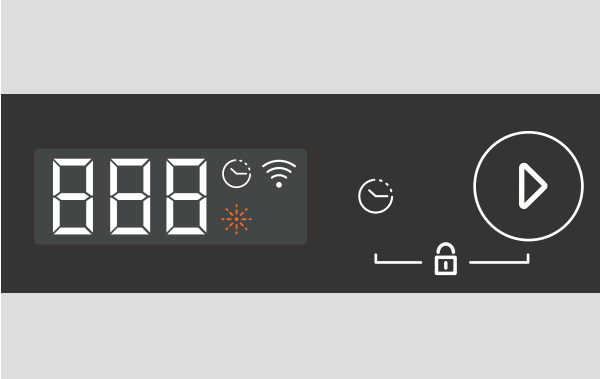

 - 1.** Check the rinse aid indicator. Only refill rinse aid if the indicator is illuminated.

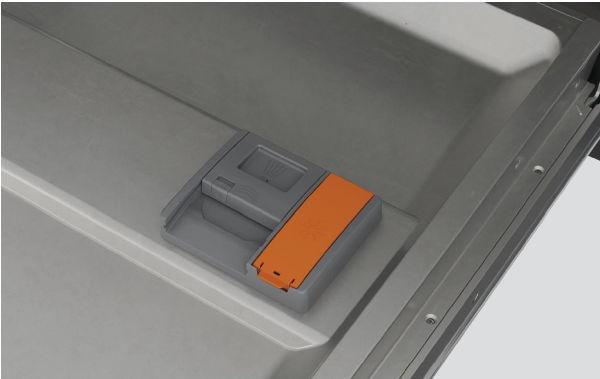

 - 2.** Pull the latch up to open the rinse aid compartment.

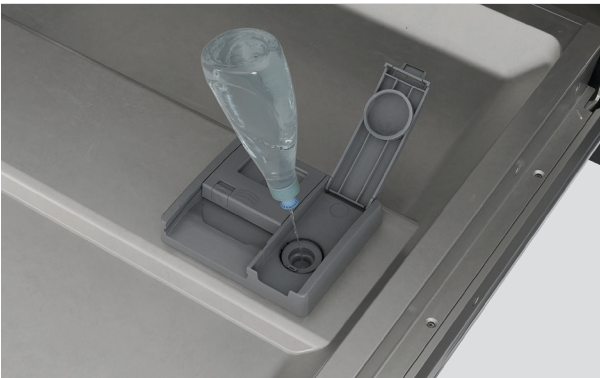

- 3.** Pour rinse aid into the opening. Clean spills immediately to prevent excessive foaming. Close the cover until it clicks shut.

LOAD DETERGENT



We recommend:

- Premium powdered detergents and tablets to effectively clean dishes, utensils and filters in your dishwasher.



We do not recommend:

- Non-premium powdered detergents and tablets, as these can result in faster grease buildup and reduced wash performance.
- Detergent sheets, as these produce excessive foam.
- Handwashing dish detergents and laundry or other detergents.



If using powdered detergent

Press the latch to open the dispenser.

Add the recommended quantity of detergent, and close the dispenser. See Care and Maintenance guide for details.



If using tablets

Place a tablet directly into the detergent dispenser.

SELECT A SUITABLE CYCLE




Each cycle is designed for a specific purpose and has different time, energy and water requirements. Choose a cycle that balances load type and efficiency to get the best results.

⌚ TIME | ⚡ ENERGY | 💧 WATER

WASH PROGRAMS

ECO DEFAULT

 For normally soiled dishes for optimum water and energy use. The US/Canada Energy Guide is based on this cycle.

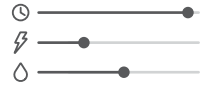

AUTO DRY+

For mixed or varied loads. The dishwasher automatically selects the optimum wash program.



 
HEAVY DRY+, SANITIZE, INTENSIVE*, 1/2 LOAD

Designed for heavily soiled pots, pans and dishes.



MEDIUM DRY+, SANITIZE, INTENSIVE*, 1/2 LOAD

For dishes that are quite heavily soiled or to remove food that has been left overnight.

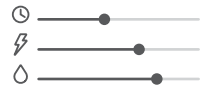

LIGHT DRY+, 1/2 LOAD

For very lightly soiled dishes with easy-to-remove soils. No drying.



60MIN DRY+, INTENSIVE*, 1/2 LOAD

For dishes that are quite heavily soiled or food that has been left to dry overnight. No drying.



GLASSWARE* DRY+, 1/2 LOAD

For lightly soiled and heat sensitive crockery and glassware such as wine glasses.



RINSE

Prevents odours and soils from drying on dishes.



*Only available on models DW24UDT4X4.

SELECT A SUITABLE MODIFIER

WASH MODIFIERS

DRY+


DRY+ increases the final rinse temperature and the length of the drying phase.

1/2 LOAD

1/2 LOAD adjust the wash program to more efficiently wash smaller loads.

SANITIZE

SANITIZE increases rinse temperature to 70°C. This meets the sanitisation conditions required by Section 6, NSF 184.

A successful cycle will end as normal. If the sanitize cycle is interrupted, an alert will sound and the sanitize indicator will flash. Press **START**  twice to clear alert. Repeat the cycle.

INTENSIVE*

INTENSIVE increases the water pressure in the lower rack for heavily soiled pots and pans.

 
 
*Only available on models DW24UDT4X4.

STANDARDS TESTING

Wash program standards tests are based on the **ECO** wash program. Standards testing information and wash data can be viewed online by going to <https://www.fisherpaykel.com> and searching your model code.

United States / Canada : 15 place settings.



SET A CYCLE

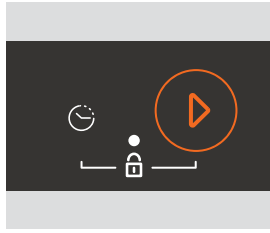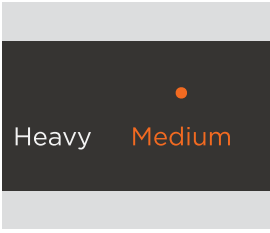

Setting a wash program

Select a wash program.

  
Press **START** (play button icon) then close the door.

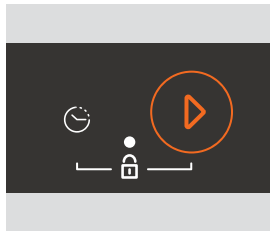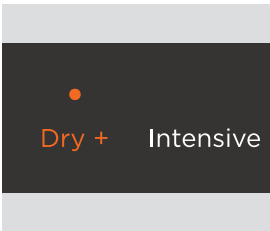

Setting a wash modifier

Select a wash modifier.

 
Press **START** (play button icon) to start the wash, then close the door.

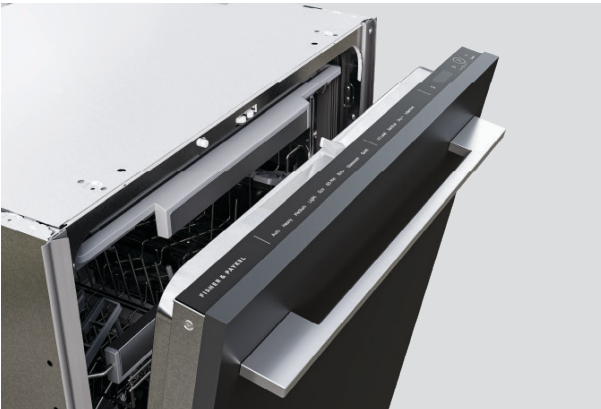

Pausing a wash

Open the door carefully at any point during the wash to pause.

 Close the door to continue wash cycle.

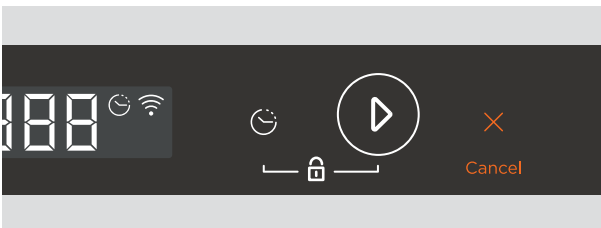

Cancelling a wash

Press and hold **CANCEL** to cancel the cycle.

SET UP WI-FI AND REMOTE MODE

Connect your appliance to your home wireless network to receive updates and to operate the appliance remotely using the app.

 
Getting started

- Ensure your home Wi-Fi network is turned on and there is no wash cycle in progress.
- You will be given step-by-step guidance on both your appliance and mobile device.
- It may take up to 10 minutes to connect your appliance.






On your mobile device:

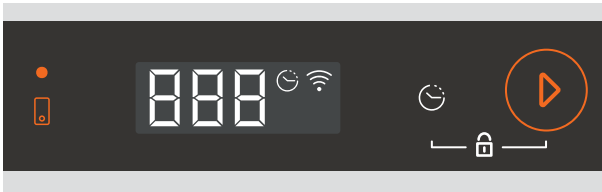
- 1 Scan the QR code to download the app from www.fisherpaykel.com/connect.
- 2 Register and create an account.
- 3 Add your appliance and set up the Wi-Fi connection.




Connecting to Wi-Fi

 1. Press and hold **REMOTE**  and **START**  together for 4 seconds.

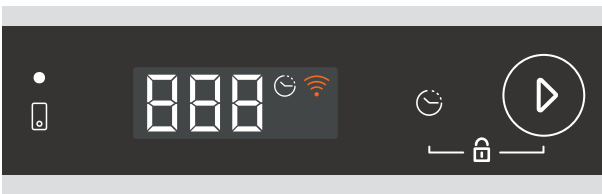

 2. Wi-Fi icon  will flash, then follow instructions in the app to complete set-up.

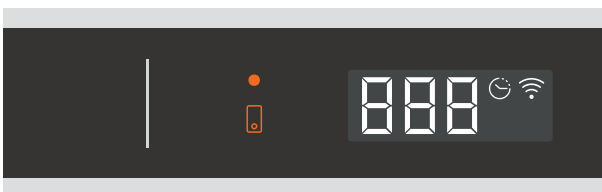



Turning remote mode ON

Ensure your dishwasher is connected to your Wi-Fi network.



Press and hold **REMOTE**  and close the door.

ADJUST THE SETTINGS

  
Each setting is displayed using a different combination of indicator lights. Use the following steps to select and adjust settings by matching the indicator combinations shown in 'Settings'.

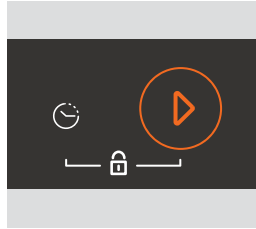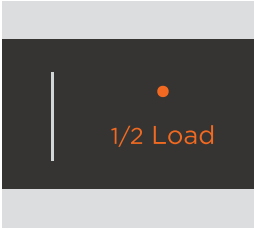

  
1. Ensure there is no wash in progress.
Press and hold **1/2 LOAD** and **START** (play icon) together for 4 seconds to enter the menu.

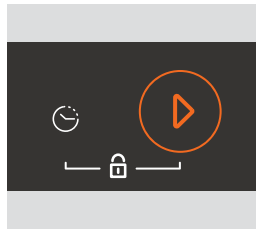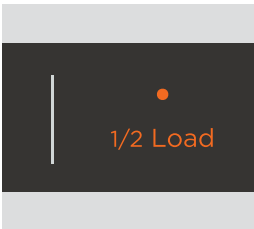

 2. Press **1/2 LOAD** to scroll through settings.

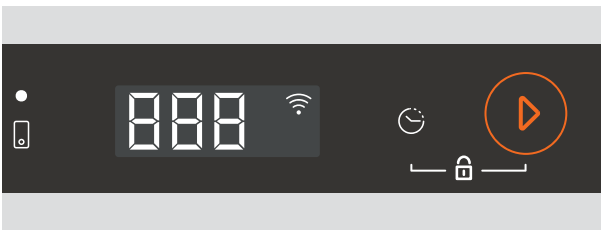

 3. Press **START** (play icon) to adjust the setting.

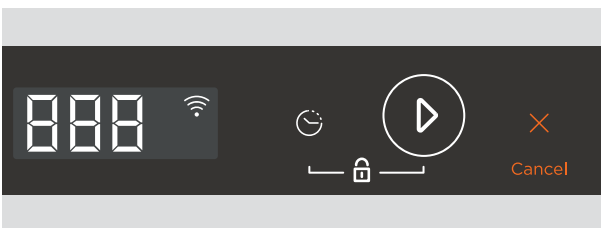

4. Press **CANCEL** to exit the menu and save your settings.

SETTINGS



 
Wi-Fi

Connect your Dishwasher to your home network to operate it via the app and to receive updates.




Auto power-on

Your Dishwasher is set to automatically power on for 30 seconds after the door is opened. This can be turned off.

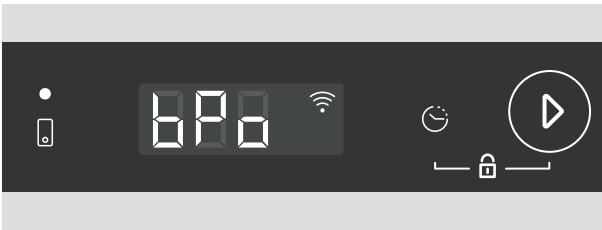


Tones

 Adjust tone settings. When set to **OFF**, all tones will be silenced except fault alerts.

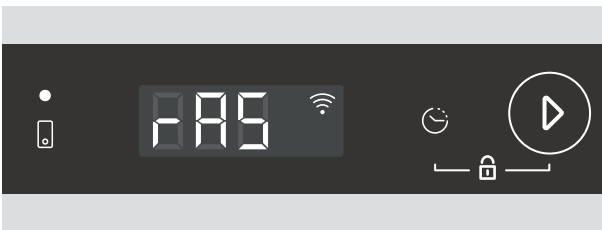

Rinse aid

 Control the amount of rinse aid dispensed from 0-5 units.

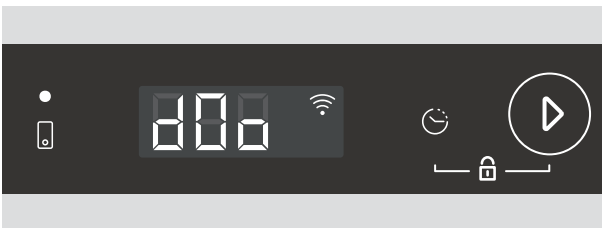

Auto door open

Enables or disables automatic door opening at the end of the wash.

SETTINGS



 
Default (some models)

Automatically default to **ECO** when in standby mode. This can be turned off.




Setting DELAY START

Press and hold **DELAYED START** ⌚ and increase the delay time. Press and hold **START** ▶ to confirm and promptly close the door.

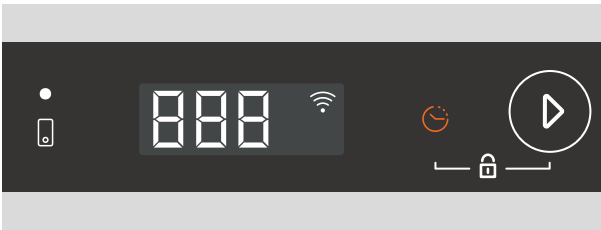

Pause or cancel DELAY START

 Open the door to pause **DELAYED START** ⌚. Open the door and press and hold **CANCEL** to cancel wash.

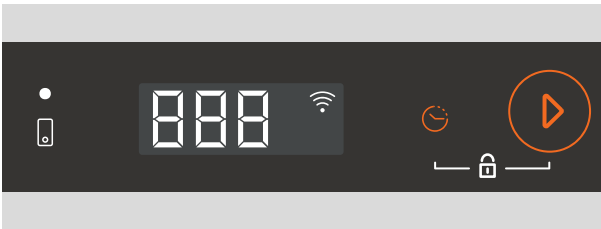

Locking the controls

Press and hold **DELAYED START** ⌚ and **START** ▶ together for 1 second. Press to confirm and close the door.

If the door is not closed within 10 seconds **KEYLOCK** will be cancelled.



Unlocking the controls

Press and hold **DELAYED START** ⌚ and **START** ▶ together for 4 seconds to unlock.

OR

Press and hold **CANCEL**.

MAINTAIN WASH PERFORMANCE

Make these steps a regular part of your cleaning routine to get the best results from your appliance.

Keep the spray arms clear

Check that nothing is obstructing the spray arms. Regularly remove and clean it with hot water and a cloth to unblock the spray holes.

Use correct detergent quantity

You may need to adjust detergent quantity based on local water hardness. Scan the QR code below for recommended detergent quantities.

Use rinse aid

Rinse aid prevents water beading on dishes, glasses and cutlery, so dishes dry faster and do not develop white spots.

Clean the filter

A blocked filter reduces the water pressure required to clean dishes. Remove and clean the filter regularly in hot, soapy water to remove food and grease buildup.

Run regular deep clean cycles

Run a cycle every few months to remove grease and buildup and more often if you use Eco detergents or low-temperature cycles. Use a premium dishwashing cleaner, follow label instructions, and run the **HEAVY** or **HEAVY SANITIZE** cycle.

Descal to remove mineral buildup

Fill the detergent dispenser and secondary compartment with citric acid crystals or descaler. Run the dishwasher on the **HEAVY** cycle followed by a wash program with detergent immediately after.



Care and maintenance information

For full troubleshooting advice and guidance on how best to use, clean and maintain your appliance, scan the QR code or visit fisherpaykel.com and search for your model code.

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets
and are subject to change at any time.

The product specifications in this guide apply to the specific products and models
described at the date of issue. Under our policy of continuous product improvement, these
specifications may change at any time.

For current details about model and specification availability in your country,
please go to our website or contact your local Fisher & Paykel dealer.

433494A 05.26