
OVEN

INSTALLATION GUIDE

Components required	3
Accessing your product specifications	4
Unpack product	6
Remove door	7
Connect power	9
Position in cavity	14
Refit door	15
Align to surroundings	16
Secure to cavity	17
Refit shelves	18
Checklist	19
GUIDE D'INSTALLATION FR	21
GUÍA DE INSTALACIÓN SP	41

FISHER & PAYKEL

MINIMAL

OB30SMPUB3, OB30SMPUG3, OB30SMPUNB3, OB30SMPUNG3,
OB30SMPSUB3, OB30SMPSUG3, OB30SMPSUNB3, OB30SMPSUNG3

CONTEMPORARY

OB30SCPUDX3, OB30SCPSUDX3, OB30SCPTDX3, OB30SCPTDB3

PROFESSIONAL

OB30SPPUX3, OB30SPPSUX3, OB30SPPTX3

COMPONENTS REQUIRED

..... **TOOLS**

Not supplied

- ☐ Powered driver
- ☐ Cross-head screwdriver

..... **PARTS**



Supplied

- ☐ #8X22 black, wafer head, Phillips, wood screws (2)
- ☐ Cabinetry trim (Part number: 553062)

ACCESSING YOUR PRODUCT SPECIFICATIONS



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

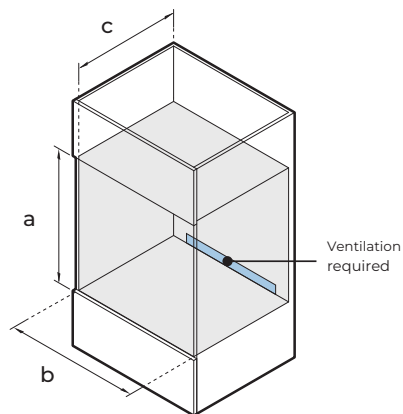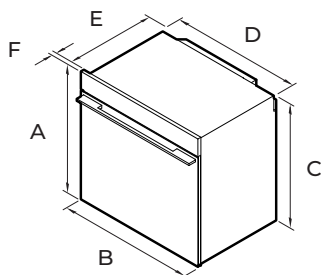

PRODUCT DIMENSIONS	in	mm
A Overall height	28 11/16	729
B Overall width	29 7/8	758
C Chassis height	27 7/8	708
D Chassis width	28 3/8	720
E Chassis depth	22 5/8	575
F Control panel thickness		
Minimal and Contemporary models	13/16	20
Professional models	15/16	24

CAVITY DIMENSIONS	in	mm
A Minimum inside height of cavity	28 1/32	712
B Minimum inside width of cavity	28 1/2	724
C Minimum inside depth of cavity*	23 1/2**	597**
Recommended cabinet height	28 3/4	731
Recommended cabinet width	30	762

*Measured from front of chassis.**Requires ventilation at the rear of the cavity.

PRIOR TO INSTALLATION



fisherpaykel.com/specify

1. Refer to the Planning Guide for cabinetry, cavity, panel and service specifications.

For dark cabinetry, ensure clashing has been considered and installed.



2. Ensure the cabinet meets the minimum cavity specifications required.

UNPACK PRODUCT

- Do not lift or move the product using the door handle.
 - Keep all packing materials until the unit has been inspected.
 - Inspect the product to ensure there is no shipping damage. If any damage is detected contact the dealer or retailer you brought the product from to report the damage.
 - Fisher & Paykel is not responsible for shipping damage.
-



1. Cut and remove all straps and outer packaging. Lift off the carton sleeve and remove any internal packing materials.



2. Slide out the front packing support, then lift the oven up and forward to remove it from the pallet

Dispose of packaging responsibly.

REMOVE DOOR



1. Open the door and remove all cable ties and packaging holding the oven shelves in place.



2. Grip the shelves at the front, making sure to hold the wire shelf and frame together. Lift upwards and pull out from the oven. For more guidance on removing the shelves, refer to page 14.




UNLOCKED



LOCKED

3. Locate the hinge locks on either side of the door. Push the locks upwards to release.


REMOVE DOOR

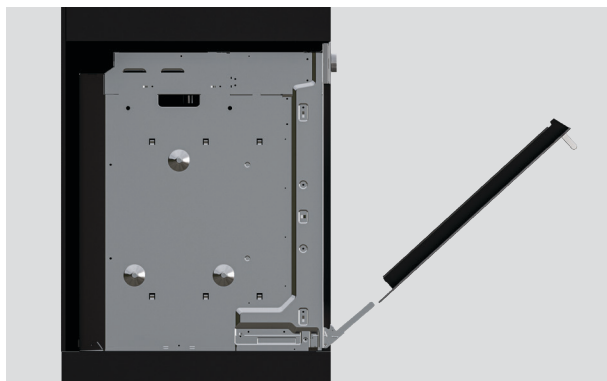

4. Holding the door on both sides, partially close the door and carefully pull the door away from the hinges.

CONNECT POWER

THREE WIRE CONNECTION

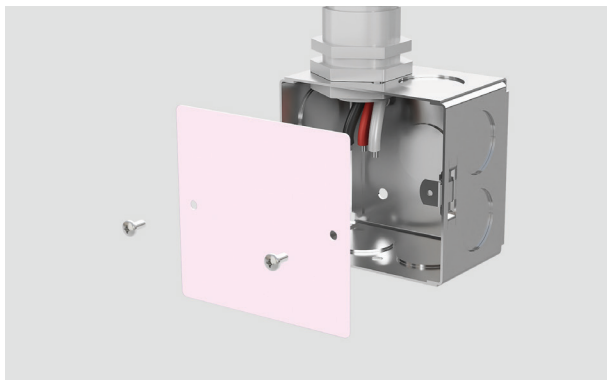

1. Disconnect the power supply and remove the junction box cover.



2. Connect the oven cable to the junction box through the U.L.-listed conduit connector.




3. Connect the two black wires together with twist-on connectors and the two red wires together with twist-on connectors.

Connect electrical connection according to local codes and ordinances.


CONNECT POWER

THREE WIRE CONNECTION

If local codes DO NOT PERMIT connecting the cabinet-grounding conductor to the neutral (white) wire in junction box.

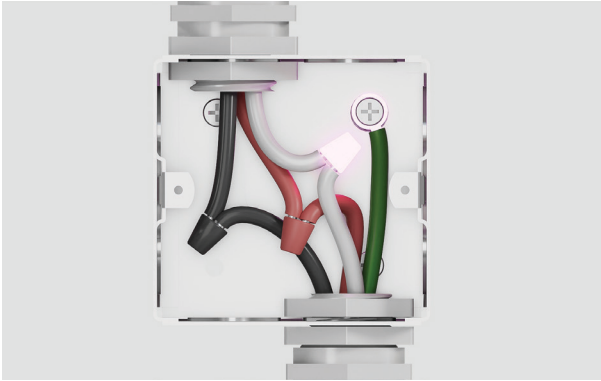

1. Separate the factory-taped green and white oven cable wires. If junction box is grounded, connect the green wire to the metal junction box with a screw before connecting the white oven cable wire to the neutral (white) wire in junction box.

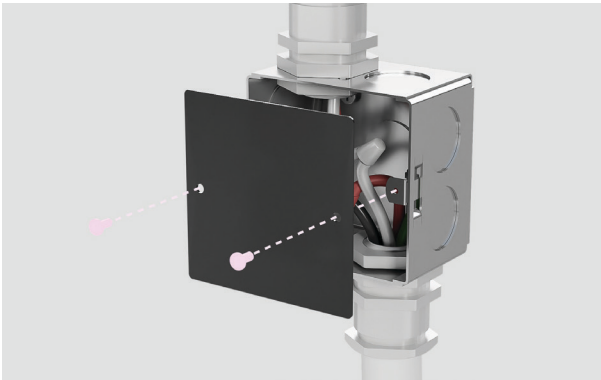

2. Replace the junction box cover.


CONNECT POWER

THREE WIRE CONNECTION

If local codes permit connecting the cabinet-grounding conductor to the neutral (white) wire in junction box.




1. Connect the factory-taped green and white oven wires to the neutral (white) wire in the junction box.

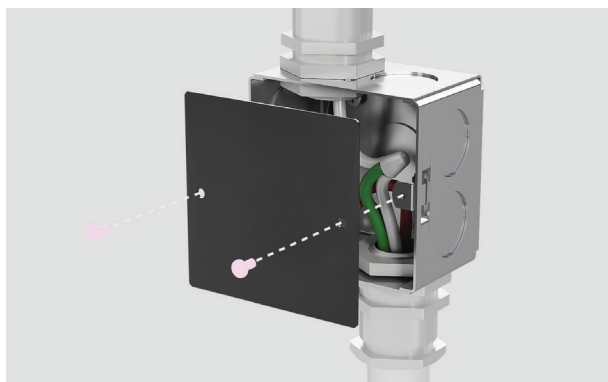

2. Replace the junction box cover.

CONNECT POWER

FOUR WIRE CONNECTION

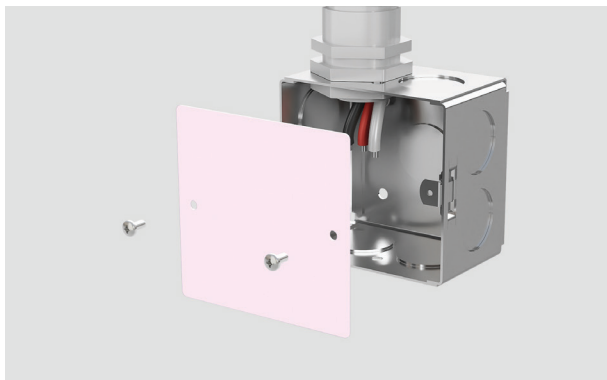

1. Disconnect the power supply and remove the junction box cover.



2. Connect the oven cable to the junction box through the U.L.-listed conduit connector.




3. Connect the two black wires together with twist-on connectors and the two red wires together with twist-on connectors.

Connect electrical connection according to local codes and ordinances.

CONNECT POWER


FOUR WIRE CONNECTION

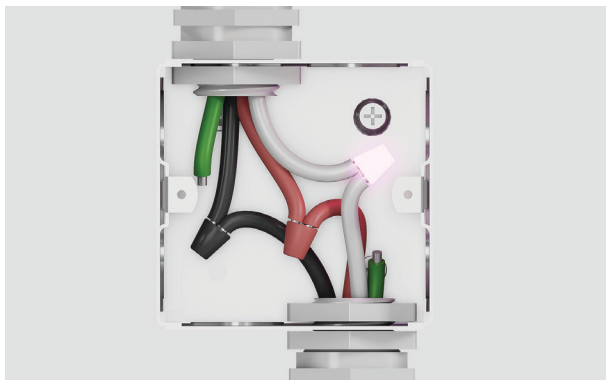

1. Separate the green and white oven cable wires. Connect the white oven cable wire to the neutral (white) wire in junction box.




2. Connect the green grounding oven cable wire to the (green) grounding wire in the junction box. Do not connect the green grounding wire to the neutral (white) wire in junction box.

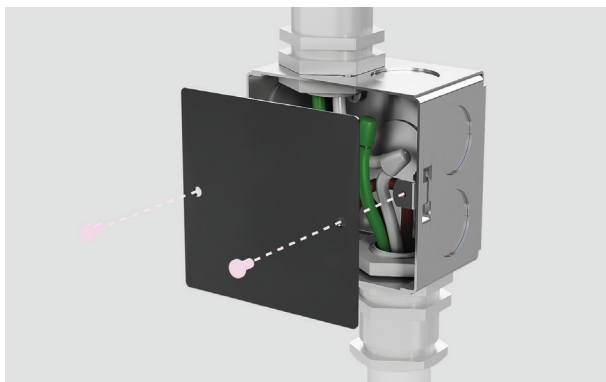

3. Replace the junction box cover.

POSITION IN CAVITY

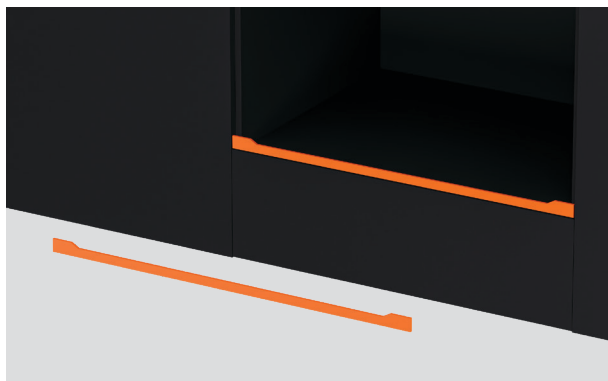


1. For dark cabinetry, the supplied trim can be used to enhance clashing finish. To install, remove the trim adhesive and press to secure to cavity*.




2. Apply protective tape to adjacent cabinetry panels before lifting product into place.

*To purchase cabinetry trim as an optional accessory, visit fisherpaykel.com

REFIT DOOR

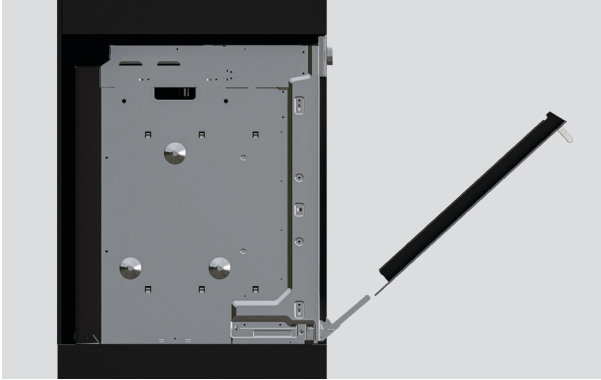

1. Holding the door on both sides, carefully lift door back onto the hinges.

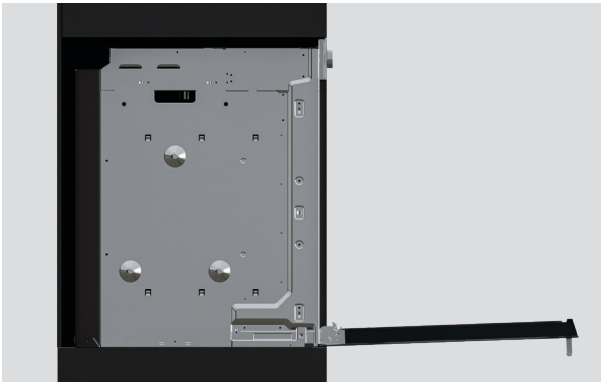

2. Open the door fully and push each locking lever down and lock into place.



3. Ensure both hinges are fully locked before shutting the door.

ALIGN TO SURROUNDINGS




1. Align oven with surrounding cabinetry and appliances.



2. Ensure the vertical gaps are even before making any horizontal adjustments.

SECURE TO CAVITY

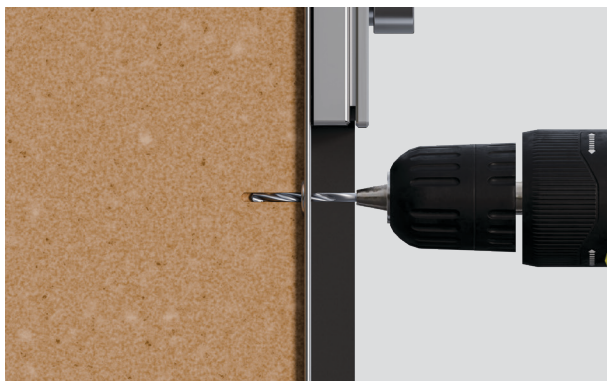

1. Using the product as a guide, pre-drill 2 x 1/8" (3mm) pilot holes.




2. Secure oven to cavity using the 2 x screws provided.

REFIT SHELVES



Sliding shelves

Place shelves back into the oven at the desired level. Ensure shelves are level and correctly positioned with the guard rail at the back.

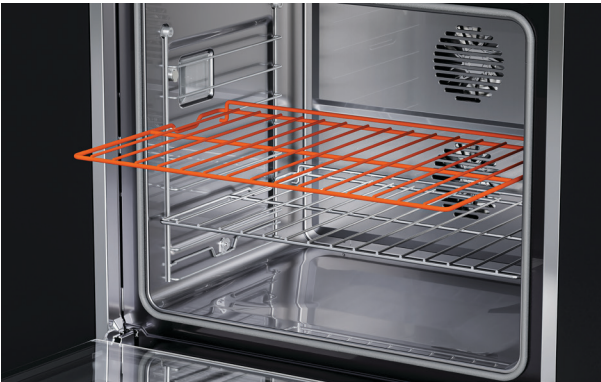

Wire shelves

Slide shelves into the cavity.



Clip on sliding shelf supports

Ensure the slides are positioned the correct way around, with the triangular tab at the front. Fit the top clips over the side rack. The front clip should be fitted as close to the front of the side rack as possible. Make sure the rear clip has engaged. Click the bottom clips into place.

CHECKLIST

Installation checks

- ☐ All clearances are correct.
- ☐ The product is level and securely fitted in the cabinetry.
- ☐ Check the lower trim is undamaged.
- ☐ All internal packaging is removed.
- ☐ The isolating switch can be easily reached.

Test operation

- ☐ Turn product on at the power supply.
- ☐ Follow the on-screen guidance to connect the product to Wi-Fi and set the clock.

Complete and keep for safe reference:

Model _____

Serial no. _____

Purchase date _____

Purchaser _____

Dealer address _____

Installer's name _____

Installer's signature _____

Installation company _____

Installation date _____

