
DISHDRAWER™ DISHWASHER

FIRST USE

Get to know your appliance	3
Load dishware	5
Load detergent	6
Use rinse aid	7
Use water softener	8
Select a suitable cycle	9
Select a suitable modifier	10
Standards testing	10
Hygiene cycle	10
Set a cycle	11
Set up Wi-Fi and remote mode	13
Adjust the settings	14
Maintain wash performance	18

FISHER & PAYKEL

CN

INTEGRATED DISHDRAWER™ DISHWASHER


DD60D4HI2U1, DD60ST4HI2U1

GET TO KNOW YOUR APPLIANCE




How to get the best results from your dishwasher

- Check that your dishware is dishwasher safe
- Keep the spray arm clear of obstructions
- Load items so water from the spray arm can reach them
- Use correct detergent quantity
- Use liquid rinse aid
- Clean the filter
- Run regular deep clean cycles
- Descale to remove mineral buildup
- Register your product to get streamlined service support.

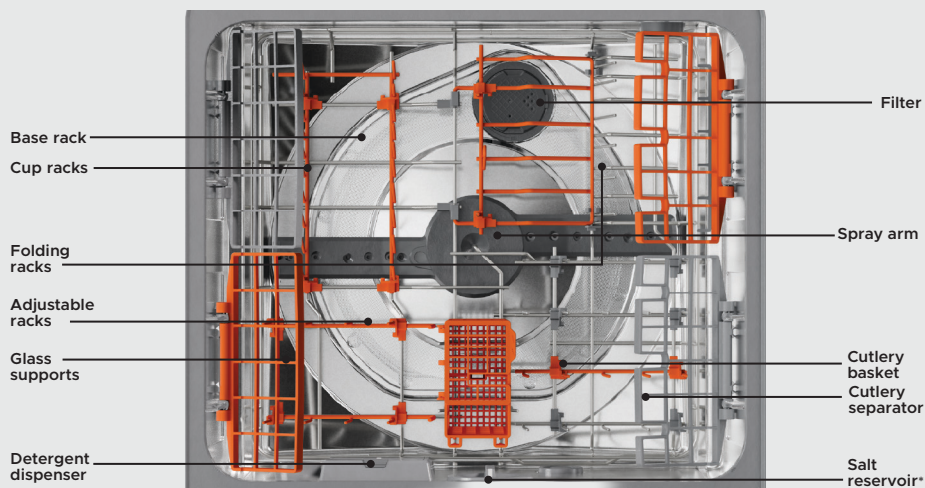

*some models only

GET TO KNOW YOUR APPLIANCE

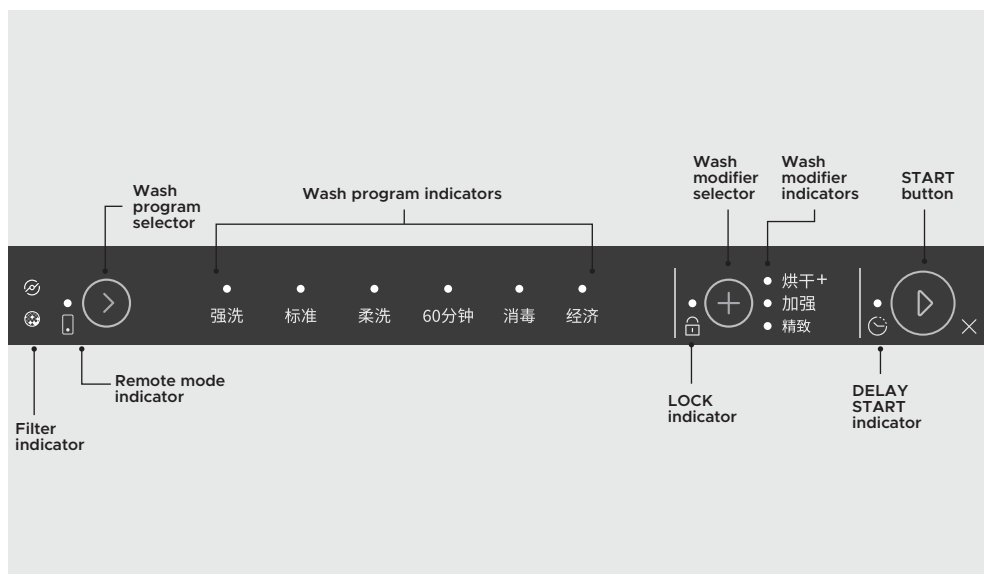

Wash program selector	Press to cycle through and select a wash program.
Wash modifier selector	Press to select a wash modifier.
START button	Press to start or cancel a wash cycle.
Wash program indicators	Indicates which program is selected.
Wash modifier indicators	Indicates which modifier is selected.
DELAY START indicator	Indicates when DELAY START is set.
LOCK indicator	Indicates when drawer is locked.
Remote mode indicator	Indicates when product has remote mode enabled.
Filter indicator*	Indicates when the filter needs cleaning.


*see 'Care & Maintenance' for reset instructions.

LOAD DISHWARE



Tips for energy efficiency

- Load the dishwasher to capacity.
- Remove large food scraps, but do not pre-rinse dishes as this uses more water and energy.
- Select the most appropriate program for each load. See 'Select a suitable cycle' for recommendations.

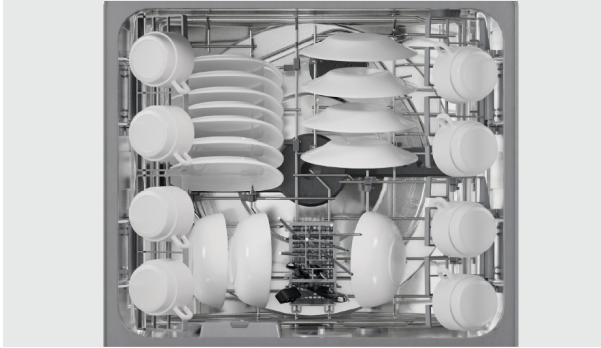

Load items effectively

Space items evenly in the drawer, with cups and containers facing down, so water from the spray arm can reach them and drain away.



Check for obstructions

Check there are no items that will prevent the spray arm from rotating.



Load cutlery correctly

Load sharp knives with handles up. Mix spoons, knives and forks in each section to prevent nesting.

LOAD DETERGENT



We recommend:

- Premium powdered detergents and tablets to effectively clean dishes, utensils and filters in your dishwasher.



We do not recommend:

- Non-premium powdered detergents and tablets, as these can result in faster grease buildup and reduced wash performance.
- Detergent sheets, as these produce excessive foam.
- Handwashing dish detergents and laundry or other detergents.



If using powdered detergent

Press the latch to open the dispenser.

Add the recommended quantity of detergent, and close the dispenser. See Care and Maintenance guide for details.



If using tablets

Place a tablet directly into the cutlery basket, tablet tray, or the tub.

Ensure tablet is not touching cutlery or dishes.

USE RINSE AID



Rinse aid improves dry performance and prevents tarnishing on metal and streaks on glass and dishware. Fill the rinse aid dispenser before adding detergent.



1. Press the latch to open the dispenser. Push the rinse aid latch away from you to open compartment.



2. Pour rinse aid into the opening. If spilled, wipe immediately.




3. Close the rinse aid compartment and detergent dispenser.

USE WATER SOFTENER



The water softener uses dishwasher salt to soften hard water and reduce scale build-up. Only use granular dishwasher salt. Do not add detergent or rinse aid to the salt reservoir.


Fill the salt reservoir completely the first time. After that, add 250g of salt each time the salt indicator on the reservoir cap turns red.

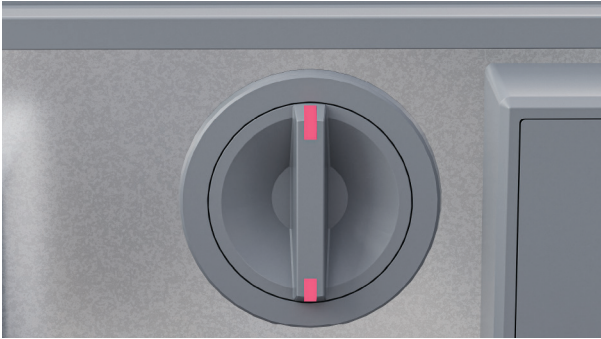

1. Turn the cap anticlockwise to remove.



2. Attach the salt funnel to the dishwasher and carefully pour salt granules into the reservoir. Some water may be displaced.

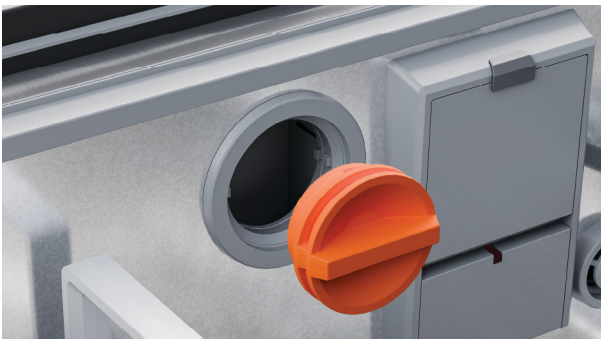

3. Remove the funnel and refit the cap, turning clockwise until secure.

Run a **LIGHT** cycle to remove any displaced water or spilt salt granules.

SELECT A SUITABLE CYCLE



Each cycle is designed for a specific purpose and has different time, energy and water requirements. Choose a cycle that balances load type and efficiency to get the best results.


⌚ TIME | ⚡ ENERGY | 💧 WATER

WASH PROGRAMS

ECO DEFAULT

For normally soiled dishes for optimum water and energy use.

 Typical items: plates, bowls, cutlery from regular meals



HEAVY DRY+, INTENSIVE

Designed for heavily soiled pots, pans and dishes.

Typical items: pots, pans, casserole dishes with baked-on food



MEDIUM DRY+, GENTLE

For dishes that are quite heavily soiled or to remove food that has been left overnight.

Typical items: plates with dried food, serving dishes



LIGHT DRY+, GENTLE

For very lightly soiled dishes with easy-to-remove soils.

 
Typical items: plates, bowls, cups, plastic items and glassware with minimal residue



60MIN DRY+, INTENSIVE

For dishes that are quite heavily soiled or food that has been left to dry overnight. No drying.

Typical items: plates with dried food, serving dishes



HYGIENE DRY+

For dishes that need to be sanitised. This cycle increases rinse temperature to 70°C.

Typical items: baby bottles, storage jars



SELECT A SUITABLE MODIFIER

WASH MODIFIERS

DRY+

DRY+ increases the final rinse temperature and the length of the drying phase.

GENTLE

GENTLE lowers the water temperature and pressure.

INTENSIVE

INTENSIVE increases the water pressure and the length of the cycle.

DRAWER DRY

Drawer Dry is an essential function that protects your DishDrawer™ Dishwasher from moisture buildup. The low-power fan automatically starts after each wash cycle to dry the appliance. The fan may operate for up to several hours and will stop if the drawer is opened. In single drawer models, the fan will resume once the drawer is closed.

STANDARDS TESTING

Wash program standards tests are based on the **ECO** wash program. Standards testing information and wash data can be viewed online by going to <https://www.fisherpaykel.com> and searching your model code.

China: Maximum 8 place settings per drawer.

HYGIENE CYCLE

The hygiene cycle raises the rinse temperature to 70°C and meets the sanitisation conditions required by Section 6, NSF/ANSI 184. A successful cycle will end as normal. If the **HYGIENE** cycle is interrupted, an alert will sound and the **HYGIENE** indicator will flash. Press start twice to clear alert. Repeat the cycle.

SET A CYCLE



Setting a wash program

Press **WASH PROGRAM SELECTOR** > to scroll and select a wash program.


Press **START** ▶ then close the drawer.



Setting a wash modifier

Press **WASH MODIFIER SELECTOR** + to select a wash modifier.

Press **START** ▶ to start the wash, then close the drawer.

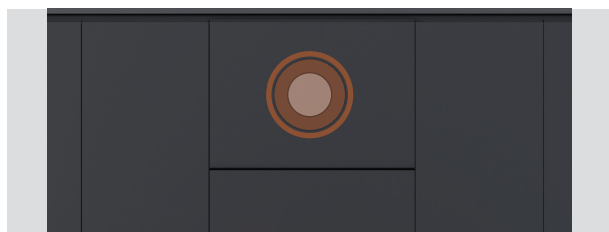

Pausing a wash

Knock twice on closed drawer to pause the wash. This unlocks the drawer so you can open it.

SET A CYCLE



Resuming a wash

Press **START ▶** to resume the wash, then close the drawer.



Cancelling a wash

Press and hold **START ▶** to cancel. The drawer will turn off when water has drained.

SET UP WI-FI AND REMOTE MODE

Connect your appliance to your home Wi-Fi to get software updates, receive wash notifications, customise settings and control your wash cycles remotely.


Getting started

- Ensure your home Wi-Fi network is turned on and there is no wash cycle in progress.
- You will be given step-by-step guidance on your mobile device.
- It may take up to 10 minutes to connect your appliance.



On your mobile device:

- 1 Scan the following QR code or search "海尔智家" in your device's app store.
- 2 Register and create an account.
- 3 Add your appliance and set up the Wi-Fi connection.

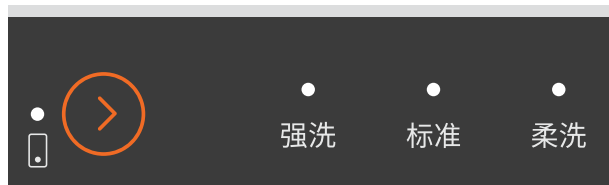

Connecting to Wi-Fi

Press and hold **WASH PROGRAM SELECTOR** > for five seconds. Follow instructions in the app to complete set-up.



Turning remote mode ON

Press and hold **WASH PROGRAM SELECTOR** > for two seconds.

ADJUST THE SETTINGS

Go to the app to adjust and customise your settings or follow the steps below to adjust settings directly on your dishwasher. Each setting is displayed using a different combination of indicator lights. Adjust a setting by matching the indicator combinations as shown in 'Settings'.

Before adjusting settings, clear active wash cycles and make sure the controls aren't in sleep mode:

- **If an indicator is flashing** - Press and hold **START** ▶ to cancel an active wash cycle.
- **If all indicators are off** - Press the **WASH PROGRAM SELECTOR** > or close and open the drawer to wake up the controls.



Access settings

1. Press and hold **WASH PROGRAM SELECTOR** > and **WASH MODIFIER SELECTOR** + together for four seconds.



2. Press **WASH MODIFIER SELECTOR** + to scroll through the settings.



3. Press **WASH PROGRAM SELECTOR** > to change the setting within an option.



4. Press **START** ▶ to save and exit the menu, or press and hold to cancel at any time.

Settings apply to both drawers in double models.

ADJUST THE SETTINGS



Wi-Fi (recommended)

Connect your dishwasher to your home network to operate it via the app and to receive updates.



Auto power-on

Your DishDrawer™ Dishwasher is set to automatically power on for 30 seconds after a drawer is opened. This can be turned off.

HEAVY indicator light corresponds to ON/OFF.



Tones

Adjust tone settings. When set to **OFF**, all tones will be silenced except fault alerts.



Rinse aid

Control the amount of rinse aid dispensed from 0–5 units. Units correspond to wash program indicator lights. Defaults to 3.



Water softener (some models)

Set water hardness from 0–5. Defaults to 2.

ADJUST THE SETTINGS



Auto lock

Automatically lock the drawer after 30 seconds to prevent opening.



Default cycle

Automatically default to **ECO** when in standby mode. This can be turned off.

ADJUST THE SETTINGS



Setting DELAY START

Press and hold **START** ▶ to enter mode. Each tone indicates +1 hour (12 max). Release **START** ▶ at your chosen delay. Timer begins when you close the drawer. To cancel, press and hold **START** ▶ until **DELAY START INDICATOR** ⌚ turns off.



Locking the controls

Press and hold **WASH MODIFIER SELECTOR** + until you hear a tone and **LOCK** 🔒 illuminates.



Unlocking the controls

Press and hold **WASH MODIFIER SELECTOR** + until **LOCK** 🔒 turns off.

MAINTAIN WASH PERFORMANCE

Make these steps a regular part of your cleaning routine to get the best results from your appliance.

Keep the spray arm clear

Check that nothing is obstructing the spray arm. Regularly remove and clean it with hot water and a cloth to unblock the spray holes.

Use correct detergent quantity

You may need to adjust detergent quantity based on local water hardness. Scan the QR code below for recommended detergent quantities.

Use rinse aid

Rinse aid prevents water beading on dishes, glasses and cutlery, so dishes dry faster and do not develop white spots.

Clean the filter

A blocked filter reduces the water pressure required to clean dishes. Remove and clean the filter regularly in hot, soapy water to remove food and grease buildup.

Run regular deep clean cycles

Run a cycle every few months to remove grease and buildup and more often if you use Eco detergents or low-temperature cycles. Use a premium dishwashing cleaner, follow label instructions, and run the **HEAVY** cycle.

Descalcify to remove mineral buildup

Fill the detergent dispenser and secondary compartment with citric acid crystals or descaler. Run the dishwasher on the **HEAVY** cycle followed by a wash program with detergent immediately after.



Care, maintenance and troubleshooting information

Scan the QR code or visit fisherpaykel.com and search for your model code.

DD60D4HI2U1, DD60ST4HI2U1

DISHDRAWER™ 洗碗机

首次使用

了解您的电器	21
装入餐具	23
衣物量洗涤剂	24
使用漂洗助剂	25
使用水软化器	26
选择合适的程序	27
选择合适的选项	28
设置程序	29
设置 Wi-Fi 和远程模式	31
调节设置	32
设置	33
保持洗涤性能	36

FISHER & PAYKEL

CN

嵌入式 DISHDRAWER™ 洗碗机

DD60D4HI2U1, DD60ST4HI2U1




如何让您的洗碗机发挥最佳效果

- 检查您的餐具是否可用洗碗机清洗
- 保持喷淋臂无障碍物
- 放入衣物, 以便喷淋臂中的水可以接触到衣物
- 使用正确的洗涤剂用量
- 使用液体漂洗助剂
- 清洁过滤器
- 定期运行深度清洁程序
- 进行除垢, 以去除矿物质沉积
- 注册您的产品, 享受更高效的服务支持。



* 仅部分型号

了解您的电器

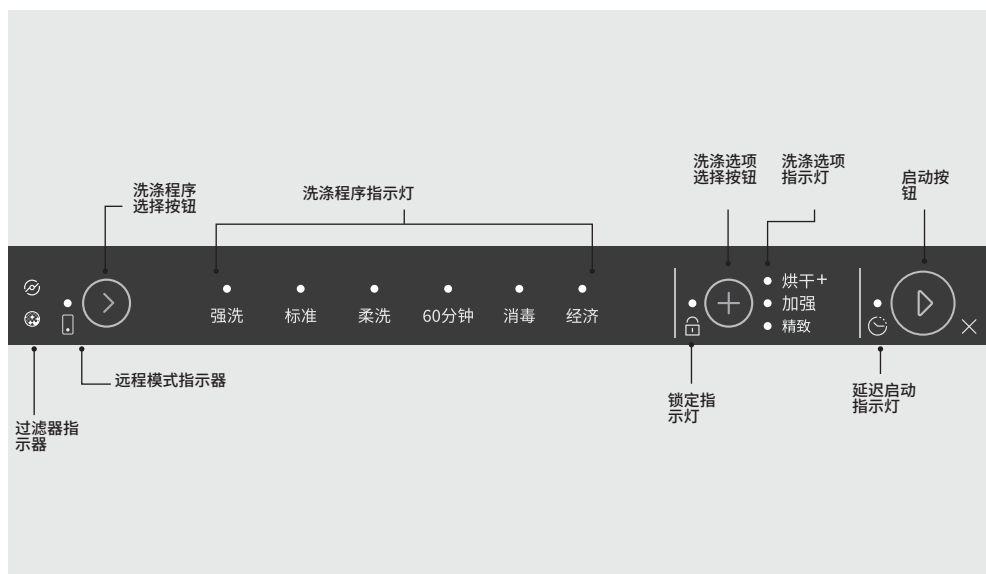

洗涤程序选择按钮	按此按钮循环浏览并选择洗涤程序。
洗涤选项选择按钮	按此按钮选择洗涤选项。
启动按钮	按此按钮启动或取消洗涤程序。
洗涤程序指示灯	指示所选的程序。
洗涤选项指示灯	指示选择了哪个选项。
延迟启动指示灯	指示何时延迟启动已设置。
锁定指示灯	表示抽屉已锁定。
远程模式指示器	指示产品何时启用了远程模式。
过滤器指示器*	指示何时需要清洁过滤器。

*请参阅“保养和维护”以获取重置说明。

节能提示



- 将洗碗机装满。
- 清除大块食物残渣,但不要预先冲洗餐具,因为这会消耗更多的水和能源。
- 为每种衣物量选择最合适的程序。请参见“选择适合的程序”以获取建议。



有效装入物品

将物品均匀摆放在抽屉中,杯子和容器朝下,以便喷淋臂喷出的水可以喷到它们并顺利排出。



检查是否有障碍物

检查是否有物品阻碍喷淋臂旋转。



正确装载餐具

放置锋利刀具时让手柄朝上。在每个区域混放汤匙、刀和叉,以防餐具叠放。



我们建议：

- 优质粉状洗涤剂和洗碗片，可有效清洁洗碗机中的盘子、餐具和过滤器。



我们不建议：

- 非优质粉状洗涤剂和洗碗片，因为这可能会导致油脂积聚更快并降低洗涤性能。
- 洗涤剂片，因为这会产生过量泡沫。
- 手洗餐盘洗涤剂和衣物或其他洗涤剂。



如果使用洗衣粉

按门锁打开投放器。

添加建议用量的洗涤剂，并关闭投放器。有关详细信息，请参阅保养和维护指南。



如果使用洗碗片

将洗碗片直接放置在餐具篮、洗碗片托盘或洗涤槽中。

确保洗碗片未接触餐具或盘子。

使用漂洗助剂



漂洗助剂可提升烘干性能,并防止金属出现污渍以及玻璃和餐具留下水渍。添加洗涤剂前,请先将漂洗助剂投放器加满。



1. 按门锁打开投放器。朝远离您的方向推漂洗助剂门锁以打开储存格。



5. 将漂洗助剂倒入开口处。如有泄漏,请立即擦拭。



6. 关闭漂洗助剂储存格和洗涤剂分配器。

使用水软化器



水软化器使用洗碗机专用盐软化硬水并减少水垢堆积。仅使用洗碗机专用颗粒盐。请勿向盐槽中添加洗涤剂或漂洗助剂。

首次请将盐槽完全加满。此后，每当盐槽盖上的盐指示器变红时，添加 250 g 盐。



1. 逆时针旋转盖以 拆卸。



2. 把盐漏斗插入洗碗机上的加盐口，慢慢把盐粒倒进盐槽
可能会有些水被排出。



3. 拆卸漏斗并重新安装盖子，顺时针旋转直至固定。

运行轻度程序以去除任何排出的水或散落的盐颗粒。



每种程序均专为特定目的而设计，具有不同的时间、能效和用水要求。选择平衡衣物类型与效率的程序，以获得最佳效果。

🕒 时间 | ⚡ 能效 | 💧 水

洗涤程序

节能 默认设置

适合清洗油污一般的餐具，以实现水和能源的最佳利用。

 
典型物品：日常膳食中的盘子、碗、餐具



重污 烘干+, 强力

适合清洗油污重的锅、平底锅和盘子。


常见物品：锅、平底锅、带有烘焙食物残留的砂锅



中等 烘干+, 轻柔

适合清洗油污重或隔夜未洗的餐具。

 典型物品：带有干结食物的盘子、盛菜盘



浅色 烘干+, 轻柔

适合清洗油污小、容易清洗的餐具。

常见物品：残渣极少的盘子、碗、杯子、塑料物品和玻璃器皿



60 分钟烘干+, 强力

适合清洗油污重或食物已放置隔夜风干的餐具。不烘干。

典型物品：带有干结食物的盘子、盛菜盘



除菌 烘干+

适用于需要除菌的餐具。该程序将漂洗温度提高至 70°C。

典型物品：婴儿奶瓶、储存罐



选择合适的选项

洗涤选项

烘干+

烘干+ 提高最终漂洗温度并延长烘干阶段的时长。

温和

轻柔降低水温和水压。

强力

强力增加水压和程序时长。

抽屉烘干

抽屉烘干是一项至关重要的功能,可防止 DishDrawer™ 洗碗机积聚水分。每次洗涤程序结束后,低功耗风扇会自动启动以烘干电器。风扇可能会运行长达数小时,如果打开抽屉则会停止运行。在单抽屉型号中,一旦关上抽屉,风扇将继续运行。

标准测试

洗涤程序标准测试基于节能洗涤程序。访问 <https://www.fisherpaykel.com> 网站并搜索您的型号代码,即可在线查看标准测试信息和洗涤数据。

中国:每个抽屉最多 8 个餐具位。

卫生程序

卫生程序会将漂洗温度提高至 70°C,并满足 NSF/ANSI 184 第 6 节规定的消毒条件。

成功完成的程序将正常结束。如果卫生程序中断,将发出警报,且卫生指示器将闪烁。按两次启动键以解除警报。重复该程序。

设置程序



设置洗涤程序

按洗涤程序选择按钮 > 滚动并选择洗涤程序。


按启动▶, 然后关抽屉。



设置洗涤选项

按洗涤选项选择按钮 + 选择洗涤选项。

按启动▶按钮开始执行洗涤程序, 然后关抽屉。

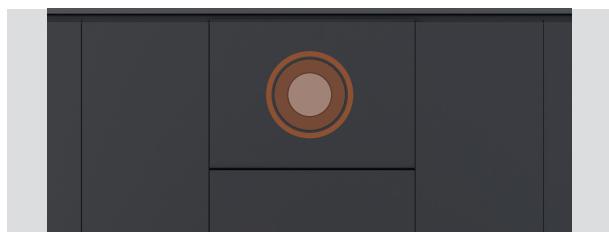

暂停洗涤

在关闭的抽屉上敲击两次以暂停洗涤。这会解锁抽屉, 以便您将其打开。



恢复洗涤

按启动▶按钮继续洗涤，然后关抽屉。



取消洗涤

按住启动▶以取消。排水完成后抽屉将关闭。

设置 WI-FI 和远程模式

将您的电器连接至家庭 Wi-Fi, 以获取软件更新、接收洗涤通知、定制设置, 并远程控制您的洗涤程序。


开始

- 确保开启家里的 Wi-Fi 网络, 且没有正在进行的洗涤程序。
- 您的移动设备将显示分步指导。
- 连接电器最长需要 10 分钟。



在移动设备上操作:

- 1 扫描以下二维码或在设备的应用程序商店中搜索“海尔智家”。
- 2 注册并创建帐号。
- 3 添加电器并设置 Wi-Fi 连接。

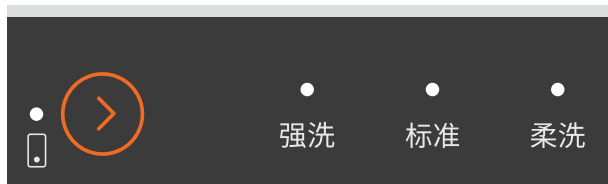

连接到 Wi-Fi

按住洗涤程序选择按钮 > 5 秒。按照应用程序中的说明完成设置。



远程模式开启

按住洗涤程序选择按钮 > 两秒钟。

调节设置

前往应用程序调节和定制您的设置，或按照以下步骤直接在洗碗机上调节设置。每项设置均通过不同的指示灯组合显示。根据“设置”中所显示的指示灯组合来调节设置。

在调节设置之前，清除处于活动状态的洗涤程序，并确保控制器未处于睡眠模式：

- 如果指示器正在闪烁—按住启动▶以取消正在运行的洗涤程序。
- 如果所有指示灯均熄灭—按洗涤程序选择器>或关闭并打开抽屉以唤醒控制器。



访问设置

1. 按住洗涤程序选择器>和洗涤选项选择器+同时4秒钟。



2. 按洗涤选项选择器+以滚动显示设置。



3. 按洗涤程序选择按钮>更改选项中的设置。



4. 按启动▶保存并退出菜单，或随时按住取消。

在双抽屉型号中，设置应用于两个抽屉。



Wi-Fi (推荐)

将您的洗碗机连接到家庭网络, 以通过应用程序进行操作并接收更新。



自动通电

您的 DishDrawer™ 洗碗机设置为在抽屉打开后自动开机 30 秒。此功能可以关闭。

重污指示灯对应开/关。



按键音

调节按键音设置。当设置为关闭时, 除故障警报外, 所有按键音都将静音。



光亮剂

在 0-5 个单位之间控制漂洗助剂的投放量。各单位对应洗涤程序指示灯。默认设置为 3。



水软化器 (部分型号)

将水硬度设置为 0-5。默认设置为 2。



自动锁

30秒后自动锁定抽屉, 防止其打开。



默认程序

在待机模式下自动默认为节能模式。
此功能可以关闭。



设置延迟启动

按住启动▶进入模式。每响一声表示增加 1 小时(最多 12 小时)。在所选延迟时间松开启动▶。关上抽屉后定时器开始计时。要取消, 按住启动▶直至延迟启动指示灯⌚关闭。



锁定控制面板

按住洗涤选项选择按钮+, 直到听到蜂鸣声且功能锁⏻照明。



解锁控制面板

按住洗涤选项选择按钮+ 直到功能锁⏻关闭。

日常清洁中采用这些步骤, 获得最佳的电器保养效果。

保持喷淋臂畅通

检查是否有任何物品阻碍喷淋臂。定期将其拆卸, 并用热水和抹布进行清洁, 以疏通喷孔。

使用正确的洗涤剂用量

您可能需要根据当地水硬度调节洗涤剂用量。扫描下方二维码获取建议的洗涤剂用量。

使用漂洗助剂

漂洗助剂可防止盘子、玻璃和餐具上形成水珠, 使盘子更快烘干, 并避免出现白色斑点。

清洁过滤器

过滤器阻塞会降低清洁盘子所需的水压。定期拆卸并用热肥皂水清洁过滤器, 清除食物和油脂积垢。

定期运行深度清洁程序

每隔几个月运行一次程序以清除油脂和堆积物; 如果使用环保型洗涤剂或低温程序, 则需更频繁地运行。请使用优质洗碗机清洁剂, 遵循标签说明, 并运行强力程序。

进行除垢, 以去除矿物质沉积

向洗涤剂分配器和副储存格中加入柠檬酸晶体或除水垢剂。运行洗碗机的重污程序, 随后立即运行加有洗涤剂的洗涤程序。



保养、维护和故障排除信息

扫描二维码或访问 fisherpaykel.com 并搜索型号代码。

DD60D4HI2U1, DD60ST4HI2U1

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2026 保留所有权利。

本指南所述的型号并非在所有市场上销售,随时会有变动。

本指南所述的产品规格适用于截至发行日所销售和描述的特定产品型号。本公司秉承不断改进产品之政策,上述规格可能随时会有变动。

如要详细了解本国销售的型号和规格,请访问公司网站,也可以联系当地的 Fisher & Paykel 经销商。

434367A 10.26

