
DISHDRAWER™ DISHWASHER

FIRST USE

Get to know your appliance	3
Load dishware	5
Load detergent	6
Use rinse aid	7
Use water softener (some models only)	8
Select a suitable cycle	9
Select a suitable modifier	10
Standards testing	10
Hygiene cycle	10
Set a cycle	11
Adjust the settings	12
Settings	13
Delay Start and controls	15
Maintain wash performance	16

FISHER & PAYKEL

TW


CONTEMPORARY DISHDRAWER™ DISHWASHER

DD60D2CX2, DD60D2NX2, DD60S2CX2, DD60ST2NX2, DD60D2NX2,
DD60S2CX2, DD60ST2NX2, DD60D2NB2, DD60ST2NB2, DD60D2HCX2,
DD60D2HNX2, DD60ST2HNX2, DD60D2HNB2, DD60ST2HNB2




How to get the best results from your dishwasher

- Check that your dishware is dishwasher safe
- Keep the spray arm clear of obstructions
- Load items so water from the spray arm can reach them
- Use correct detergent quantity
- Use liquid rinse aid
- Clean the filter
- Run regular deep clean cycles
- Descale to remove mineral buildup
- Register your product to get streamlined service support.

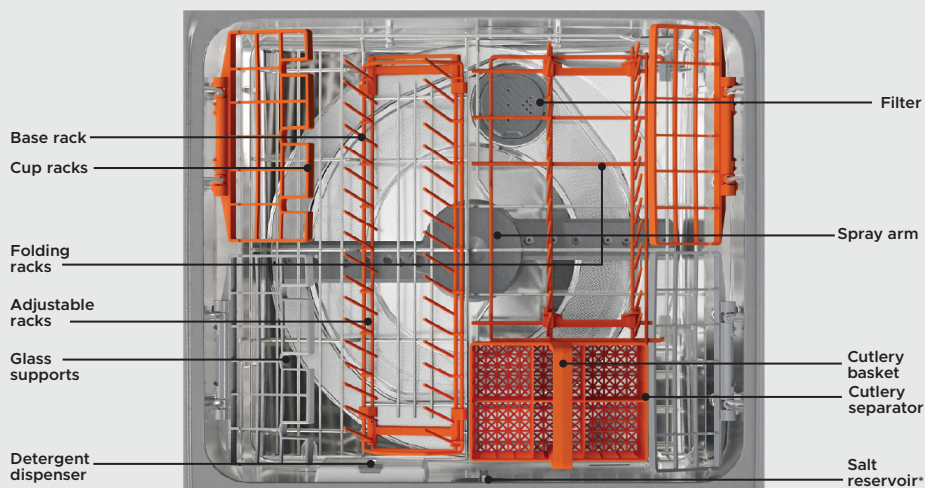

*some models only

GET TO KNOW YOUR APPLIANCE

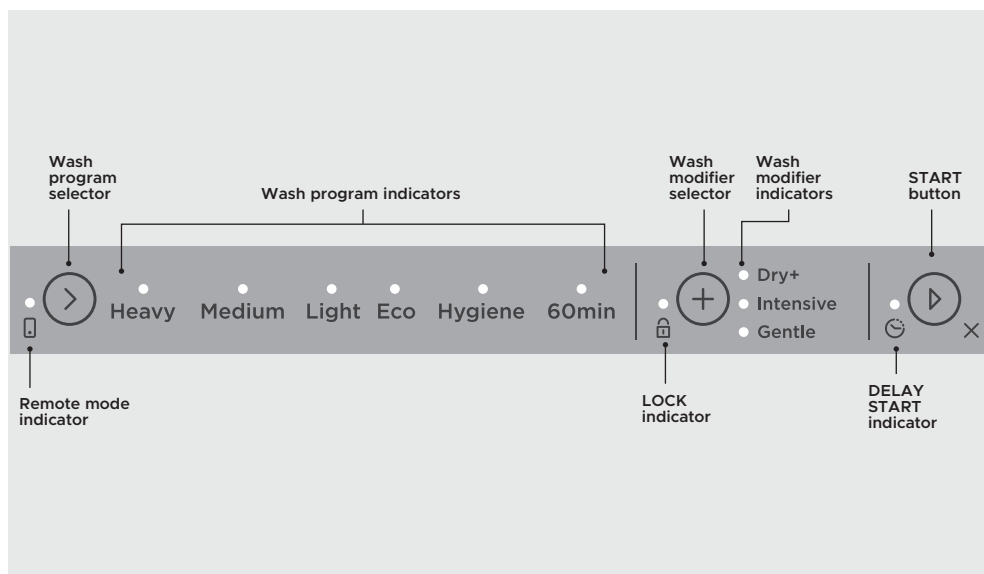


Wash program selector	Press to cycle through and select a wash program.
Wash modifier selector	Press to select a wash modifier.
START button	Press to start or cancel a wash cycle.
Wash program indicators	Indicate which program is selected.
Wash modifier indicators	Indicate which modifier is selected.
DELAY START indicator	Indicates when DELAY START is set.
LOCK indicator	Indicates when drawer is locked.
Remote mode indicator	Indicates when product has remote mode enabled.

LOAD DISHWASHER



Tips for energy efficiency

- Load the dishwasher to capacity.
- Remove large food scraps, but do not pre-rinse dishes as this uses more water and energy.
- Select the most appropriate program for each load. See 'Select a suitable cycle' for recommendations.

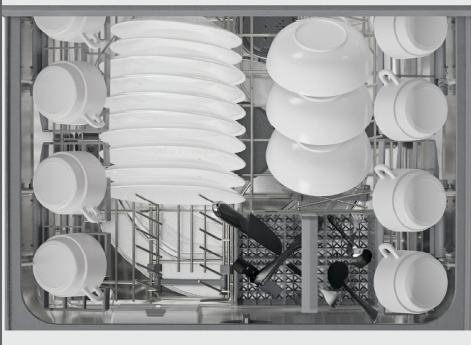

Load items effectively

Space items evenly in the drawer, with cups and containers facing down, so water from the spray arm can reach them and drain away.



Check for obstructions

Check there are no items that will prevent the spray arm from rotating.



Load cutlery correctly

Load sharp knives with handles up. Mix spoons, knives and forks in each section to prevent nesting.

LOAD DETERGENT



We recommend:

- Premium powdered detergents and tablets to effectively clean dishes, utensils and filters in your dishwasher.



We do not recommend:

- Non-premium powdered detergents and tablets, as these can result in faster grease buildup and reduced wash performance.
- Detergent sheets, as these produce excessive foam.
- Handwashing dish detergents and laundry or other detergents.



If using powdered detergent

Press the latch to open the dispenser.

Add the recommended quantity of detergent, and close the dispenser. See Care and Maintenance guide for details.



If using tablets

Place a tablet directly into the cutlery basket, tablet tray, or the tub.

Ensure tablet is not touching cutlery or dishes.

USE RINSE AID



Rinse aid improves dry performance and prevents tarnishing on metal and streaks on glass and dishware. Fill the rinse aid dispenser before adding detergent.



1. Press the latch to open the dispenser. Push the rinse aid latch away from you to open compartment.



2. Pour rinse aid into the opening. If spilled, wipe immediately.



3. Close the rinse aid compartment and detergent dispenser.

USE WATER SOFTENER (SOME MODELS ONLY)



The water softener uses dishwasher salt to soften hard water and reduce scale build-up. Only use granular dishwasher salt. Do not add detergent or rinse aid to the salt reservoir.

Fill the salt reservoir completely the first time. After that, add 250g of salt each time the salt indicator on the reservoir cap turns red.



1. Turn the cap anticlockwise to remove.



2. Attach the salt funnel to the dishwasher and carefully pour salt granules into the reservoir. Some water may be displaced.



3. Remove the funnel and refit the cap, turning clockwise until secure.

Run a **LIGHT** cycle to remove any displaced water or spilt salt granules.

SELECT A SUITABLE CYCLE



Each cycle is designed for a specific purpose and has different time, energy and water requirements. Choose a cycle that balances load type and efficiency to get the best results.

⌚ TIME | ⚡ ENERGY | 💧 WATER

WASH PROGRAMS

ECO DEFAULT

For normally soiled dishes for optimum water and energy use.

Typical items: plates, bowls, cutlery from regular meals



HEAVY DRY+, INTENSIVE

Designed for heavily soiled pots, pans and dishes.

Typical items: pots, pans, casserole dishes with baked-on food



MEDIUM DRY+, GENTLE

For dishes that are quite heavily soiled or to remove food that has been left overnight.

Typical items: plates with dried food, serving dishes



LIGHT DRY+, GENTLE

For very lightly soiled dishes with easy-to-remove soils.

 
Typical items: plates, bowls, cups, plastic items and glassware with minimal residue



60MIN DRY+, INTENSIVE

For dishes that are quite heavily soiled or food that has been left to dry overnight. No drying.

Typical items: plates with dried food, serving dishes



HYGIENE DRY+

For dishes that need to be sanitised. This cycle increases rinse temperature to 70°C.

Typical items: baby bottles, storage jars



SELECT A SUITABLE MODIFIER

WASH MODIFIERS

DRY+

DRY+ increases the final rinse temperature and the length of the drying phase.

GENTLE

GENTLE lowers the water temperature and pressure.

INTENSIVE

INTENSIVE increases the water pressure and the length of the cycle.

DRAWER DRY

Drawer Dry is an essential function that protects your DishDrawer™ Dishwasher from moisture buildup. The low-power fan automatically starts after each wash cycle to dry the appliance. The fan may operate for up to several hours and will stop if the drawer is opened. In single drawer models, the fan will resume once the drawer is closed.

STANDARDS TESTING


Wash program standards tests are based on the **ECO** wash program. Standards testing information and wash data can be viewed online by going to <https://www.fisherpaykel.com> and searching your model code.

Taiwan: Maximum 7 place settings per drawer.

HYGIENE CYCLE

The hygiene cycle raises the rinse temperature to 70°C and meets the sanitisation conditions required by Section 6, NSF/ANSI 184. A successful cycle will end as normal. If the **HYGIENE** cycle is interrupted, an alert will sound and the **HYGIENE** indicator will flash. Press start twice to clear alert. Repeat the cycle.


SET A CYCLE

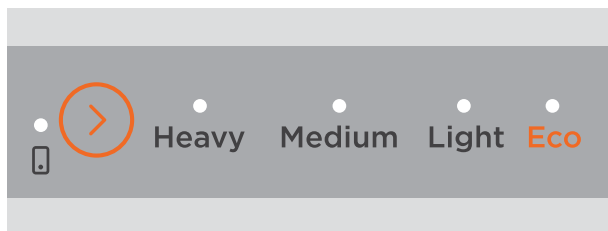

Setting a wash program

1. Press **WASH PROGRAM SELECTOR** > to scroll and select a wash program.

Press **START** ▶ then close the drawer.

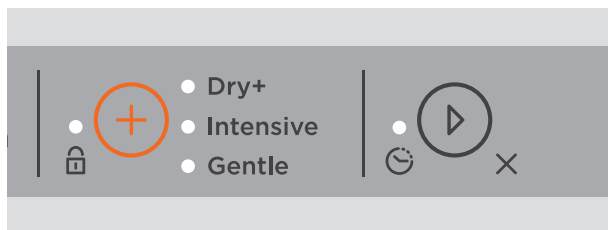

Setting a wash modifier


Press **WASH MODIFIER SELECTOR** + to select a wash modifier.

Press **START** ▶ to start the wash, then close the drawer.




Pausing a wash

Knock twice on the door and wait for three short and one long tone before opening the drawer.

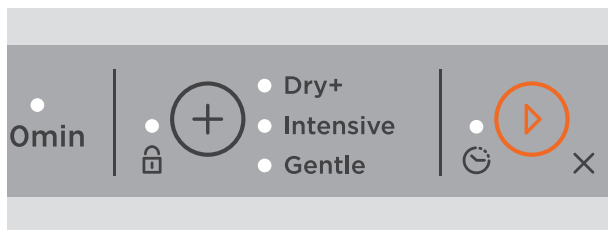

Resuming a wash

Press **START** ▶ to resume the wash, then close the drawer.

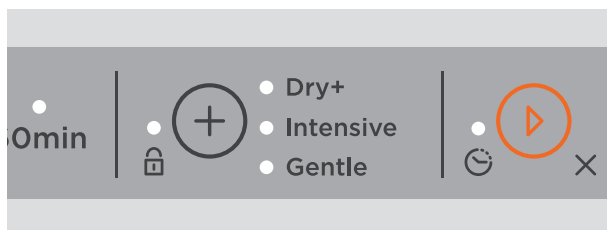

Cancelling a wash


Press and hold **START** ▶ to cancel. The drawer will turn off when water has drained.

ADJUST THE SETTINGS

Go to the app to adjust and customise your settings or follow the steps below to adjust settings directly on your dishwasher. Each setting is displayed using a different combination of indicator lights. Adjust a setting by matching the indicator combinations as shown in 'Settings'.


Before adjusting settings, clear active wash cycles and make sure the controls aren't in sleep mode:

- **If an indicator is flashing** - Press and hold **START** ▶ to cancel an active wash cycle.
- **If all indicators are off** - Press the **WASH PROGRAM SELECTOR** > or close and open the drawer to wake up the controls.

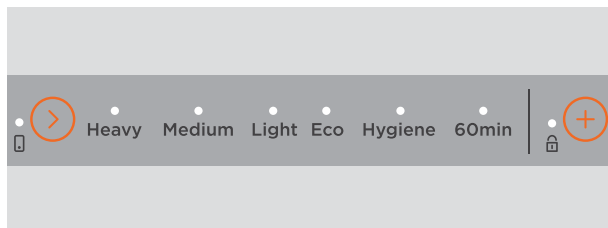


Access settings

1. Press and hold **WASH PROGRAM SELECTOR** > and **WASH MODIFIER SELECTOR** + together for four seconds.

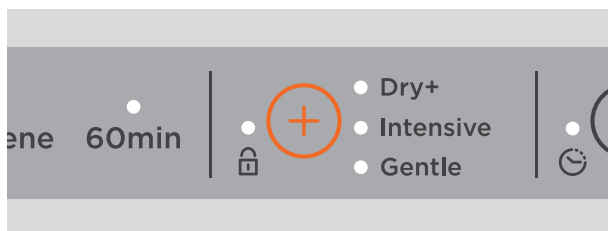

2. Press **WASH MODIFIER SELECTOR** + to scroll through the settings.

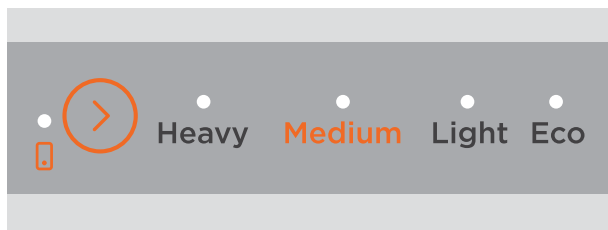

3. Press **WASH PROGRAM SELECTOR** > to change the setting within an option.



4. Press **START** ▶ to save and exit the menu, or press and hold to cancel at any time. Settings apply to both drawers in double models.

SETTINGS

Auto power-on

Your DishDrawer™ Dishwasher is set to automatically power on for 30 seconds after a drawer is opened. This can be turned off.

HEAVY indicator light corresponds to ON/OFF.

Tones

Adjust tone settings. When set to **OFF**, all tones will be silenced except fault alerts.

Rinse aid

Control the amount of rinse aid dispensed from 0–5 units. Units correspond to wash program indicator lights. Defaults to 3.

Water softener (some models)

Set water hardness from 0–5. Defaults to 2.

 


SETTINGS



Auto lock


Automatically lock the drawer after 30 seconds to prevent opening.



Default cycle

Automatically default to **ECO** when in standby mode. This can be turned off.

DELAY START AND CONTROLS

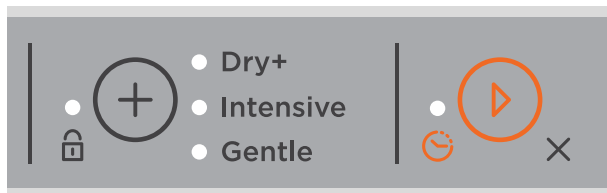

Setting DELAY START

Press and hold **START** ▶ to enter mode. Each tone indicates +1 hour (12 max). Release **START** ▶ at your chosen delay. Timer begins when you close the drawer. To cancel, press and hold **START** ▶ until **DELAY START INDICATOR** ⌚ turns off.



Locking the controls

Press and hold **WASH MODIFIER SELECTOR** + until you hear a tone and **LOCK** 🔒 illuminates.



Unlocking the controls

Press and hold **WASH MODIFIER SELECTOR** + until **LOCK** 🔒 turns off.

MAINTAIN WASH PERFORMANCE

Make these steps a regular part of your cleaning routine to get the best results from your appliance.

Keep the spray arm clear

Check that nothing is obstructing the spray arm. Regularly remove and clean it with hot water and a cloth to unblock the spray holes.

Use correct detergent quantity

You may need to adjust detergent quantity based on local water hardness. Scan the QR code below for recommended detergent quantities.

Use rinse aid

Rinse aid prevents water beading on dishes, glasses and cutlery, so dishes dry faster and do not develop white spots.

Clean the filter

A blocked filter reduces the water pressure required to clean dishes. Remove and clean the filter regularly in hot, soapy water to remove food and grease buildup.

Run regular deep clean cycles

Run a cycle every few months to remove grease and buildup and more often if you use Eco detergents or low-temperature cycles. Use a premium dishwashing cleaner, follow label instructions, and run the **HEAVY** cycle.

Descale to remove mineral buildup

Fill the detergent dispenser and secondary compartment with citric acid crystals or descaler. Run the dishwasher on the **HEAVY** cycle followed by a wash program with detergent immediately after.



Care, maintenance and troubleshooting information

Scan the QR code or visit fisherpaykel.com and search for your model code.

DD60D2CX2, DD60D2NX2, DD60S2CX2, DD60ST2NX2, DD60D2NX2, DD60S2CX2, DD60ST2NX2, DD60D2NB2, DD60ST2NB2, DD60D2HCX2, DD60D2HNX2, DD60ST2HNX2, DD60D2HNB2, DD60ST2HNB2

