
FRONT LOADER WASHING MACHINE FIRST USE

Get to know your appliance	3
Control panel	4
Menu	5
Set up Auto dose	6
Run a test cycle	8
Understand fibre types	9
Sort your items	10
Load the washer	11
Set a cycle	12
Connect to Wi-Fi	15
Enable Remote mode	16
Cycle selections	17
Clean and maintain your appliance	18

FISHER & PAYKEL

UK IE EU SG HK

FRONT LOADER WASHER

WH1260MZB5

GET TO KNOW YOUR APPLIANCE




Download the app for a smarter experience

- Access extra features and information
- Track and run cycles from your phone
- Customise your favourite cycles
- Get the latest software updates




CONTROL PANEL

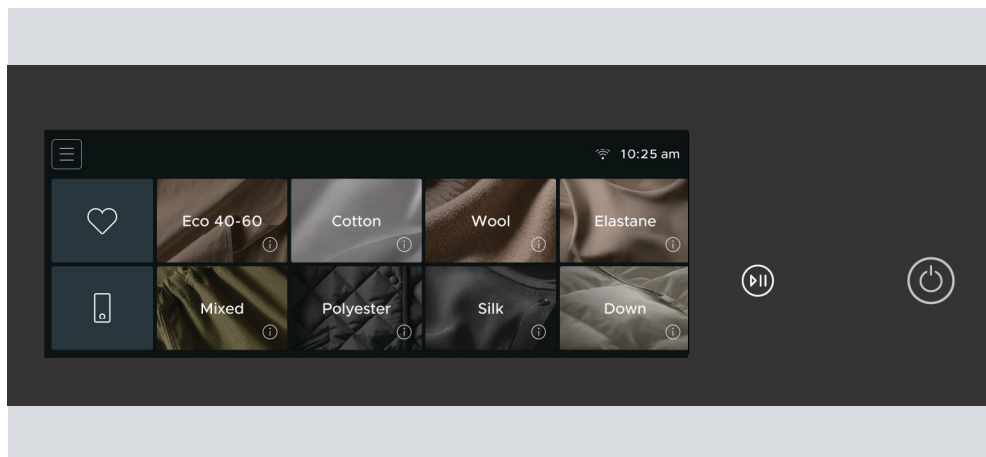

	MENU	Access additional features and settings.
	FAVOURITES	Access saved favourites and preset cycles (QUICK 15 and QUICK 30).
	REMOTE	Connect to your mobile device and operate it via the app.
	START/PAUSE	Start or pause a cycle or enable Remote mode.
	POWER	Press and hold to turn the appliance ON/OFF .

MENU

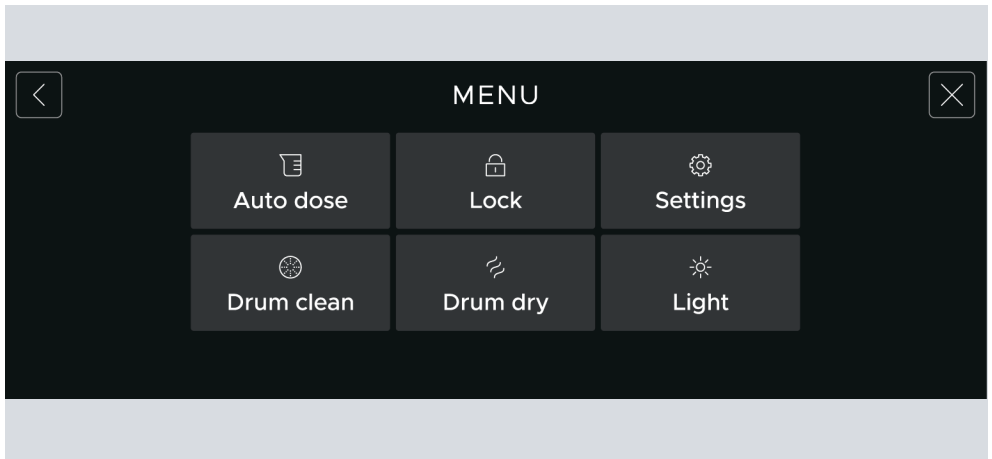

	AUTO DOSE	Set or adjust detergent and softener cartridges and dosage.
	LOCK	Lock the controls at any time to prevent accidental use.
	LIGHT	Turn the drum light off or set it to turn on automatically.
	DRUM CLEAN	Run DRUM CLEAN to clean the washer.
	DRUM DRY	Set DRUM DRY as a default to dry the washer after a cycle.
	SETTINGS	Set and adjust clock, display, volume and other settings.
	BACK	Go back one level.
	EXIT	Return to the home screen.

SET UP AUTO DOSE



Auto dose tanks automatically dispense liquid detergent or softener during a cycle. Each fill lasts multiple cycles. Go to **AUTO DOSE** to set the dose level for tank 1 and assign detergent type or softener to tank 2.

Auto dose tank 1

Tank 1 is fixed to Everyday detergent.



Fill with everyday liquid detergent and set a dosage level.

Auto dose tank 2

You can assign tank 2 to liquid detergent or liquid softener. Clean the tank thoroughly before reassigning to a different liquid type.



Assign as fabric softener (default)

Fill with liquid fabric softener and assign type as Softener in **AUTO DOSE** or in **DISPENSING** during cycle setup.



Assign as detergent

Fill with everyday or specialised liquid detergent.

- | | | | |
|-------------|--------|-------------|----------|
| • Everyday | • Down | • Sensitive | • Darks |
| • Delicates | • Silk | • Wool | • Whites |

Manual dispensing



Manual compartment


Add a single dose of liquid or powder detergent to the Manual compartment and select Manual in **DISPENSING** during cycle setup.




Laundry capsules or laundry sheets

Add laundry capsules or sheets directly to the drum and select Manual in **DISPENSING** during cycle setup.

SET UP AUTO DOSE

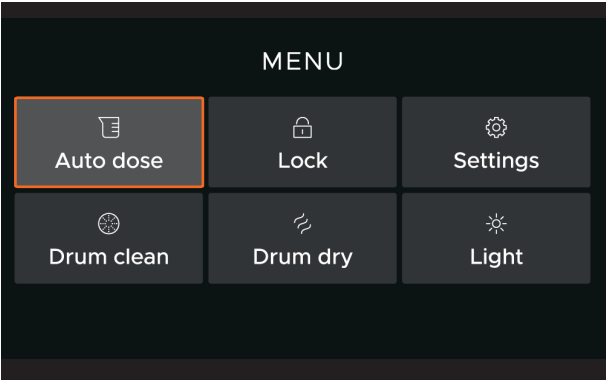

1. Go to MENU  and select AUTO DOSE or access it from DISPENSING during cycle setup.

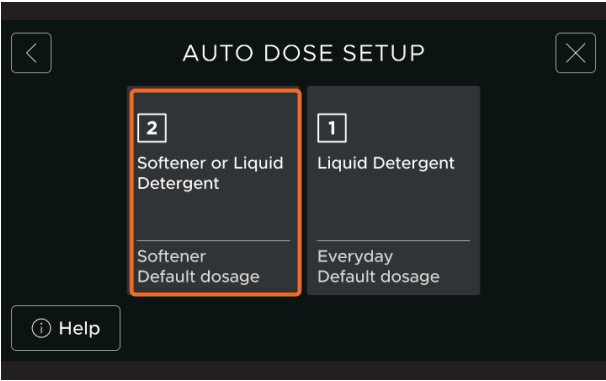

2. Select tank 1 to adjust the everyday liquid detergent dose. Select tank 2 to assign liquid detergent type or softener.




3. Scroll to select a detergent or softener and dosage amount, then press CONFIRM.
If Tank 2 is set to Everyday, the dosage will match Tank 1.

RUN A TEST CYCLE


Before you wash your first load, run a Quick 15 cycle without laundry. This primes the detergent dispenser and allows you to check that the hoses are securely connected and the washer is level and ready to use.



1. Push the dispenser drawer to open. Ensure tank 1 contains everyday liquid detergent. Push drawer to close.

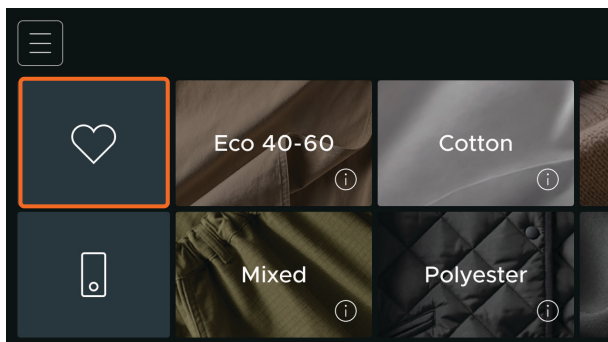

2. Press FAVOURITES , then select QUICK 15.

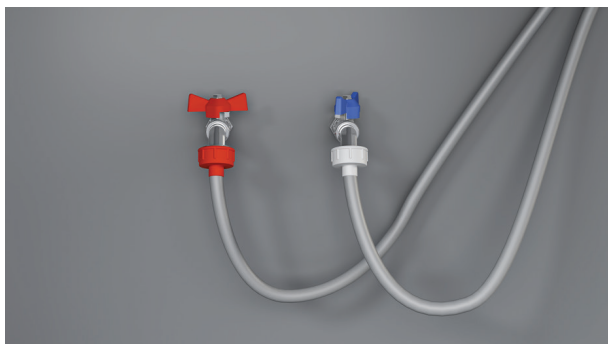

What to look for

- Check for leaks at the hose connections.
- If the washer moves during the cycle, adjust the feet to level it.
- See the installation guide for levelling instructions.

UNDERSTAND FIBRE TYPES



Choose a cycle to suit the most delicate fibre listed on the care label of your item, even if it is only a small percentage. Use this guide to identify the most delicate fibres.

MOST DELICATE FIBRE TYPES

●	Cashmere, Angora, Mohair (Not suited for machine washing in this model)
●	Down
●	Silk
●	Wool, Merino, Lambswool
●	Elastane, Spandex, Lycra
●	Viscose, Bamboo, Rayon, Modal*
●	Lyocell, TENCEL™*
●	Acrylic**
●	Linen*
●	Hemp*
●	Ramie*
●	Nylon, Polyamide**
●	Polyester
●	Cotton

LEAST DELICATE FIBRE TYPES

Recommended settings where listed fibre is unavailable: *Cotton + Ultra delicate | **Polyester + Ultra delicate

SORT YOUR ITEMS

Sort your laundry before washing to protect fabrics, improve cleaning results, and prevent colour transfer. Follow these steps to prepare each load.



1. Check each care label to see the fibre composition and how each garment should be washed. Care labels may be on the inside seam of your item.



2. Sort items into loads of similar fibre, item type and item colour.



3. Check pockets, close fasteners and zippers, and untangle items before loading.

Use a small washbag for delicate items. Do not overfill it.

LOAD THE WASHER




The maximum load size changes based on the type of items in a load. For best wash performance, avoid overloading the washer.




ITEM TYPE	LOAD SIZE
Ultra delicate	Extra small
Delicate	Small
Moderate / Durable / Sheets / Towels	Medium or large

SET A CYCLE


Set a cycle according to fibre type, item type and treatment. Available cycle options may vary depending on fibre type. You can adjust soil level, colour and dispensing, but temperature and spin speed are set automatically based on your cycle selections.

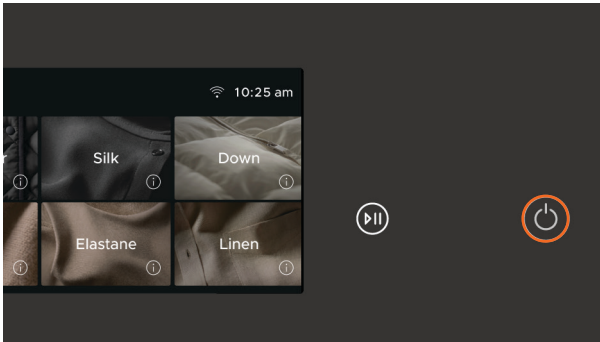

1. Press and hold **POWER**  to turn the washer on.

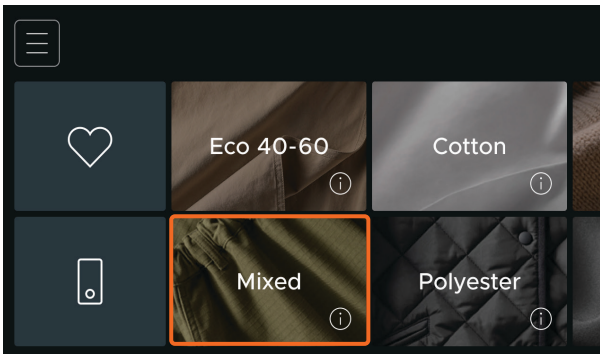


2. Select the fibre type for the most delicate fibre in your load.

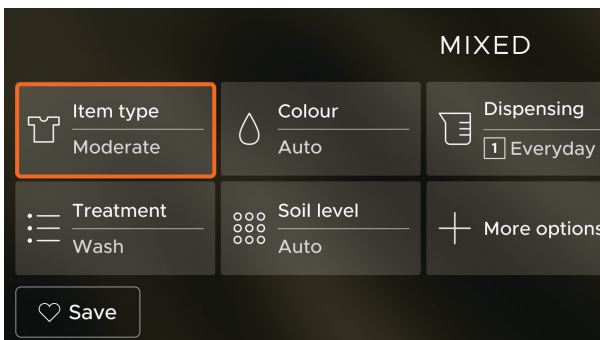


3. Select the item type to suit the durability of items your load.


SET A CYCLE

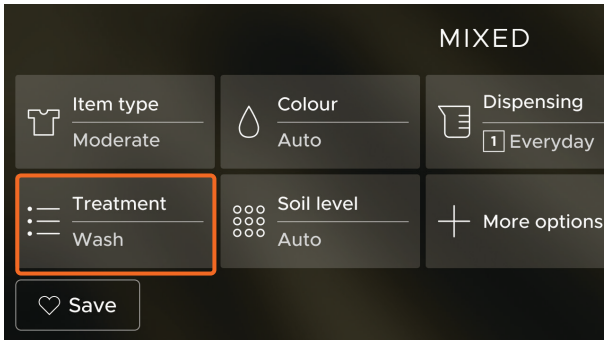

4. Select a treatment to suit your desired cycle type.

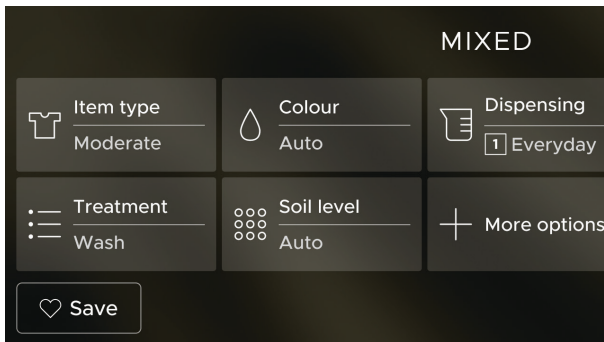


5. Select other cycle settings and options as required.

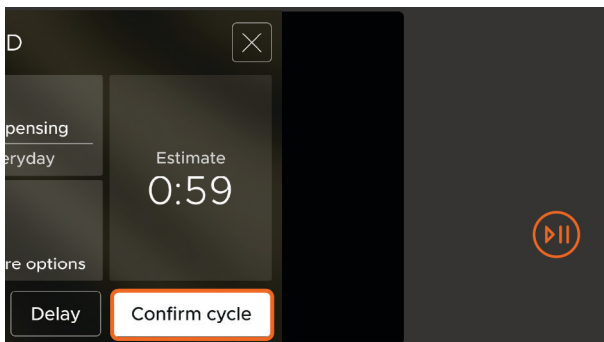


6. Press CONFIRM CYCLE, then press the START/PAUSE button.

CYCLE OPTIONS

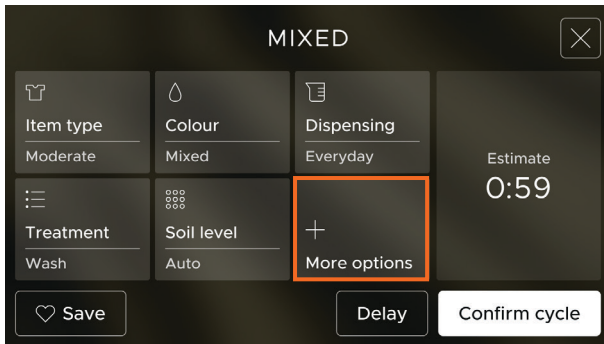


Press **MORE OPTIONS** to access extra wash options.

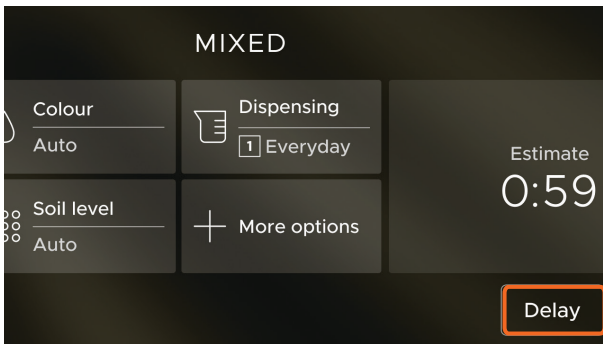

Delay cycle start time

Press **DELAY** to set a start time or enable remote start via the app. Follow the onscreen instructions, then press the **START/PAUSE** button.

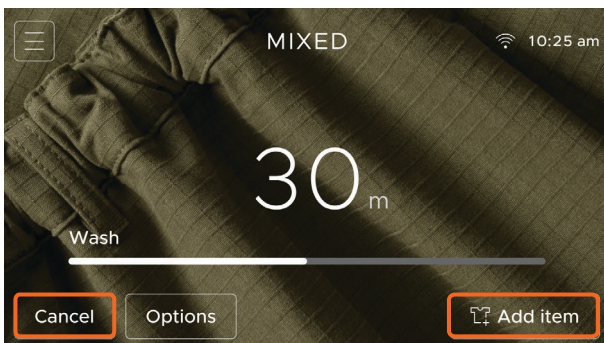

Add item or cancel cycle

Press **ADD ITEM** to pause the wash and add an item.


Press **CANCEL** and follow the onscreen instructions to cancel the cycle.

The door will unlock once water level is below the door.


CONNECT TO WI-FI




Connect your appliance to your home wireless network to access extra features, receive updates and operate the appliance remotely using the app. It may take up to 10 minutes to connect your appliance.

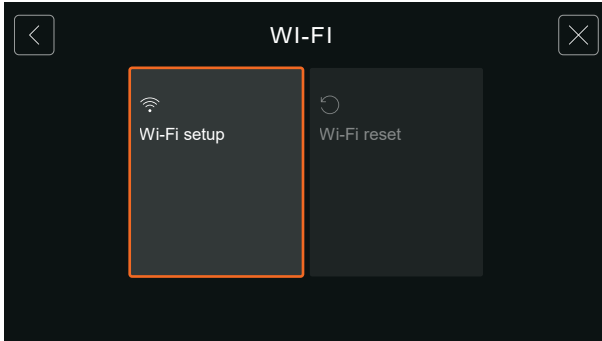

1. Go to MENU  and select SETTINGS, WI-FI, then WI-FI SETUP.

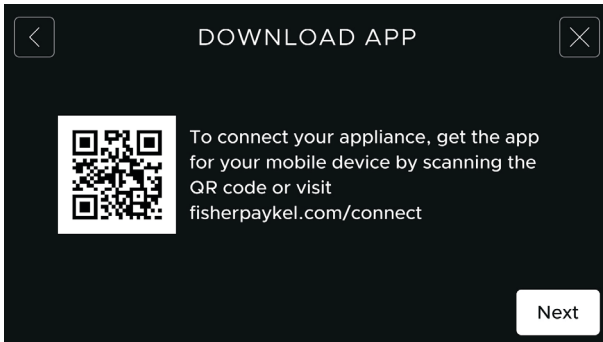

2. Download the app, and follow the app instructions.

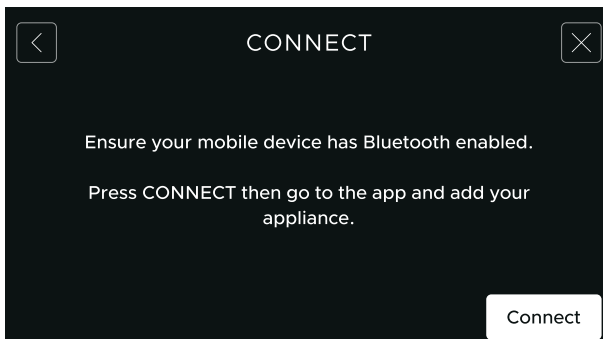


3. Enable Bluetooth on your mobile device, then press CONNECT.

Go to the app to complete the connection.

ENABLE REMOTE MODE




Enable REMOTE MODE to operate your appliance remotely via the app. You can enable it from the home screen or during cycle set up.

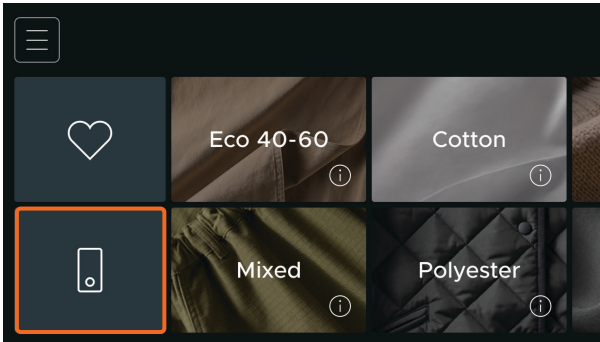

Enable Remote mode from home screen


Press REMOTE  on the home screen.

Select ENABLE, then press the START/PAUSE  button to confirm.

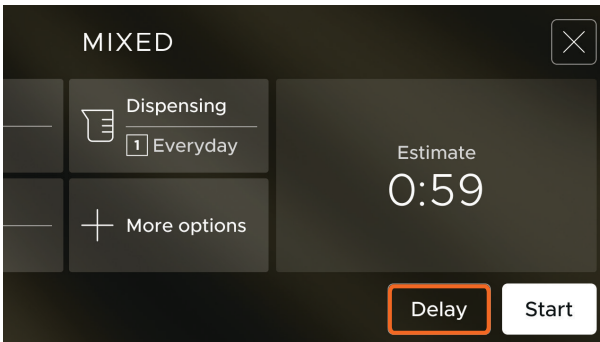

Enable Remote mode during cycle setup

1. Press DELAY in the cycle setting screen.

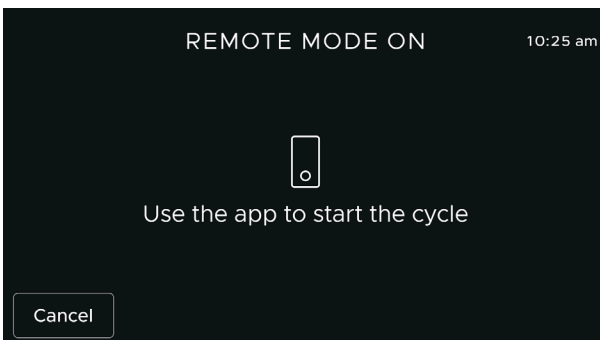

2. Select START BY REMOTE, then press the START/PAUSE  button to confirm.

CYCLE SELECTIONS

Select cycle settings to suit your load. Available options may change according to your cycle selections.

FIBRE TYPE

Eco 40-60	Cotton	Wool	Elastane
Mixed	Polyester	Silk	Down

ITEM TYPE

Durable	Ultra delicate	Denim	Towels
Moderate	Sports	Sheets	Bulky
Delicate			

TREATMENT

Wash	Sanitise	Spin	Allergy care
Steam refresh	Rinse		

COLOUR

Dark	Mixed	Light	White
------	-------	-------	-------

SOIL LEVEL

Auto (default)	Heavy	Moderate	Light
----------------	-------	----------	-------

MORE OPTIONS

Optimise	Crease free	Cold wash	Extra rinse
Pre wash	Drum dry	Soak	Sanitise method (UV + Hot water)

CLEAN AND MAINTAIN YOUR APPLIANCE

Make these steps a regular part of your cleaning and maintenance routine to get the best results from your appliance. See the Care & Maintenance guide for details.



Clean tank when switching to a new detergent

Push the tab on the Manual compartment to release the dispenser and remove it.

Drain residual detergent, then fill with warm water and shake lightly to clear residue.

Drain and allow to dry before refitting the dispenser.

Cleaning

- General cleaning
- Running the Drum Clean cycle

Maintenance and troubleshooting

- Cleaning the pump filter
- Cleaning the hose(s)
- Unlocking the door in a power failure
- Troubleshooting common issues

Compliance information

- Product compliance
- Certified wash performance
- Woolmark-approved fabric care programs



Care, maintenance and troubleshooting information

Scan the QR code or visit fisherpaykel.com and search for your model code.

WH1260MZB5

