FISHER & PAYKEL

# FRONT LOADER WASHER

WH8560E1

**USER GUIDE**

**NZ AU**

# CONTENTS


| | |
|---|---|
| Safety and warnings | 4 |
| First use | 7 |
| Loading suggestions | 9 |
| Setting a cycle | 10 |
| Wash cycles | 13 |
| Setting a Favourite | 15 |
| Resetting Favourites | 16 |
| Detergent and softener | 17 |
| Cleaning | 18 |
| Cleaning the dispenser drawer | 19 |
| Drum clean | 20 |
| Unlocking the door | 21 |
| Troubleshooting | 24 |
| Fault codes | 27 |
| Manufacturer's warranty and service guide | 28 |


**Registration**

To register your product visit our website: fisherpaykel.com

| ⚠ WARNING! | |
|---|---|
|  | **Electric Shock Hazard**<br>**Failure to follow this advice may result in electric shock or death.**<br>• If you are using an extension cord or a portable electrical outlet device (e.g. multi-socket outlet box), ensure that it is positioned so that it does not come into contact with water or moisture. |

## READ AND SAVE THIS GUIDE

### WARNING!

**Read Safety Guide. Failure to follow all guides and rules could cause personal injury or property damage. Use this appliance only for the intended purpose as described in the user guide and installation guide of this appliance. When using this appliance, always exercise basic safety precautions including the following:**

**General**

- This product has been designed for personal, family or household use. This product is not designed for any commercial use.
- Do not touch or operate the appliance with wet hands or with bare feet.
- A damaged power cord must be replaced by a Fisher & Paykel trained and supported service technician or similarly qualified person in order to avoid a hazard. Do not use the machine until it has been repaired to avoid a risk of electric shock.
- Do not operate this appliance if it has been damaged during transport. Contact your Fisher & Paykel dealer or Fisher & Paykel trained and supported service technician.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or given instructions on how to use the appliance by someone responsible for their safety.
- Never place dripping wet clothes on top of the washer as this could create an electrical hazard.
- Keep children away from the washing machine while it is in operation.
- Supervise children to ensure they do not play with the appliance or climb inside the drum.
- Do not swing on or put weight on the door.
- Check and remove all objects from pockets, e.g. lighters and matches.
- The washing machine should only be used for washing and rinsing of textiles where this is indicated on the care label.
- Do not add petrol, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapours that could ignite or explode.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they give off vapours that could ignite or explode.

- The door will be locked from the start of the cycle until the cycle is complete for safety reasons. It is possible to open the door during the cycle under certain conditions. Never force the door open.
- Do not touch the door during a cycle as the door can become hot.
- When 90°C temperature is selected, the door glass will become hot. Do not touch the glass part of the door. Keep children away from the washing machine.
- Do not open the detergent dispenser during the cycle as hot water may come out of it.
- Read and follow the detergent manufacturer's instructions carefully. Instructions on how to use the detergent will be clearly indicated on the pack. Remember to store your detergents out of the reach of children.
- Do not wash an electric blanket in your washing machine unless the care label specifically states it is safe to do so.
- Do not wash curtains in this washing machine, as sunlight makes them brittle and they may disintegrate during washing.
- The only user-removable parts of the washing machine are the inlet hose(s), dispenser drawer and pump filters. No other parts are designed to be removed by anyone other than a Fisher & Paykel trained and supported service technician.
- Do not overload your washing machine beyond its rated capacity.

| MODEL CODE | MAXIMUM CAPACITY* (KG) |
|---|---|
| WH8560E1 | 8.5kg |

*Capacity refers to the maximum dry weight of items the washing machine can wash at any one time

**Installation**

- Install the appliance on a solid and level floor surface. Ensure it has at least 12mm clearance on each side and at the top, and at least 30mm clearance at the rear.
- The appliance must not be installed on any textured floor coverings (e.g. carpet, rugs).
- This appliance can be installed on a compatible Fisher & Paykel plinth. To ensure stability, the plinth must be fitted correctly with the appliance. For installation instructions and compatible plinth models, refer to fisherpaykel.com.
- Do not install or operate this appliance on any other plinth or structure.
- Ensure the installation provides accessibility to the plug or incorporate a switch in the fixed wiring in accordance with the wiring rules to allow disconnection of the appliance from the supply after installation.
- Do not attempt to lift washer on your own as this could cause harm or injury. Always lift appliance with at least two people.
- Ensure any transit bolts have been removed before operating appliance.

**Water supply requirements:**

- Inlet water pressure: Max. 1MPa (145psi), Min. 50kPa (7.3psi)
- Inlet water flow rate: Min. 6 litres/minute
- A pressure-reducing valve must be installed if pressure is higher than 1MPa.
- For optimum wash performance check the supply pressure is within the recommended range.
- New hose sets provided should be used to connect the appliance to the water mains. Old hose sets should not be re-used.

- We recommend the inlet hose(s) are changed every 5 years. WARNING: Failure to do so may result in a flood and damage to property.
- The hot water temperature should not exceed 65°C and the cold water temperature should not exceed 35°C. Temperatures above these may cause the appliance to fault or cause damage to it.

**Disposal**

- When disposing of this appliance, the door should be removed to avoid children getting trapped inside, and that the electrical cable is cut off close to the cabinet.




## Features and accessories

① Detergent/softener dispenser drawers

② Control panel

③ Door seal

④ Pump filters




| Control panel | |
|---|---|
| ① **Display** | Displays cycle information, settings, indicators and alerts. |
| ② **Lock** | Press and hold to lock or unlock the controls to prevent accidental use. The controls can be locked at any time including while a cycle is running.<br><br>When locked, the controls will be unresponsive. |
| ③ **Dial** | Turn to select a cycle or to turn the appliance off. |
| ④ **Favourite** | Press and hold to save your preferred settings for each cycle, or press to load the saved settings for the selected cycle. |
| ⑤ **Wash Temp** | Press to adjust the wash temperature. When set to 0°C, the wash will run without heating. |
| ⑥ **Spin Speed** | Press to adjust the spin speed. |
| ⑦ **Eco** | Press to optimise compatible cycles to be more water and energy efficient. |
| ⑧ **Delay** | Press to set a delayed start time from 1 to 12 hours (in 1 hour increments). |
| ⑨ **Confirm** | Press to confirm the cycle settings before starting a wash. |
| ⑩ **Start/Pause** | Press to start or pause the cycle. |
| ⑪ **Add Item** | Press to pause the cycle and add an item. The washer may need to drain slightly before the door can be opened.<br><br>Press **CONFIRM** ✓ then **START/PAUSE** ▷\|\| to resume the cycle. |


# LOADING SUGGESTIONS

### Sorting

- Sort items according to colour, fabric type, and soil type.
- Wash fine, delicate fabrics separately from thick, heavy fabrics.
- Always separate coloured items from whites, especially when they are new.
- Colour run could be an issue if you wash items at higher temperatures or use delay start.
- Some soils, like mud and blood, are best washed in cold water.
- Oily soils (e.g some foods and marks on shirt collars) are best washed in warm water.
- The care label will advise on how items should be washed.

### Before you load


- Check pockets for items that could damage your clothes or get caught in the machine.
- Close zippers, hooks and eyes, and other fastenings (i.e fasten the opening of duvet/doona covers), and remove loose bra wires. All these can damage both your washer and clothes.
- Place delicate items, such as lingerie, in a mesh laundry bag before placing in the washer.
- Pre-treat any stains, taking care not to spray pre-treaters on your washer as they can cause damage to the plastic surfaces.

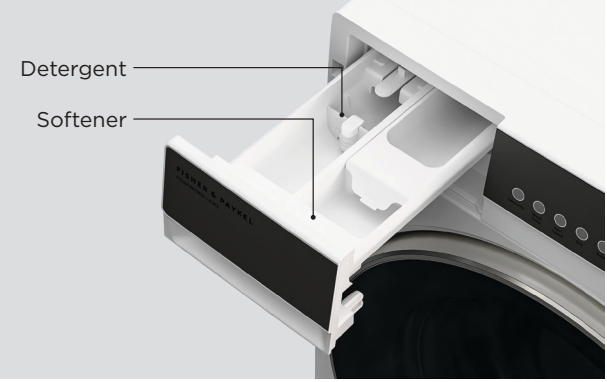



**1.** Lift the detergent flap up for powder detergent, or keep it down for liquid. Add detergent to the main wash compartment and softener to its compartment if using. For pre-wash, add a small amount of powder detergent to the compartment behind the softener. Close the drawer. See ‘Detergent and softener’.




**2.** Place items in the washer. For best results, wash similar items together and do not exceed the maximum capacity for the selected cycle.

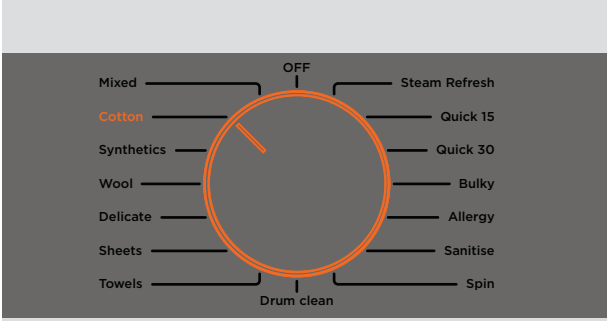



**3.** Turn the dial to select a wash cycle.

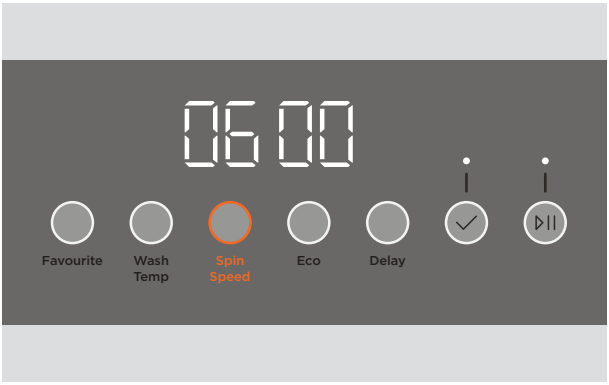


**4.** Adjust the cycle settings as needed or set a delayed start.

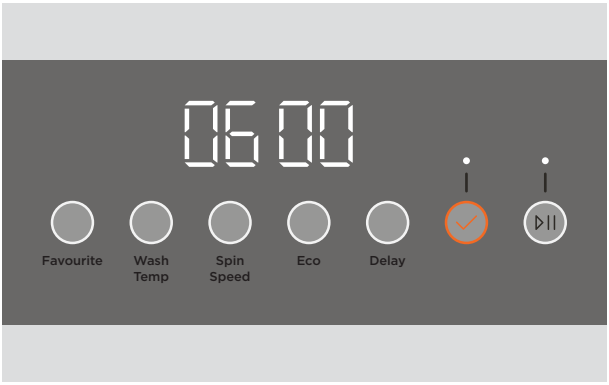



**5.** Press **CONFIRM** ✓ to confirm your cycle selections.

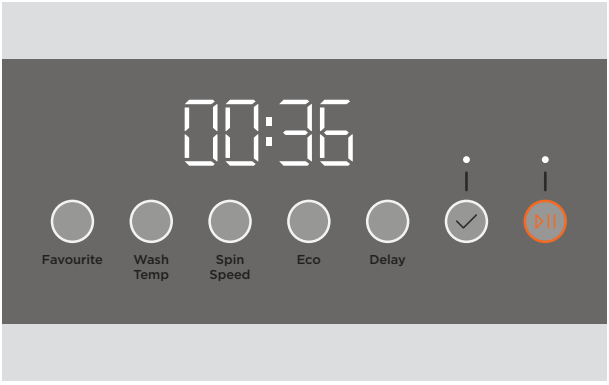


**6.** Press **START/PAUSE** ▷|| to begin the cycle.


## Pausing a cycle

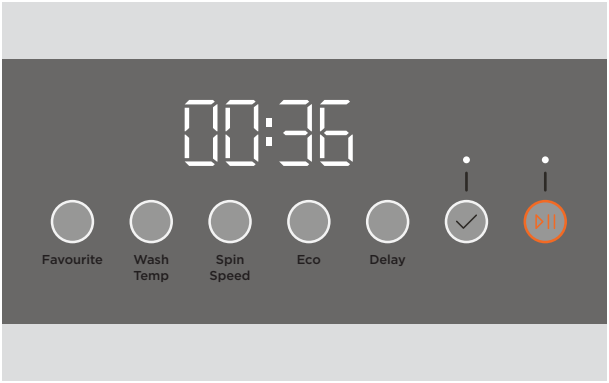


Press **START/PAUSE** ▷|| to pause cycle.

The door will unlock once the temperature and water level have reduced, which may take a few minutes.


## Adding an item

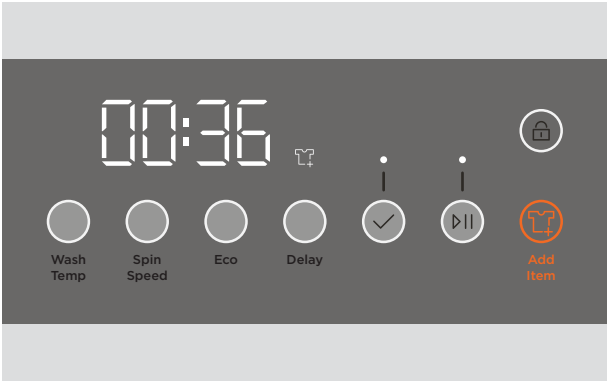


Press **ADD ITEM** at any time during the wash phase of the cycle to add or remove an item.

The door will unlock once the temperature and water level have reduced, which may take a few minutes.

## Cancelling a cycle

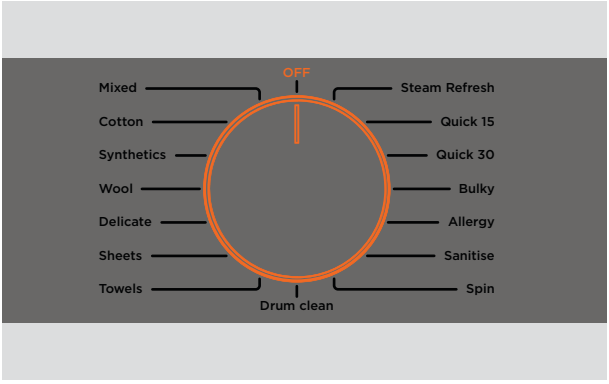


Press **START/PAUSE** ▷|| to pause the cycle. Turn the dial to **OFF** to turn the washer off and cancel the cycle.

If there is water remaining in the drum, turn the washer back on, and select **SPIN** to drain the water before starting a new cycle.

## WASH CYCLES

Your washer has a number of cycles to suit your fabric care needs. Selecting the most appropriate cycle for each particular load will help ensure you get the best results.

| CYCLE | DESIGNED FOR | MAX. LOAD SIZE (KG) | WASH TEMP[2] (°C) | SPIN SPEED (RPM) |
|---|---|---|---|---|
| MIXED | An everyday cycle for mixed fabrics. Ideal for items like t-shirts and trousers. | 8.5 | 30 | 1200 |
| COTTON[1] | A warmer cycle for natural cotton fabrics. | 8.5 | 40 | 1200 |
| SYNTHETICS | An everyday cycle for synthetic fabrics. Ideal for synthetic fabrics and polyester-cotton blends | 4 | 30 | 1000 |
| WOOL[3] | An extra gentle cycle to care for woollen items. This cycle meets the Woolmark requirements for machine washable items. | 2 | 40 | 800 |
| DELICATE | A gentle cycle for delicate items such as blouses and dresses. | 4 | 30 | 600 |
| SHEETS | An optimised wash cycle for bed linen. Ideal for washing sheets, covers and pillowcases. | 5 | 40 | 1400 |
| TOWELS | Designed for washing thick and absorbent items such as towels. | 5 | 40 | 1400 |
| STEAM REFRESH | Designed to refresh items by reducing creases and odours. For best results, use this cycle for one or two items at a time. | 2 items | - | - |
| QUICK 15 | A very quick wash cycle for freshening up new or lightly soiled items. | 2 | 20 | 1000 |
| QUICK 30 | A quick wash cycle for small loads and lightly soiled items. | 4 | 20 | 1000 |
| BULKY | A gentle cycle for large or bulky items. Ideal for items like jackets, duvets and quilts. | 4 | 40 | 800 |
| ALLERGY | A hotter wash with multiple rinses to reduce allergens. Ideal for people with asthma or sensitive skin. | 8.5 | 60 | 1400 |
| SANITISE | A hot cycle designed to eliminate bacteria. Ideal for sanitising items like towels and sheets. | 8.5 | 40 | 1400 |
| SPIN | A quick cycle to remove excess water from items. | 8.5 | n/a | 1400 |
| DRUM CLEAN | A hot water cycle designed to remove any excess detergent buildup. | - | 90 | - |

**Energy and Water Label Cycle**

The cycle for energy and water labelling in accordance with AS/NZS 2040:2021 and AS/NZS 6400:2016 is as follows: Cotton, Wash Temp.: 40°C, Spin Speed: 1400, Eco: On. This cycle is the recommended energy and water saving cycle for normally soiled everyday washing, equal to the rated capacity

**Note for Testing Laboratories:** The powder detergent is placed directly into the bottom of the drum. No more than the maximum amount of anti-foaming agent is then placed into the bottom of the drum followed by the PBIS solution. The load is then added in accordance with AS/NZS 2040:2021.

**Hot Sanitise**


This cycle complies with the bacterial removal requirements of GB 21551.5-2010. Average elimination rate for the following bacteria, Staphylococcus aureus & Escherichia coli >99.9%

**Allergy Care**

This cycle complies with the dust removal requirements of QB/T 5958-2023. Average elimination rate for the following allergen Dermatophagoides farinae =100%


# SETTING A FAVOURITE

Save your preferred settings for each cycle for quick access.

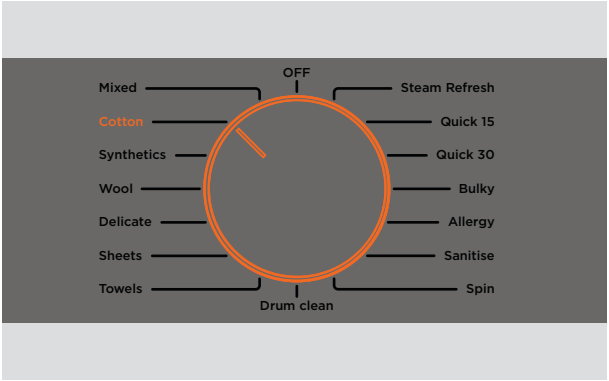


**Setting favourites**

**1.** Select a cycle and your preferred cycle settings.

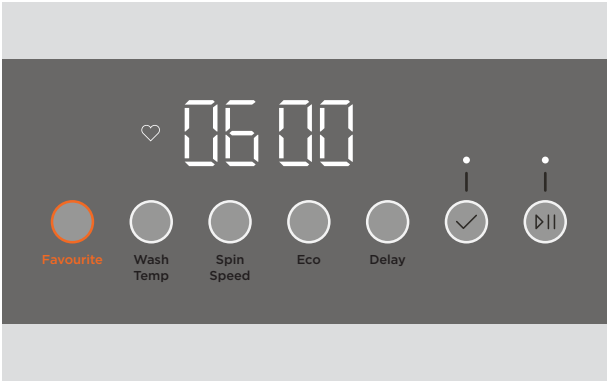



**2.** Press and hold **FAVOURITE** for 3 seconds to save the selected settings. The heart icon will illuminate when saved.

Next time you select the cycle, press **FAVOURITE** to load the saved settings.

# RESETTING FAVOURITES

Reset the washer to remove any saved favourites. This will reset saved settings across all cycles.

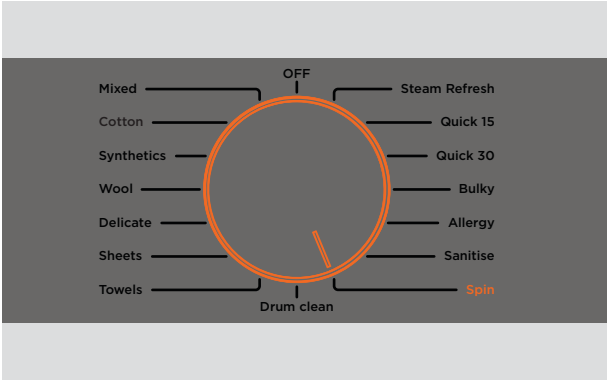



**Resetting favourites**

**1.** Turn the dial to **SPIN**.




**2.** Press and hold **WASH TEMP** and **SPIN SPEED** together for 3 seconds to reset all saved settings. dEF will appear on the display.

# DETERGENT AND SOFTENER

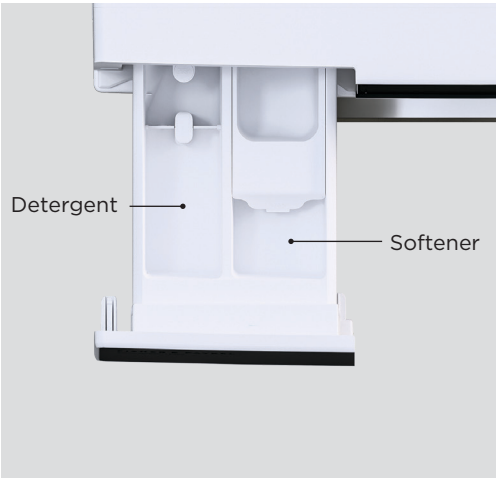


**Detergent**

Use low-sudsing detergent suitable for front loader washers.

Main wash: add liquid or powder detergent to the main compartment. Lift the detergent flap up for powder; keep it down for liquid.

Pre-wash: the compartment behind the softener is for a small amount of powder detergent when using pre-wash.

Add softener only to the softener compartment.

**Do not overfill the detergent compartment. Too much detergent could result in water and detergent spilling onto the floor.**

**Ensure the dispenser is completely closed before starting the cycle. Do not open it again until the cycle is complete and the washer has stopped spinning.**

**Detergent advice**

If you have noticed unpleasant odours in your washer, you may not be using enough detergent for the soil level in your loads. Run a **DRUM CLEAN** cycle then try using a high detergent dose.

If you find foam leaking from your washer, ensure you are using a low-sudsing for front loader type detergent.

Check the quantity you are using against the manufacturer's recommended dose on the label. You may need to adjust the amount you are using.

**Fabric softener**

The washer will automatically flush the fabric softener during the rinse part of the cycle.

- Fabric softener cannot be used on **STEAM REFRESH**, or **SPIN** or **DRUM CLEAN** cycles.

**Fabric softener advice.**

- Clean your dispenser regularly.
- Clean your washer regularly using the **DRUM CLEAN** cycle.
- Complete wash cycles at a wash temperature at 40°C or above at regular intervals (eg every 5th wash) as washing in cold water increases the chance of waxy build-up occurring.

Waxy build-up can occur within any washer when fabric softener comes in contact with detergent. This build-up is not brought about by a fault in the washer. If allowed to build up in the machine it can result in stains on clothes and an unpleasant smell in your appliance.

**Surfaces and accessories**

Wipe with a damp cloth and dishwashing liquid, then dry with a clean, lint-free cloth. We do not recommend using the following cleaning products as they may cause damage:

- Plastic or stainless steel scouring pads
- Abrasive, solvent, household cleaners
- Acid or alkaline cleaners
- Handwash or soap
- Stainless steel cleaners or polishes
- Laundry detergents or disinfectants

**Cleaning the drum and the door**

- Run a regular Drum Clean cycle.
- Wipe the rubber seal around the door to prevent odours. Remove any items or lint and wipe out any water.
- Remove dirt or lint from the drum and wipe it clean. Do not leave metal objects in the drum as these may rust and cause staining.
- Leave the door open when not in use to prevent odours. Keep children and pets away from the washer so they cannot become trapped inside it.

**Cleaning the hose(s)**

Each hose contains a filter to stop contaminants in the water from entering your washer. Occasionally, disconnect the hoses where they connect to the taps and wash out any dirt build-up.

**Moving your washer**


- Remove the dispenser drawer and empty out any detergent or softener. Refer to ‘Cleaning the dispenser drawer.’
- Clean the pump filter and ensure any water in the washer is drained. Refer to ‘Cleaning the pump filter’.

**Products that might damage your washer**


- Concentrated bleaches, laundry pre-soakers/sanitisers, stain removers and hydrocarbon solvents (eg petrol and paint thinners) can cause damage to the surfaces eg control panel, and other components of your washer.
- Be careful when washing items stained with solvents as they are flammable. DO NOT put them in your dryer.
- Use of dyes in your washer may cause staining of the plastic components. The dye will not damage the washer but we suggest you thoroughly clean your washer afterwards. We do not recommend the use of dye strippers in your washer.
- Nappy sanitisers and bleach are very corrosive to metal surfaces. DO NOT tip the contents of a nappy bucket into your washer. Rinse and wring items out thoroughly before placing them in the washer.

## CLEANING THE DISPENSER DRAWER


Check and clean the dispenser drawer regularly to remove build-up. Turn the machine off at the wall before cleaning these parts.

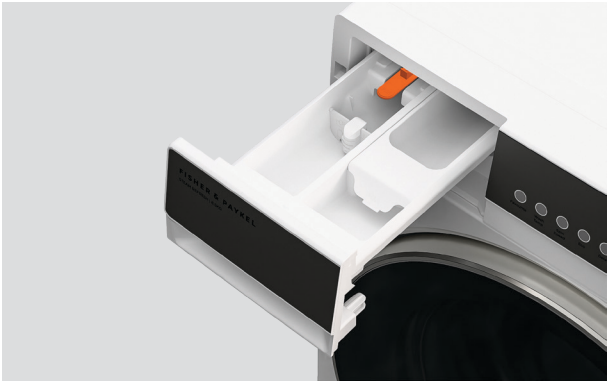

**1.** Pull the drawer out as far as it will go, press the release tab, and remove it from the machine.

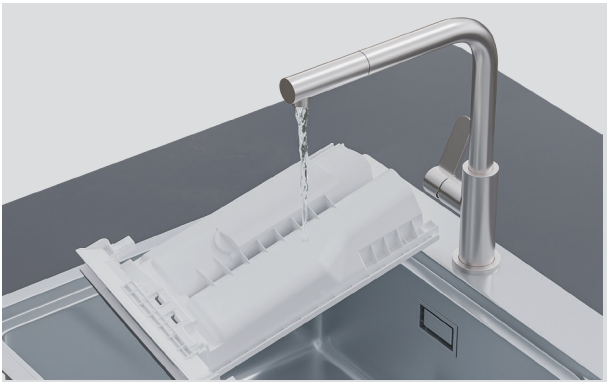

**2.** Empty any remaining detergent by turning the drawer upside down over the sink.

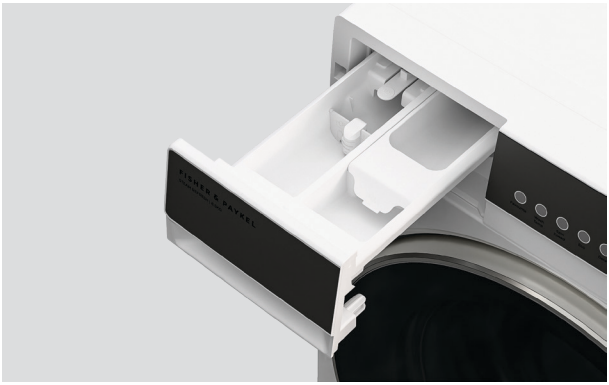


**3.** Rinse with warm water to remove residue, shake to clear compartments, then dry and refit the drawer.

# DRUM CLEAN

Run the drum clean cycle regularly to clean your machine.

- Ensure the drum is empty.
- Add washing machine cleaner directly into the washer drum.
- Follow the manufacturers instructions for recommended dosage.

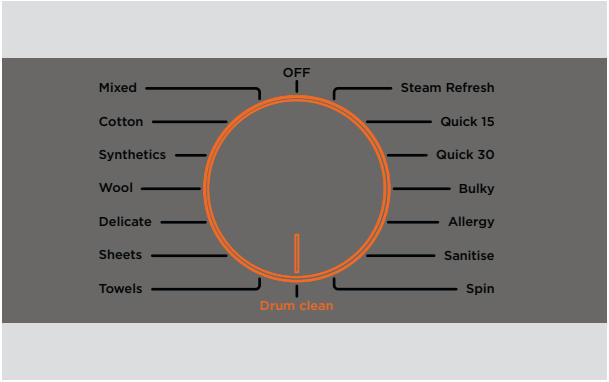


**1.** Turn the dial to select **DRUM CLEAN** then press **CONFIRM** ✓ followed by **START/PAUSE** ▷|| to begin the cycle.

## UNLOCKING THE DOOR

Use the door release tab to unlock the machine door during a power failure. The door release tab is located behind the pump filter cover.



**1.** Press the filter cover to release it.



**2.** Pull the tab down to open.


When power is restored, the wash/dry cycle will resume. If the cycle doesn't resume automatically, press **START/PAUSE** ▷||.

## CLEANING THE PUMP FILTER

Check and clean the pump filter if you notice the washer is not draining. Disconnect washer from the power supply before you remove any parts.



**1.** Push the centre of the filter cover to open, then unhook the hose and pull it out.

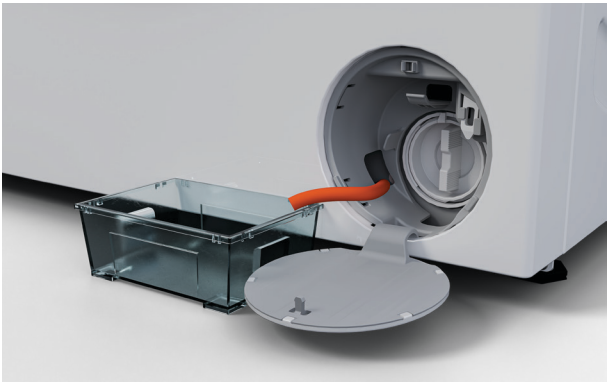


**2.** Remove the hose plug, and drain water into a shallow dish.

**After draining, replace the plug and refit the hose in the housing.**



**3.** Turn the filter anti-clockwise to remove. Some water may leak from it.

Clean and rinse the filter.

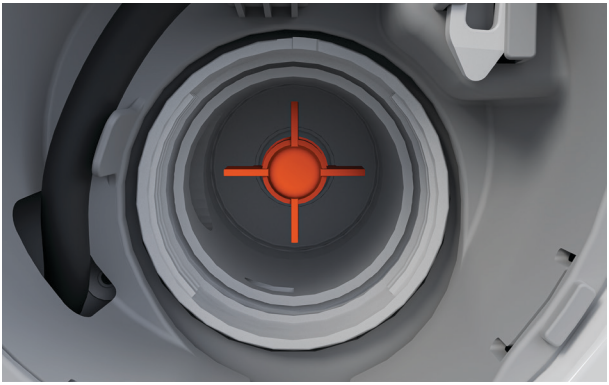

**4.** Check and clear the cavity behind the filter, and check that the impeller behind the filter moves freely.



**5.** Refit the filter and turn it clockwise until the handle is in the vertical position.

# TROUBLESHOOTING

## General use

**Why will the appliance not turn on?**

- No power. Check the appliance is connected to the power supply. Turn the dial to select a cycle and turn the washer on.

**Why is the display not responding?**

- The controls are locked. Press and hold **LOCK**.
- Appliance needs to be reset. Turn the dial to OFF and wait a few seconds, then reselect your cycle. If the problem persists, disconnect from the power supply, wait a few seconds, then turn it back on.

**Why is the washer not starting?**

- Door not closed. Check nothing is obstructing the door, and close it firmly.
- Cycle confirmed but not started. Press the **START/PAUSE** button to start the cycle.
- Washer is overloaded. Remove some items and restart the cycle.
- Delay start is set.
- The controls are locked. Press and hold **LOCK**.
- There is a fault. See 'Faults and alerts'.

**Why did the washer stop mid-cycle?**.

- Cycle has been paused. Press **CONFIRM** ✓ then **START/PAUSE** to resume the cycle.
- The door is open. Close the door and press **CONFIRM** ✓ then **START/PAUSE** to resume the cycle.

**Why is the washer vibrating or making noises?**

- Transit bolts may still be in place. Refer to installation guide for how to remove them.
- Washer overloaded. Press **START/PAUSE** to pause the cycle and remove some items.
- Washer not level. Refer to installation guide for instructions about levelling the washer.
- Load out of balance. Press **START/PAUSE** to pause the cycle and redistribute items.
- Washer has a fault. See 'Faults and alerts'.

**Why is the wash cycle taking so long?**

- Washer is overloaded. Pause the cycle and remove some items.
- Items are tangled. Untangle the items and resume the cycle.
- Incorrect settings for the load. Check the selected cycle and spin speed and adjust if required.
- Washer is not draining. Check the drain hose for blockages and correct if possible. If the problem persists contact Customer Care.

**Why is the fabric damaged after a wash cycle?**
- Cycle settings not appropriate for the load type. Follow instructions on care labels and sort items accordingly. See 'Loading suggestions'.
- Metal parts on the items or in the load may catch on fabric. Always fasten zips, velcro and other clasps before placing items in the washer.

**Why do items keep getting tangled?**
- Loads not separated before going in the washer. Load items individually and try separating larger items from smaller items.
- Load size is too large. Try washing smaller loads. See 'Wash cycles'.
- Wash big items like sheets and duvet covers separately and use the **SHEETS** cycle.
- Cycle settings not the best option for the load type.
- Delicate items not separated. Wash pantyhose, bras and stockings in a small washbag.

**Why do items keep getting creased?**
- Items have been left in the washer after the cycle ended.
- Washer is overloaded. Press **ADD ITEM** to pause the wash and remove some items.
- Use the **DELICATE** cycle. This will reduce spin speed and minimise creases.

**Why is dye transferring between my items?**
- Items not sorted before going in the washer. Separate white and coloured items into separate loads.
- Cycle settings not appropriate for the load type. Follow instructions on care labels and adjust the settings accordingly. See 'Loading suggestions'.

**Why is the washer not draining?**
- Pump filter needs to be cleaned. See 'Clean the pump filter.'
- Drain hose not connected correctly. See the installation guide for instructions.
- Drain hose or drain is blocked. Check the drain hose and drain for blockages and correct if possible. If the problem persists contact Customer Care.

**Why is the washer beeping?**
- The cycle has ended. Items can be removed.
- Washer has a fault. See 'Fault codes'.

**Why is water coming from under the washer?**
- Door not closed. Check nothing is obstructing the door, and close it firmly.
- Dispenser drawer not closed. Close it firmly.
- Drain hose or drain is blocked. Check the drain hose and drain for blockages and correct if possible. If the problem persists contact Customer Care.
- Drain hose not connected correctly. See the installation guide for instructions.

**Why is my washing wetter than I expect at the end of the cycle?**
- Out of balance load affecting spin speed. Redistribute the load and run a spin treatment to remove excess water.
- Quick or delicate cycles have slower spin speed and can result in wetter washing at the end of the cycle. Select a different cycle or adjust the cycle settings as needed.

**Why are my clothes not as clean as I expected?**
- Incorrect cycle or settings for the load. Select a different cycle or adjust the wash settings.
- Not enough detergent. Increase the amount of detergent added.
- Washer overloaded so can't wash items properly. See 'Wash cycles' for maximum load capacity guidance.
- Ineffective detergent. Use a good quality detergent for best results.
- Washer still has residual dirt from previous wash. After washing particularly soiled clothing, empty the washer and run a **RINSE** cycle to remove residual dirt.

**Why is the remaining cycle time not accurate?**
Cycle time is an estimate based on load size and water flow rates. It adjusts throughout the cycle to give you an estimation of minutes remaining. The time shown is not the Declared Program Time.

**Why does my item have wet patches on after a STEAM REFRESH cycle?**
This is normal and helps remove wrinkles. Remove the item from the washer immediately at the end of the cycle and hang up to dry for a few minutes before wearing.

**Why does my washer smell after a cycle?**
- Drum and door need to be cleaned. See 'Cleaning'.
- Try using a different detergent.
- Leave the washer door open slightly after a cycle so it can dry out.

# FAULT CODES

**How do I know if there is a problem?**

Your appliance will beep and an alert will show in the display.

**What to do**

First try to fix the issue and clear the alert according to the instructions on-screen or the steps in the following table.

**If problem persists**

① Note down the fault code
① Contact Customer Care.

| FAULT CODE | POSSIBLE CAUSE | WHAT TO DO |
|---|---|---|
| CLR FLTR | The washer is not draining properly within the expected time. | Clean the pump filter. |
| | | Check that the drain hose is installed correctly. |
| E2 | The door is not closed properly. | Close the door firmly and try starting the cycle again. |
| E4 | The washer did not reach the required water level within the expected time. | Check that the water supply tap is fully open and water pressure is normal. |
| | The drain hose may be self-siphoning. | Check that the drain hose is installed correctly. |
| E8 | The washer has detected an abnormal water level. | Contact Customer Care. |
| E5 | The washer is not draining within the expected time. | Clean the pump filter. |
| | | Check that the drain hose is installed correctly. |
| F + Number | An internal fault has been detected. | Contact Customer Care. |
| nd | A cycle has not been selected. | Select a cycle and press **CONFIRM** ✓ then **START/PAUSE** ▷\|\| to begin. |
| Lock | The water level, temperature, or spin speed is too high to allow the door to open safely. | Wait until the washer cools and the water has drained. The door will unlock automatically when it is safe. |
| Eb | Laundry is trapped in the door seal. | Open the door and reposition the laundry inside the drum. |
| | | Close the door and press **CONFIRM** ✓ then **START/PAUSE** ▷\|\| to restart the cycle. |

## NZ

**To access your Warranty and Service Guide**

Scan the QR code with your smartphone to access your warranty and book a service, or view online at https://www.fisherpaykel.com/nz/help-and-support/warranty-information

## AU

**To access your Warranty and Service Guide**

Scan the QR code with your smartphone to access your warranty and book a service, refer to your separate warranty and service book or view online at https://www.fisherpaykel.com/au/help-and-support/warranty-information

This product has been designed for use in a domestic (residential) environment. This product is not designed for any commercial use. Any commercial use by the customer will affect this product's Manufacturer's Warranty.

Complete and keep for safe reference:

Model _____

Serial No. _____

Purchase Date _____

Purchaser _____

Dealer _____

Suburb _____

Town _____

Country _____

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets and are subject to change at any time.

The product specifications in this guide apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time.

For current details about model and specification availability in your country, please go to our website or contact your local Fisher & Paykel dealer.

**433669B 09.26**