DISHDRAWER™ DISHWASHER
INSTALLATION GUIDE

Components required	3
Accessing your product specifications	4
Prior to installation	6
Prepare dishwasher	12
Install dishwasher	19
Connect services	28
Installer checklist	33

FISHER & PAYKEL

EU

434475A 09.26

CONTEMPORARY DOUBLE DISHDRAWER™ DISHWASHER

DD60D4HDX2

COMPONENTS REQUIRED

TOOLS

Not supplied

- [ ] Box cutter
- [ ] Cross head screw driver
- [ ] Flat blade screw driver
- [ ] Drill
- [ ] 1x 13mm Drill bit
- [ ] Level
- [ ] Pliers
- [ ] Pencil
- [ ] 57mm Hole saw drill bit (refer to page 9)

PARTS

Supplied and required

- [ ] 4x Side brackets
- [ ] 2x Top brackets
- [ ] 1x Sealing tape
- [ ] 9x 16mm Cross head screws
- [ ] 1x Pre-finished toe kick panel
- [ ] 5x Toe kick screws
- [ ] 1x Drain hose support
- [ ] 1x Drain hose joiner
- [ ] 2x Wire clips
- [ ] 1x Clamp

Supplied

- [ ] 4x Spacer sets

To access installation videos, scan the QR code or go to: https://www.fisherpaykel.com/nz/dishdrawer-installation-videos


The videos provide an overview of the DishDrawer™ installation and are not intended to be used as a standalone guide.

Installation should be undertaken by a Fisher & Paykel trained and supported service technician or qualified person.

ACCESSING YOUR PRODUCT SPECIFICATIONS

For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.


The cavity and under countertop base materials and surfaces must be moisture resistant. If they are not, seal or paint them with a moisture resistant coating system.

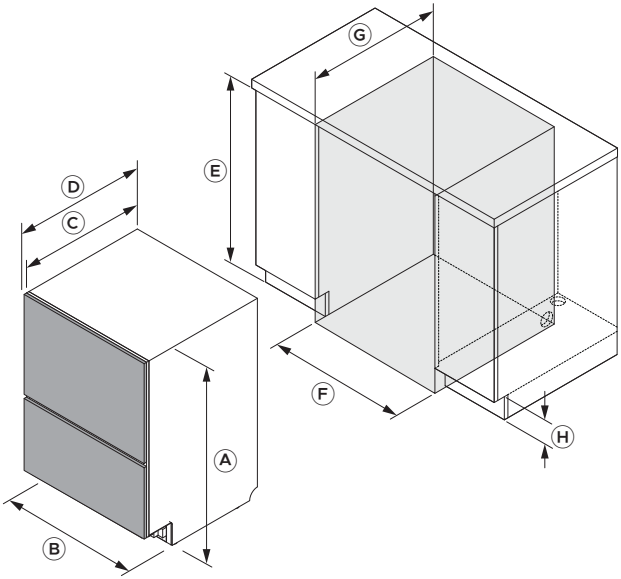

Dimensions	mm
Ⓐ Chassis height*	820 - 880
Ⓑ Chassis width	599
Ⓒ Chassis depth	553
Ⓓ Overall depth	573
Ⓔ Cavity minimum height	822 - 882
Ⓕ Cavity minimum width	600 - 610
Ⓖ Cavity minimum depth including drawer panels	580
Ⓗ Toe kick height*	101-161

*Height depends on feet adjustment.


PANEL SPECIFICATIONS

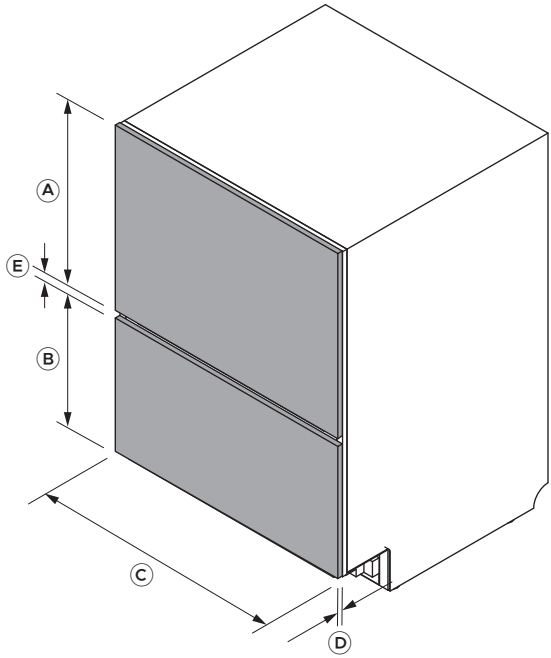

Panel Dimensions	DD60D4HDX2X
	mm
Ⓐ Upper panel height	398
Ⓑ Lower panel height	312
Ⓒ Panel width	596
Ⓓ Panel thickness	20
Ⓔ Ventilation gap	8

fisherpaykel.com/specify

1. Refer to the Planning Guide for cabinetry, cavity and service specifications.

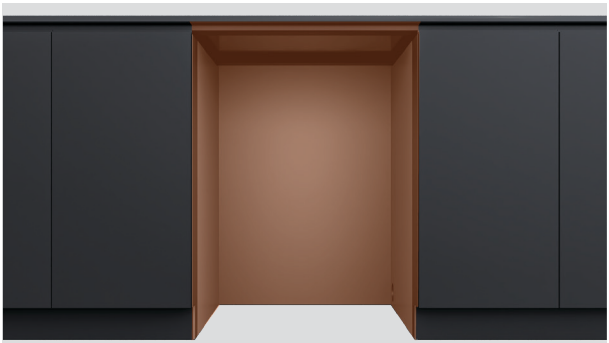


2. The cavity and under countertop base materials and surfaces must be moisture resistant.

If they are not, seal or paint them with a moisture resistant coating system.



3. Check that the cavity is clean and in good order.

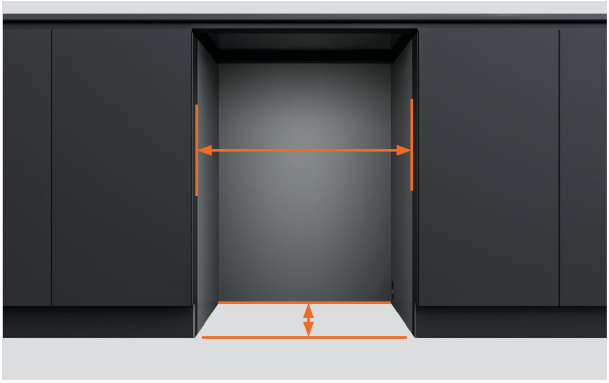


4. Ensure the cabinet meets the minimum cavity specifications required.

Check that the cabinet sides are square.



5. If the cavity is too wide, add material to the sides to allow the dishwasher to be secured.

See the planning guide for details.

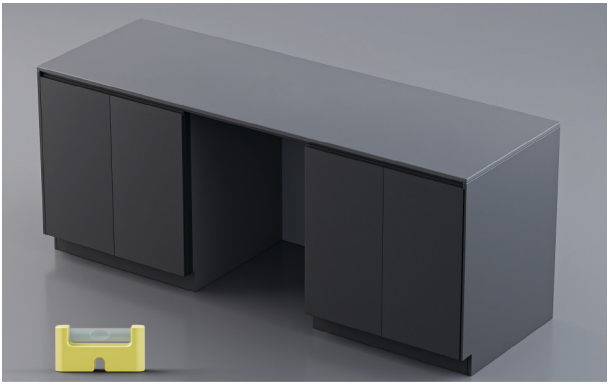

6. Check that the cabinet is level.




7. The power plug should be accessible after installation for future maintenance.



8. Service holes can be routed from the dishwasher cavity, into the toe kick space, and through to the adjacent cavity.


PRIOR TO INSTALLATION - SERVICES

Refer to the Planning Guide at fisherpaykel.com for service options.

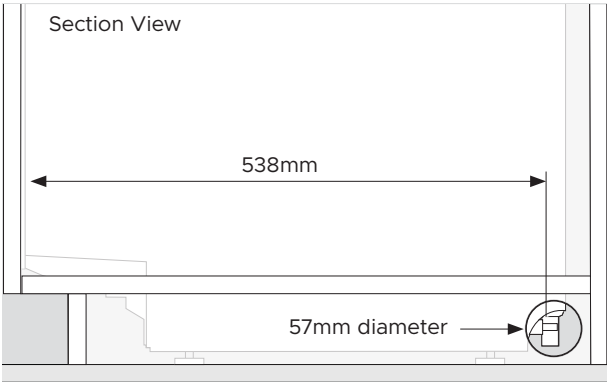


1. A minimum 57mm diameter service hole is required in the cabinet side.

The center of the hole should be a minimum of 538mm from the front of the dishwasher chassis.

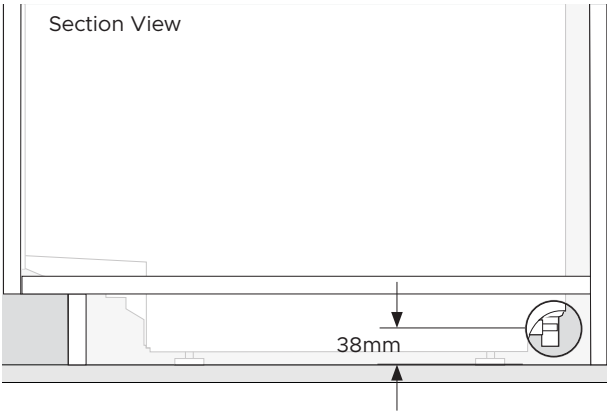

2. The center of the hole should be a maximum of 38mm from the floor or the bottom of dishwasher feet.

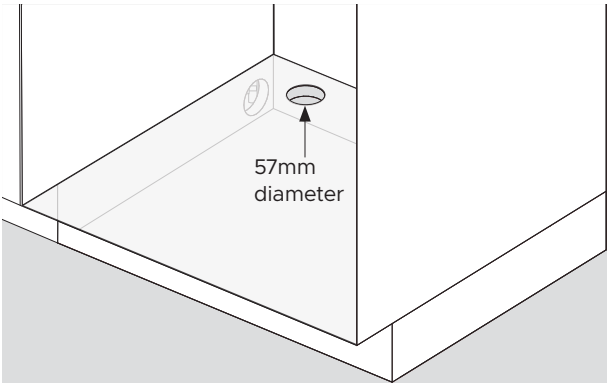


3. A minimum 57mm diameter service hole is required in the adjacent cabinet shelf.


UNPACK ALL PRODUCTS



1. Carefully remove the plastic wrap.

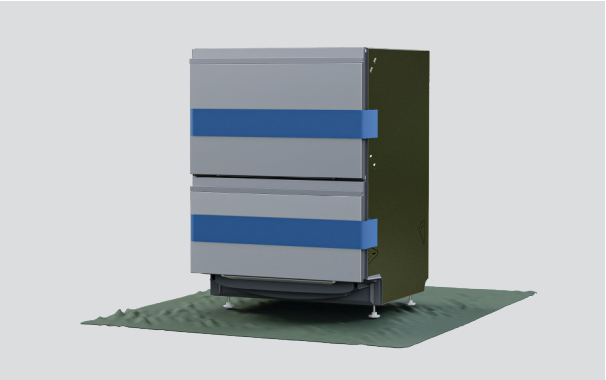


2. Protect flooring before removing the base.

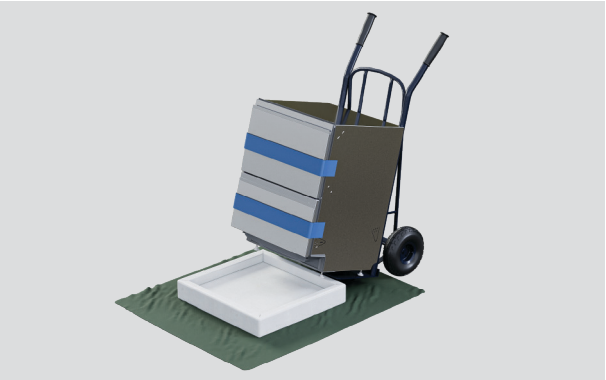

3. To detach the base, use a trolley to lift the dishwasher from the rear, then pull the base off.

Open the top drawer carefully to prevent the dishwasher tipping.

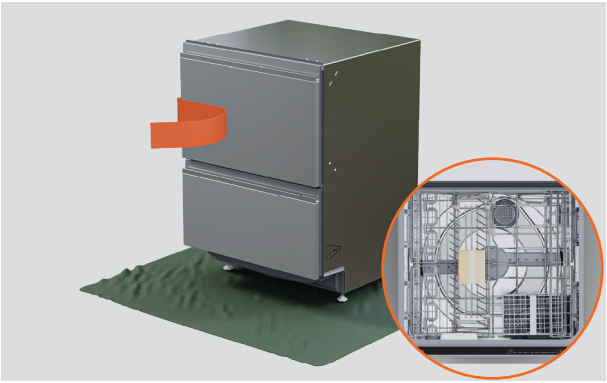

4. Peel the tape from the top drawer and remove accessories and installation packages.

Close the drawer and re-apply the tape.




5. Dispose of packaging responsibly.

APPLY SEALING TAPE



1. Ensure underside of countertop is clean and free of dust.

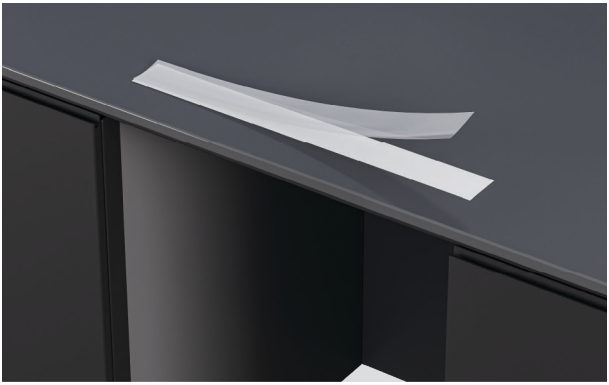

2. Remove backing from tape.




3. Apply tape centrally along the underside of the countertop or cavity edge.

The sealing tape must be free of creases, folds, or air bubbles.


DISHWASHER SECURING OPTIONS

The dishwasher must be secured to stay in place and prevent vibration. Three fixing points on each side of the chassis are recommended.

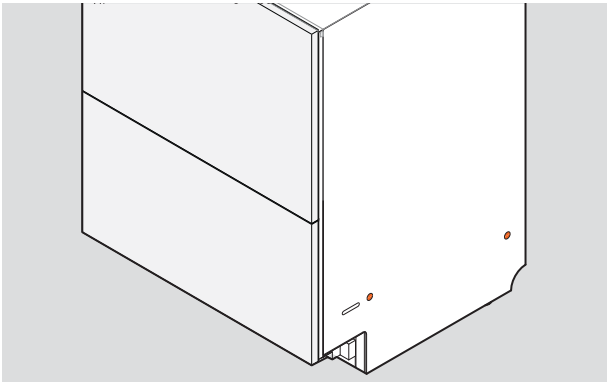

1. Securing through chassis:


Screws must be fixed through the chassis sides and into the cabinet sides or packers.

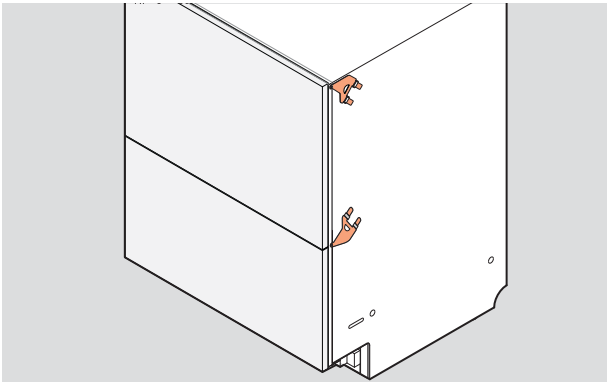

2. Securing through side brackets:

Upper or lower bracket sets can be inserted into the chassis sides and fixed to the edges of the cabinet.

Both sets can be used if needed.

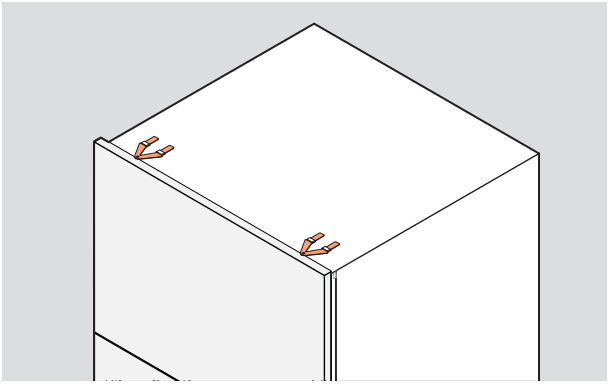

3. Securing through top brackets:


If needed, brackets can be inserted into the chassis top.

These may be used depending on the cabinet or countertop material.

Ensure the screws are flush with the cabinet surface to avoid damaging the drawer panel.

TO ATTACH SIDE BRACKETS

The brackets must lie flat on the chassis with the locking tabs facing out. The locking tabs must be properly inserted through the slots to secure the brackets.

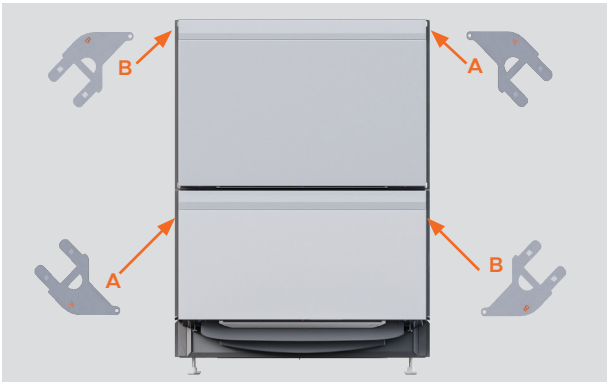


1. Locate the upper and lower bracket sets.



2. If using the upper bracket set, insert into the slots and tap gently with a soft mallet to secure.

Push the screw tab through the gap in the rubber seal.

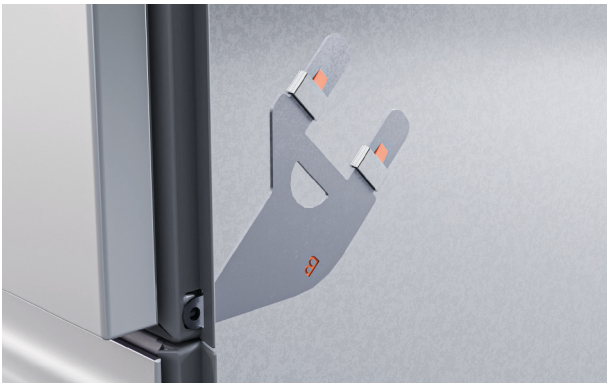


3. If using the lower bracket set, insert into lower slots and tap gently with a soft mallet to secure.

Push the screw tab through the gap in the rubber seal.

TO ATTACH TOP BRACKETS


Use top brackets if the cabinetry is suitable and the screw heads will be flush to prevent drawer panel damage.

The brackets must lie flat on the chassis with the locking tabs facing out.

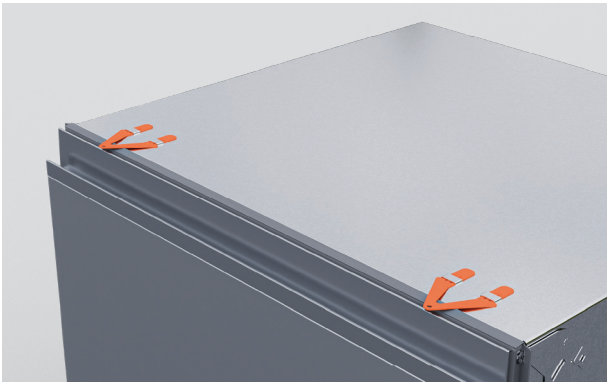

1. Place the top brackets into the slots.

Push the screw tab through the gap in the rubber seal.

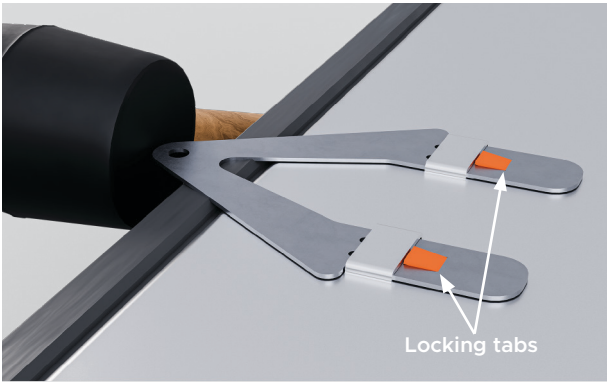


2. If necessary, tap gently with a soft mallet to secure.


ATTACH SPACERS



1. Snap off the four spacers with an adhesive strip.

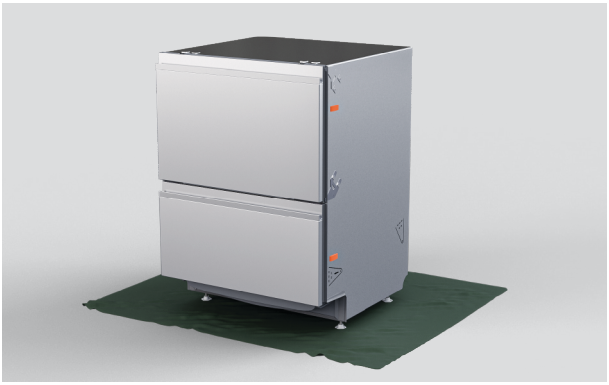


2. Place spacers on each side of the dishwasher between the brackets.

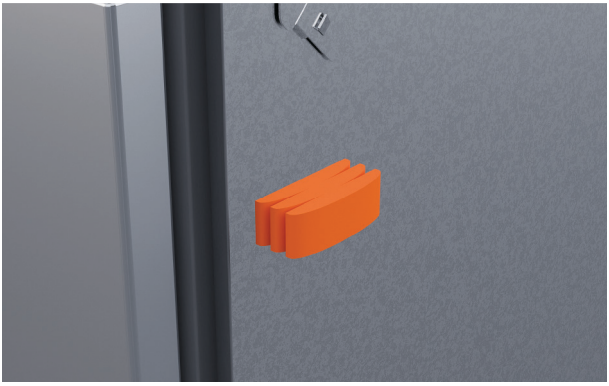


3. If required, a larger spacer segment can be snapped on to adjust the thickness.

ADJUST DISHWASHER HEIGHT


Ensure the drawers are secured with tape. Take care not to bend the feet when tilting the dishwasher. Further adjustments will be made once the dishwasher is inside the cavity.

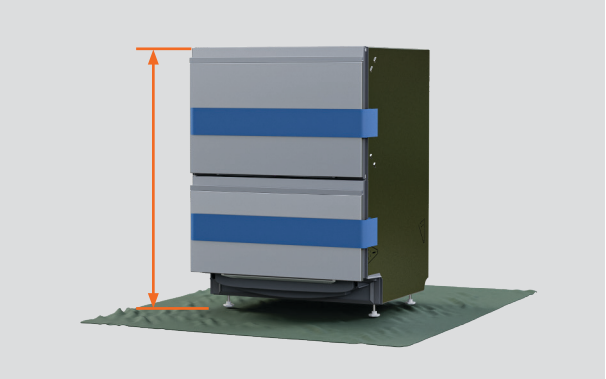

1. Measure the height of the dishwasher from the feet to the top of the chassis.

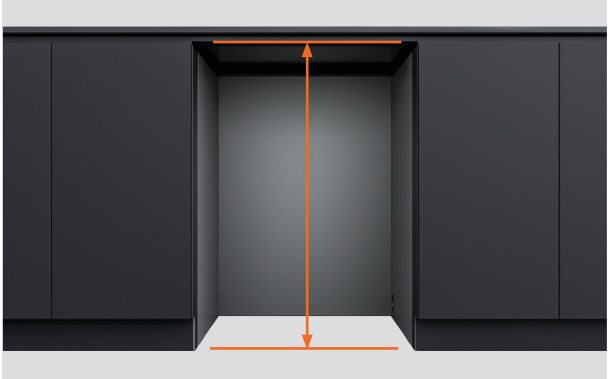

2. Measure the distance from the floor to the underside of the countertop or cavity frame.

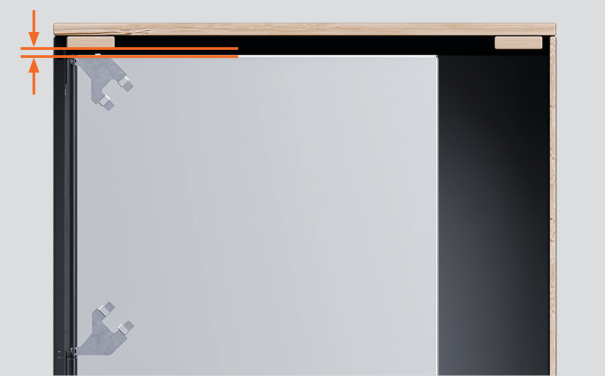


3. Adjust the dishwasher height to 3 to 5mm below the cavity height.

ADJUST DISHWASHER HEIGHT




4. Tilt the dishwasher to rest on its back feet. Unscrew or tighten the front feet to adjust height.

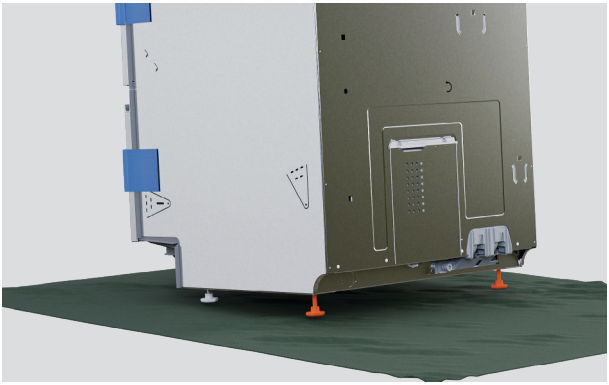


5. Tilt the dishwasher to rest on its front feet. Unscrew or tighten the back feet to adjust height.

PUSH INSIDE CAVITY

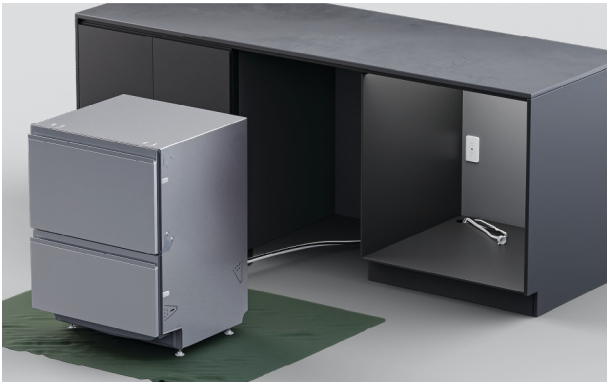

1. Place hoses and cords through the service holes and into the adjacent cavity.

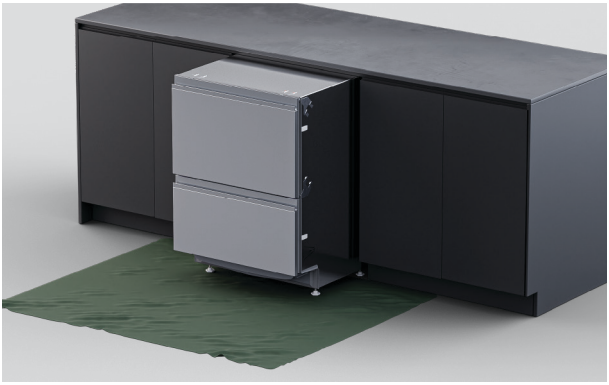

2. Carefully push the product into the cavity, feeding the hoses through the service holes as you go.

Avoid crushing or twisting the hoses.

LEVEL THE DISHWASHER

The minimum gap between the drawer panel and countertop or frame is 2mm.




1. Measure the gap between the top of the drawer panel and the countertop or frame for height adjustment.



2. Pull the lower drawer halfway out to remove the tub.

On each side of the tub, push locking tabs back.

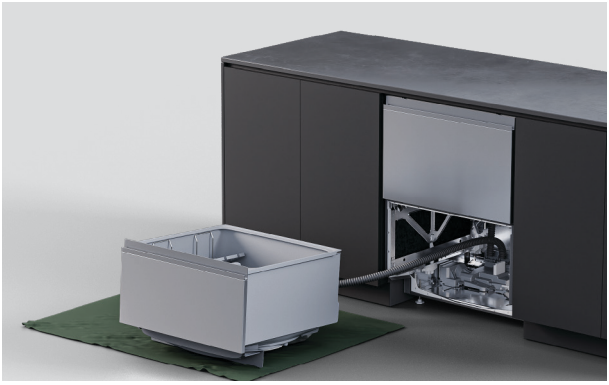

3. Place the drawer on a protected surface to the left of the appliance.

Do not stretch or disconnect the hoses and cords.




4. Use a spanner to adjust the height of each foot.



5. Check that the gap is a minimum of 2mm.

Adjust height if necessary.

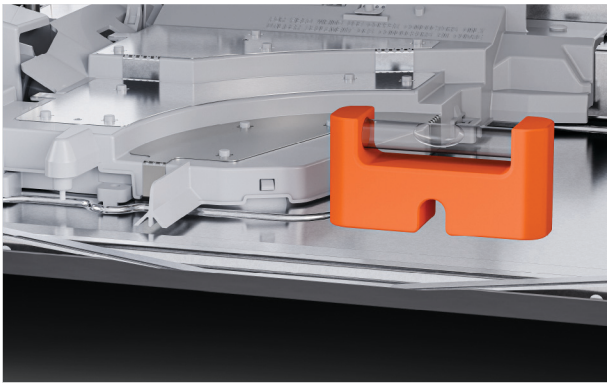

6. Place a level on the flat area of the chassis to check that the dishwasher is level from back to front and left to right.


SECURE THROUGH CHASSIS SLOT

Slots in the chassis sides allow screws to be temporarily fixed and the dishwasher to be adjusted within the cavity. Panel alignment can then be checked before final fixing.




1. Pull the drawer halfway out to remove the tub.

On each side of the tub, push locking tabs back.

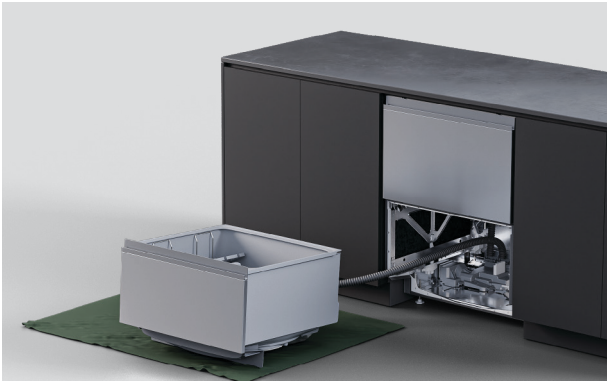

2. Place the drawer on a protected surface to the left of the appliance.

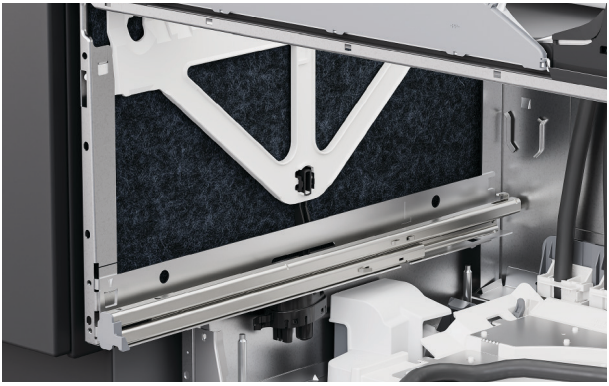


3. On the chassis sides, lift the insulation.

SECURE THROUGH CHASSIS SLOT




4. Fit a screw in each chassis slot to secure to the cabinet.

Partially tighten screws ensuring adjustments can be made.

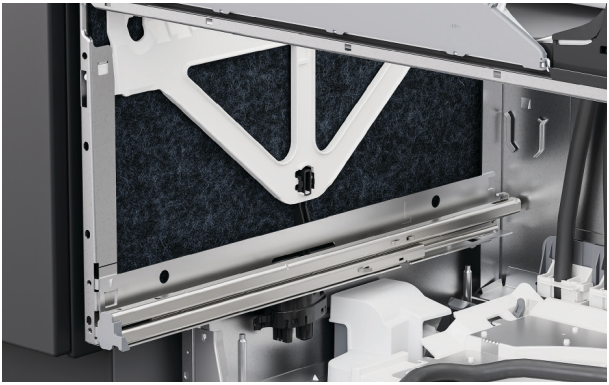


5. Refit insulation ensuring it is positioned correctly and will not obstruct the drawer runners.

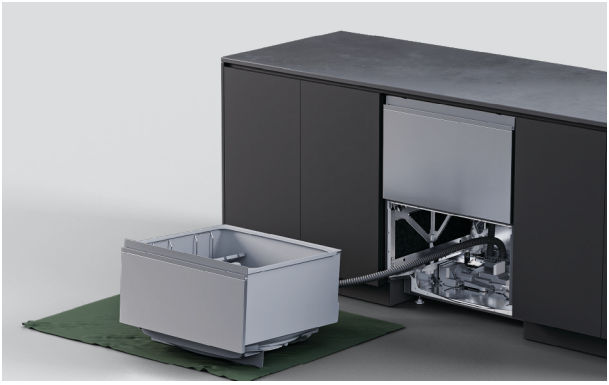


6. Check that the face of the top panel is aligned with the surrounding cabinetry.

Adjust the dishwasher in the cavity if required.

SECURE THROUGH CHASSIS

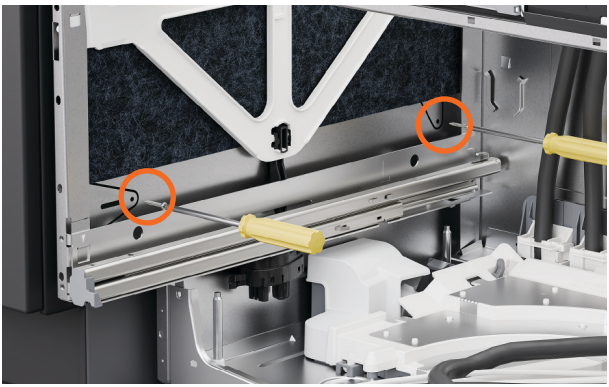

1. Insert screws through the two holes on each side of the chassis.

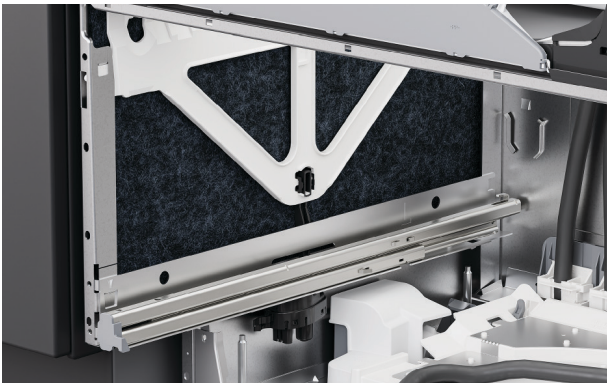

2. Ensure insulation is repositioned correctly and will not obstruct the drawer runners.



3. Place the tub back onto the runners, pull locking tabs forward and click drawer into place.

SECURE USING BRACKETS



1. If using side brackets, partially open the top drawer.

Lift the rubber seal and remove the left and right screw covers from the trim.



2. Fix side brackets using the supplied screws and replace the screw covers.




3. If top brackets are inserted, fix using the supplied screws.

Ensure the screw head is flush and clear of the top of the drawer panel when closed to avoid damage.

INSTALL PRE-FINISHED TOE KICK



The pre-finished toe kick is suitable for a depth of 38 - 56mm.

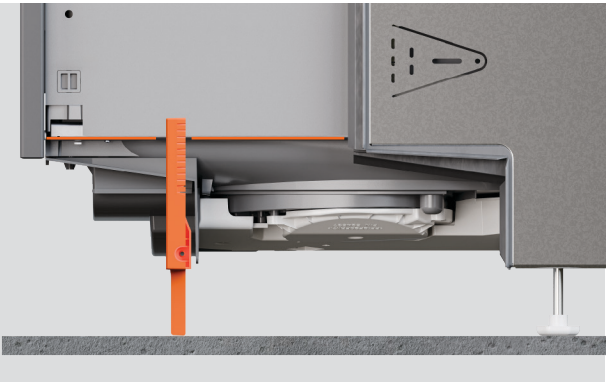

1. Open the bottom drawer.

Rotate the toe kick so the tabs are resting on the floor.




2. Mark the point where the toe kick meets the edge of the tub.

INSTALL PRE-FINISHED TOE KICK



3. Score the toe kick on both sides with a box cutter on a protective surface.


Snap or cut off excess and smooth the edge with a file.

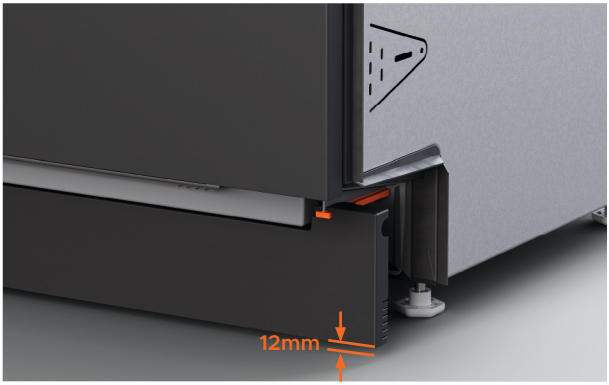

4. Snap off the top tabs.

Slide the pre-finished toe kick along the T rails into position.

Ensure there is a 12mm gap between the toe kick and the floor.

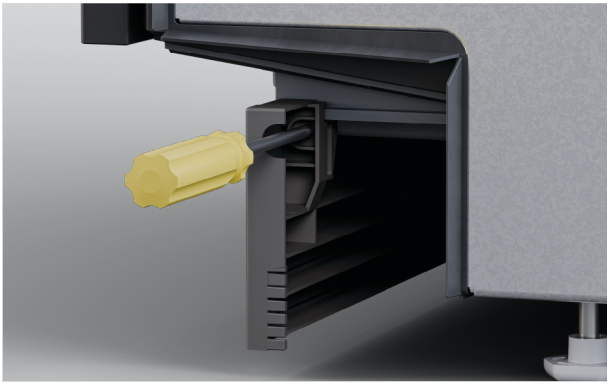


5. Tighten the side screws firmly but do not over tighten.

DRAIN CONNECTION OPTIONS

Water pressure: Maximum 1 MPa (145 psi), min. 0.1 MPa (14.5 psi).


Water connection: 3/4" BSP (GB20) to suit flat washer.

Recommended temperature: Cold water connection @ 20°C

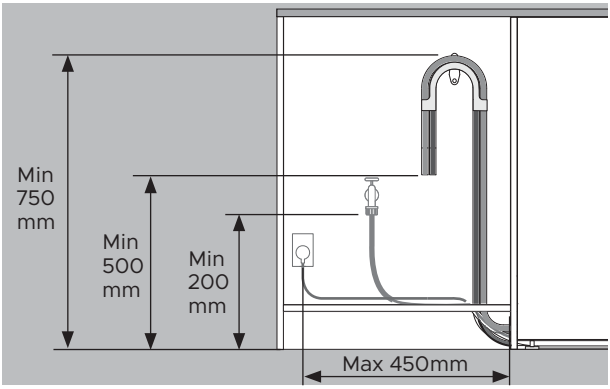


Distances are the same for all installs.

- Floor to support top - min 750mm.
- Floor to drain hose end - min 500mm.
- Floor to water inlet - min 200mm.
- Cabinet side to center of electrical outlet - max 450mm.

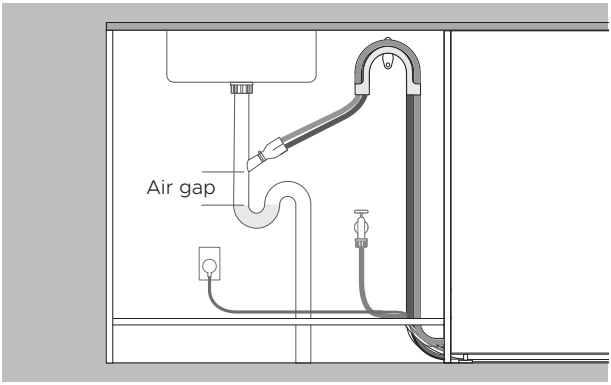

Drainage routed to spigot

- Spigot must be higher than standing water with an air gap between to avoid drainage issues.
- Remove excess drain hose to prevent hose drooping below the spigot height.

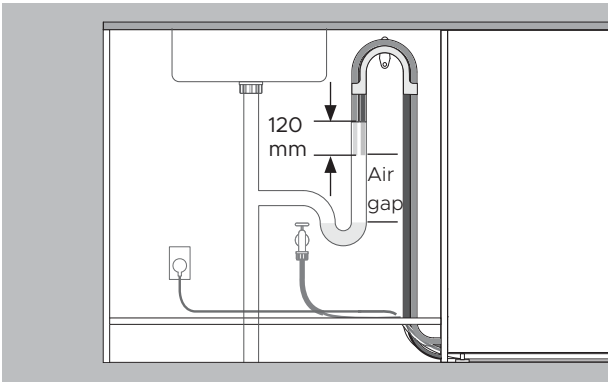

Drainage routed to standpipe

- Drain hose must be higher than standing water with an air gap between to avoid drainage issues.
- Remove excess drain hose.
- Hoses must not extend into standpipe more than 120mm.

INSTALL DRAIN

Ensure the drain hose support is properly installed and the hose is correctly threaded through to prevent damage and drainage issues.


The dishwasher must not be drained into standing water.

If the drain hoses supplied are not long enough to reach your services, a 3.6m drain hose extension kit is available at fisherpaykel.com



1. Install the drain hose support as close to the countertop as possible, with a minimum distance of 750mm from the floor.


Thread the hoses through the support.

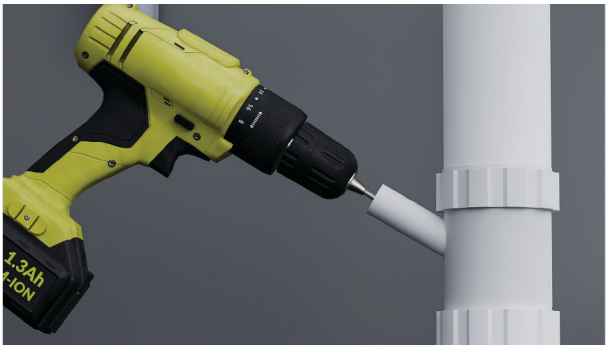

2. For connection to waste tee:

To avoid shavings entering the plumbing system, remove the waste tee before drilling.

Unplug or drill out the waste tee minimum 13mm in diameter before securing joiner.

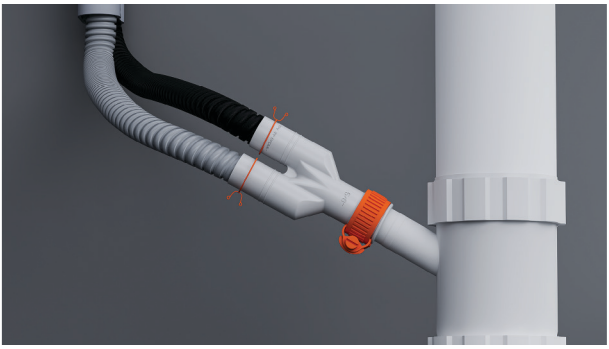

3. Thread wire clips onto the hoses.


Fit the hoses to the supplied hose joiner and secure using the wire clips provided.

Ensure hose is routed straight to the joiner to avoid kinks that can restrict drainage.



1. For connection to standpipe:

Pull both drain hoses through the support guide and rest in standpipe.

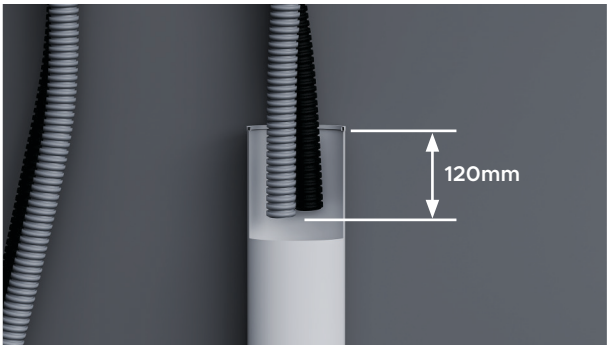


2. Ensure the hoses do not extend more than 120mm into the standpipe to prevent wastewater siphoning back into the tub.

Hoses can be trimmed if necessary.

CONNECT WATER INLET

Do not turn water supply on before power has been connected. The dishwasher must be powered on for flood protection to be enabled.

Isolation taps are required to allow the water supply to be shut off.

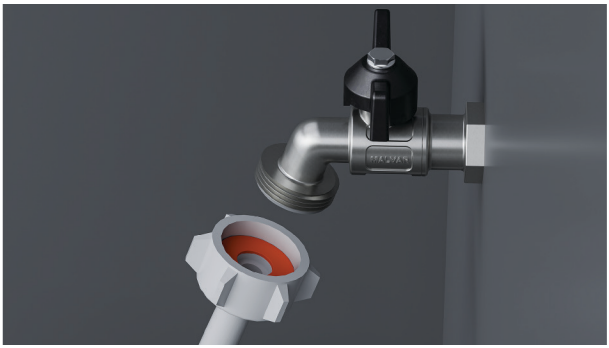

1. Check that the supplied rubber washer is inserted into the coupling.



2. Connect the inlet hose to the tap.

Ensure the inlet hose is not kinked and the tap is not pulled or under pressure.

Do not shorten the inlet hose.



3. Hand-tighten into place. Using a spanner or pliers, turn a further 180° to secure. Avoid over-tightening.


CONNECT POWER

Electrical requirements: 220-240V, 50 - 60Hz, 9A

The power plug should be accessible after installation for maintenance.



1. Connect power.

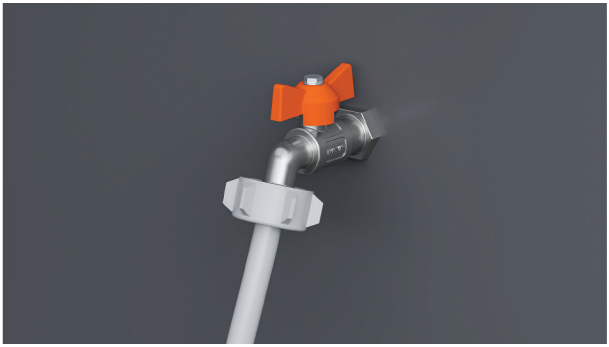

2. Check the water connections.

Turn on the water supply and check for leaks.

The dishwasher must be powered on for flood protection to be enabled.

If power is to be disconnected, ensure water supply is turned off.

INSTALLER CHECKLIST

Installation

- ☐ If power is disconnected, ensure water supply is turned off to prevent flooding.
- ☐ Check all parts are installed correctly and are secure.
- ☐ Ensure all clearance gaps have been maintained.
- ☐ Ensure dishwasher is secure and drawer opens and closes freely with no resistance.
- ☐ Ensure any packaging or tape securing the racks and spray arm is removed.
- ☐ Check the spray arm is in place, mounted correctly and rotates freely.
- ☐ Ensure knock-to-pause module is operating correctly.
- ☐ Ensure that the sealing tape has been applied and is free of creases, folds, or air bubbles.

Plumbing

- ☐ Ensure any knock-outs or plugs in drain connection have been drilled out and drain connection has been made.
- ☐ The drain hose joiner must not support the weight of excess hose material. Keep drain hose as fully extended as possible to prevent sagging. Any excess length of drain hose should be kept on the dishwasher side of the high loop.
- ☐ Ensure inlet hose has supplied rubber washer fitted, and that it's tightened.
- ☐ If connecting the drain hose to the sink trap, ensure the high loop is a minimum 150mm higher than the drain hose joiner.
- ☐ Water softener models: adjust the water softener setting from the default setting to suit the water hardness of the area. Refer to your user guide.
- ☐ Ensure water supply is turned off until power is connected and turned on. The Dishwasher must be powered on for the flood protection feature to be enabled.

Electrical

- ☐ Ensure all electrical tests have been conducted in accordance with local regulations.

Test operation

- ☐ Turn on the power and water supplies, then open the drawer. You should hear a beep and see a program indicator light up on the control panel.
- ☐ Add three cups of water into the drawer.
- ☐ Navigate to RINSE and start the program.
- ☐ Check the knock-to-pause function
- ☐ Repeat for the other drawer.
- ☐ After the Rinse cycle has finished, ensure the dishwasher has run and drained correctly.
- ☐ Check the water supply has been shut off correctly.
- ☐ Check drainage connections for leaks.
- ☐ **If site is left without power after installation is complete, ensure water supply is turned off to prevent flooding.**

Complete and keep for safe reference:

Model _____

Serial no. _____

Purchase date _____

Purchaser _____

Dealer address _____

Installer's name _____

Installer's signature _____

Installation company _____

Installation date _____

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets and are subject to change at any time.

The product specifications in this guide apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time.

For current details about model and specification availability in your country, please go to our website or contact your local Fisher & Paykel dealer.

434475A 09.26