FISHER & PAYKEL

FABRIC CARE SOLUTION

WASHER INSTALLATION

WH1260MZB5, WH1260YZB5 models.

INSTALLATION GUIDE

UK IE EU HK SG

COMPONENTS REQUIRED

TOOLS

Supplied

- [ ] Spanner

Not Supplied

- [ ] Box cutter
- [ ] Phillips #2 screwdriver
- [ ] Level

PARTS

Supplied


- [ ] 1x Cold water hose
- [ ] 1x Hot water hose
- [ ] 1x Blanking cap
- [ ] 7x Plugs
- [ ] 4x Noise reduction pads

Not Supplied

- [ ] 1x Hose clamp

ACCESSING YOUR PRODUCT SPECIFICATIONS

For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

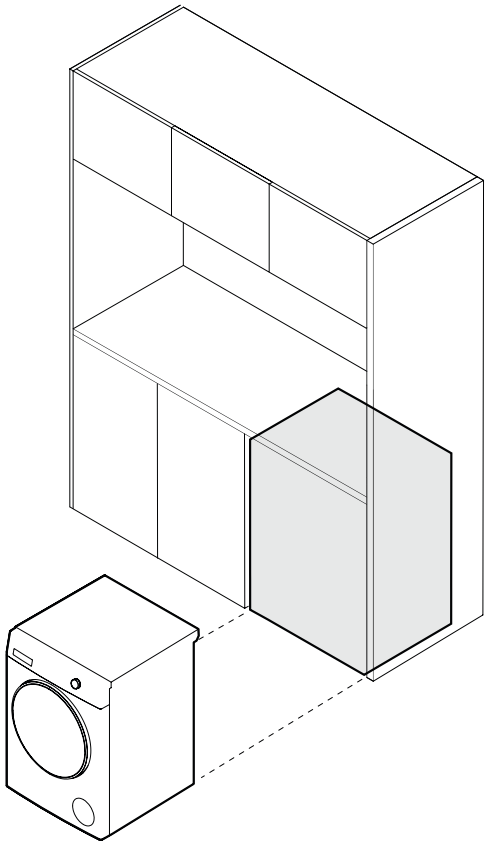

Fisherpaykel.com/specify

1. Ensure cabinetry and servicing specifications have been met and clearances have been considered.

Refer to the Planning Guide for details.



2. Ensure floor is level and clear and a finished return has been created.



3. Ensure power will remain accessible following install to allow access for any future product maintenance.

Service holes should be smooth with grommets installed where required.

Refer to the services section of the Planning Guide for more details.

UNPACK



1. Cut the straps at the line printed on the top of the carton. Lift to remove. Discard braces and corner posts. Remove any packaging and accessories from the drum and base packer.




2. Dispose of packaging responsibly.




3. Protect flooring before positioning washer as close to the installation location as possible, ensuring enough working room is left available.

INSTALL NOISE REDUCTION PADS (OPTIONAL)

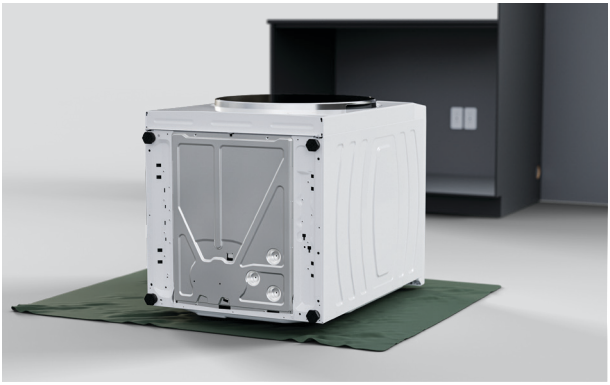


1. Tilt the washer back onto a protected surface such as the plinth carton.

Ensure cords and hoses are not crushed.

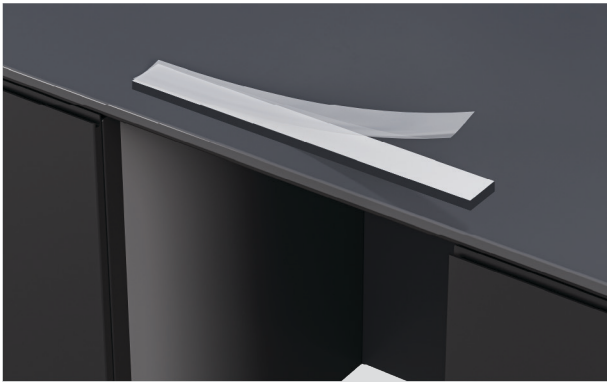


2. Peel the protective film from the sticky side of each pad.

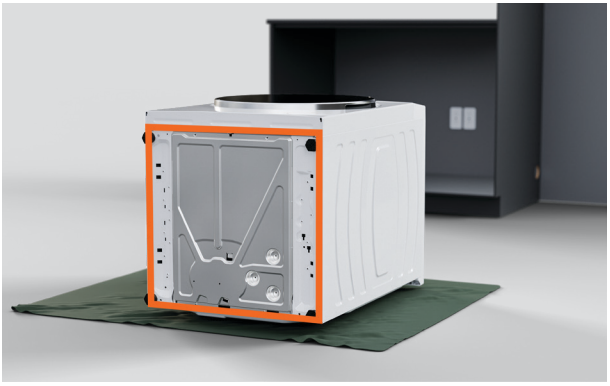

3. Press the pads firmly onto the underside of the product.

Press the long pads on the long sides of washer and short pads on the short sides.

REMOVE TRANSIT BRACKET

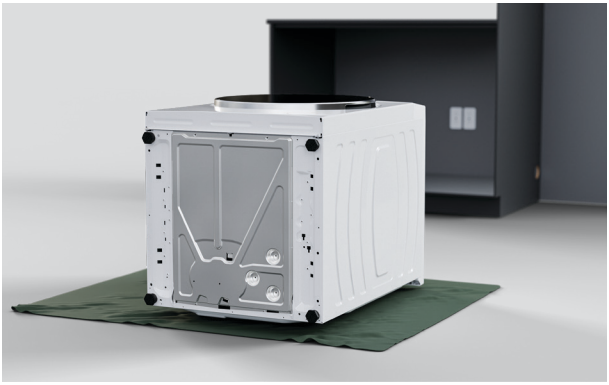


1. Tilt the washer back onto a protected surface such as the plinth carton.

Ensure cords and hoses are not crushed.




2. Remove door transit brackets (if present) by unscrewing the screws. Then tilt the washer back upright.


REMOVE TRANSIT BOLTS

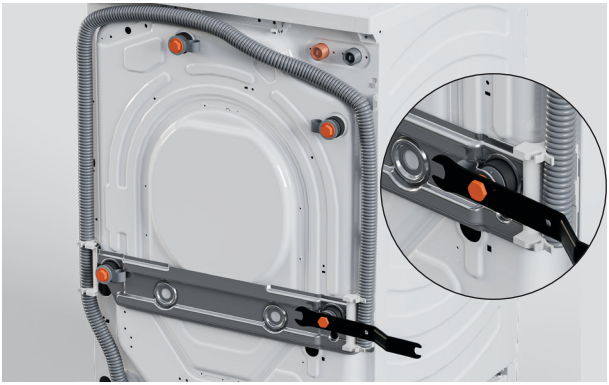

1. Using the supplied spanner, remove all four transit bolts from the back of the washer.

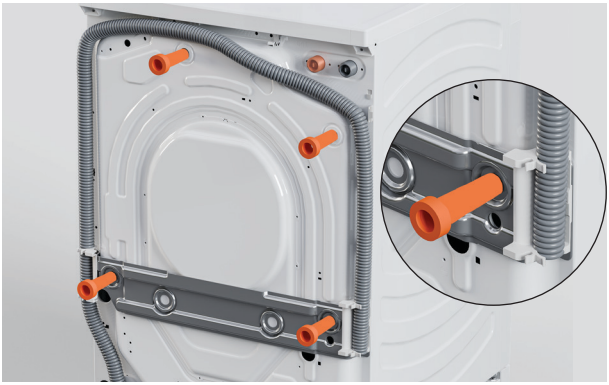

2. Pull the rubber grommets and spacers outwards to remove.

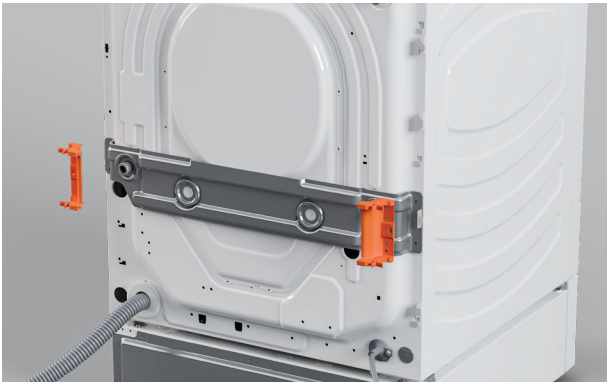

3. Using a Phillips screwdriver, remove the two side brackets.


*Brackets apply to select models only.

REMOVE TRANSIT BOLTS



4. Remove and discard the braces.

*Brace applies to select models only.

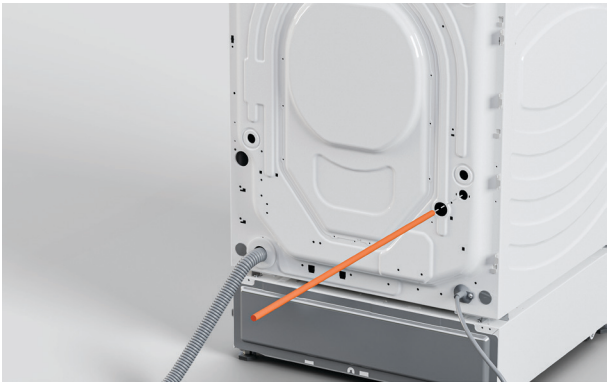

5. Pull the transit rods outwards to remove.

Set aside for future use.

*Transit rod applies to select models only.



6. Cover the transit bolt holes using the supplied plugs.




1. Adjust the feet using the supplied spanner until the washer is level front to back and corner to corner.



2. Once level, move the washer into its final position allowing for required clearances.

Recheck washer is level before removing from the alcove.

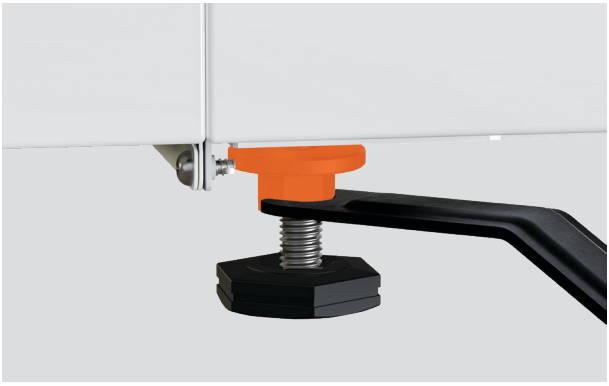

3. Remove the washer from the alcove and tighten locking nuts.

Fisherpaykel.com/specify

1. Refer to the Planning Guide for full service information.



2. Connect the angled end of cold hose to the cold water inlet on the washer.




3. Connect angled end of hot water hose to the orange outlet on the washer. If hot hose is not required, install a blanking cap.




4. Route the power cables and hoses through service holes.

Ensure power will remain accessible following install to allow access for any future product maintenance.

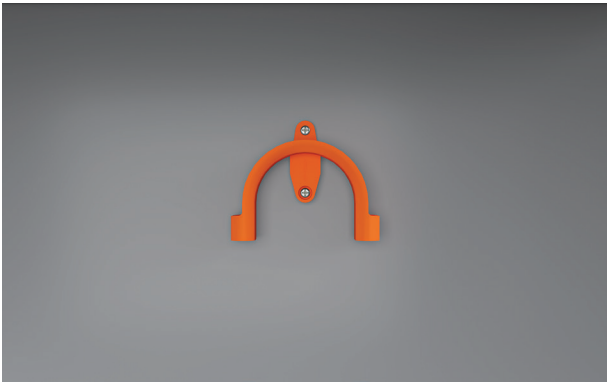

5. **IMPORTANT!** Install the drain hose guide to the back wall.

Refer to the planning guide

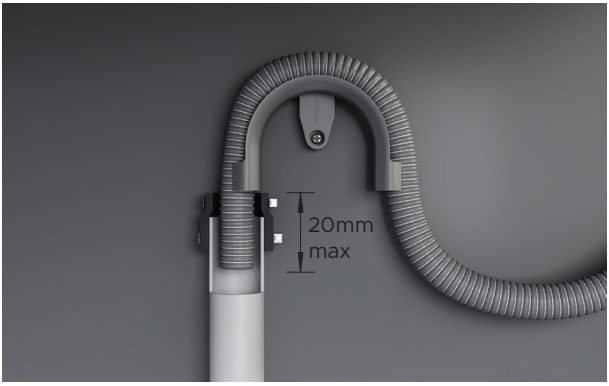

6. Standpipe Installations:

Route the drain hose through the guide and place into the standpipe.

Ensure a maximum of 20mm of the hose rests in the standpipe.



7. Spigot Installations:

Drill out blanking insert from the spigot.


Route the drain hose through the guide and place into the spigot. Secure using a hose clamp.



8. If a dryer drain hose is already fitted to the spigot, fit a dual-outlet adaptor to the spigot.

Connect the washer and dryer drain hoses to the adaptor and secure both with hose clamps.

Check for leaks.

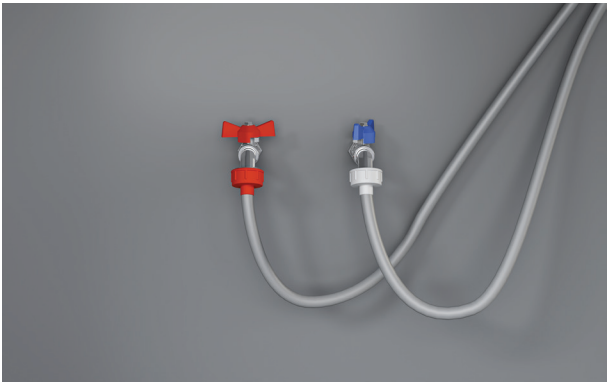

9. Connect hoses to taps before turning on. Check for leaks at all connection points.

If possible, recheck for leaks 24 hours after installation.




10. Connect the power cable and check washer is powered on and connected.



1. Push washer into the alcove.

Take care not to damage hoses or power cord.

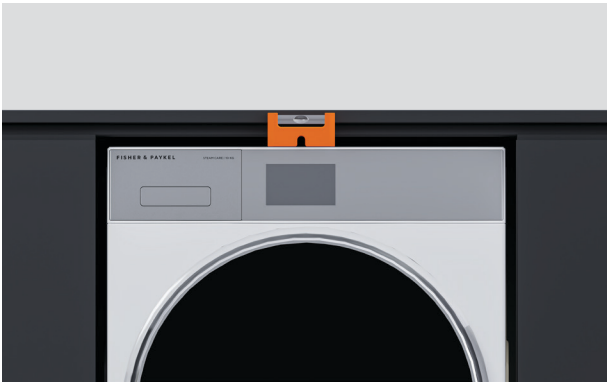

2. Check alignment and ensure required clearances are maintained. Adjust as required.



3. Before using washer, run a first cycle to ensure there are no leaks, that the product is level and water is turned on.

INSTALLER CHECKLIST

TO BE COMPLETED BY THE INSTALLER.

- ☐ **IMPORTANT! Have the packaging and transit bolts and rods been removed?**
- ☐ Is the washer correctly levelled, feet are extended, cabinet corners are clear off the floor and noise reduction pads been added if required?
- ☐ Is the drain hose threaded through the hose guide 'U bend' (with no more than 20mm extended) and hooked into your standpipe or tub, or attached to a spigot?
- ☐ Is the hot hose connected to the hot value marked 'H'?
- ☐ Is the cold hose connected to the cold valve marked 'C'?
- ☐ Have the taps been turned on?
- ☐ Has the power cord been connected to an appropriate power supply and the power turned on?
- ☐ Have you preformed a test cycle?
- ☐ Complete a **DRUM CLEAN** cycle with half-load amount of detergent and without a load to remove any residues remaining in the washer from the Manufacturing process.

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets and are subject to change at any time.

The product specifications in this guide apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time.

For current details about model and specification availability in your country, please go to our website or contact your local Fisher & Paykel dealer.

433985A 11.26