FISHER & PAYKEL

FABRIC CARE SOLUTION

DRYER INSTALLATION

DH9060MZB5, DH9060YZB5, DH9060YLZB5 models.

INSTALLATION GUIDE

UK IE EU HK SG

COMPONENTS REQUIRED

TOOLS

Not supplied

- [ ] Box cutter
- [ ] Phillips #2 screwdriver
- [ ] Level
- [ ] T25 Torx screwdriver

PARTS

Supplied


- [ ] 1x Cold water hose
- [ ] 1x Shoe rack (some models only)
- [ ] 1x Drain hose

Not supplied

- [ ] 1x Hose clamp (spigot and drain hose installations)

ACCESSING YOUR PRODUCT SPECIFICATIONS

For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

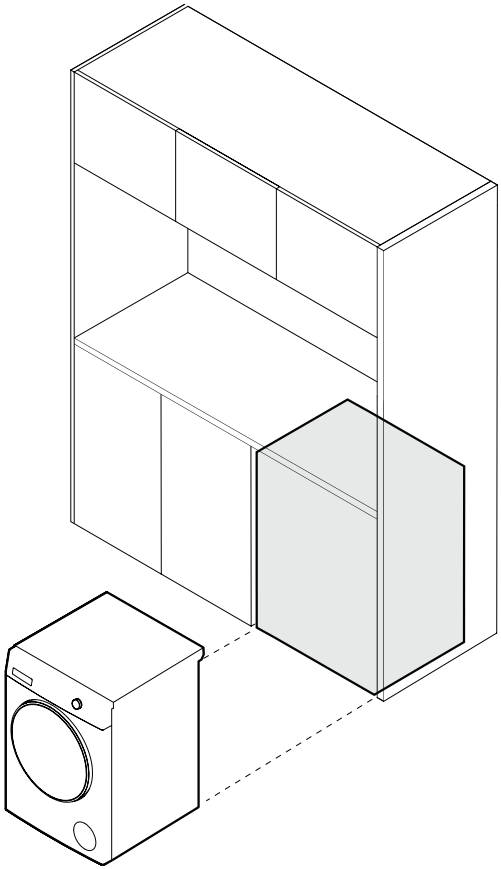

fisherpaykel.com/specify

1. Ensure cabinetry and servicing specifications have been met and clearances have been considered.

Refer to the Planning Guide for details.



2. Ensure floor is level and clear and a finished return has been created.



3. Ensure power will remain accessible following install to allow access for any future product maintenance.

Service holes should be smooth with grommets installed where required.

Refer to the services section of the Planning Guide for more details.

UNPACK



1. Cut the straps at the line printed on the top of the carton. Lift to remove. Discard braces and corner posts. Remove any packaging and accessories from the drum and base packer.



2. Dispose of packaging responsibly.




3. Protect flooring before positioning dryer as close to the installation location as possible, ensuring enough working room is left available.



1. Tilt the washer back onto a protected surface. Ensure cords and hoses are not crushed.

Remove door transit brackets (if present) by unscrewing the screws. Then tilt the washer back upright.

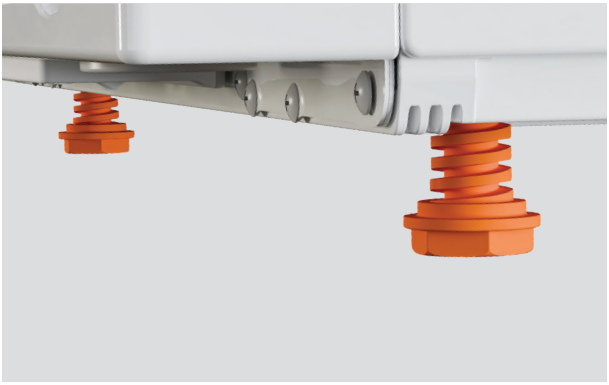

2. Adjust the feet until the dryer is level front to back and corner to corner.




3. Once level, move the dryer into its final position, allowing for required clearances.

Recheck dryer is level before removing from alcove.

CONNECT CABLES AND HOSES

Fisherpaykel.com/specify

1. Refer to the Planning Guide for full service information.

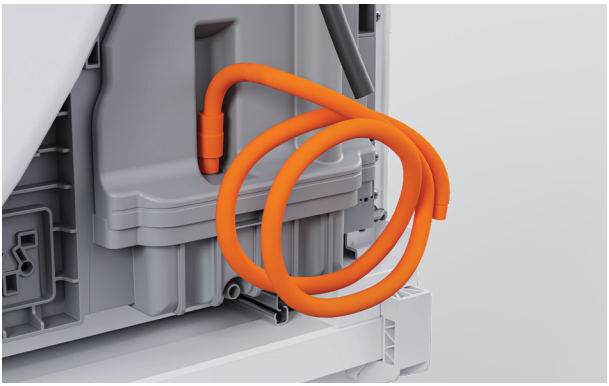

IMPORTANT!

2. Display-free Heat Pump Dryer models:

Display-free models must be plumbed in and the inter product communication cable correctly installed.



IMPORTANT!

3. Converting Heat Pump Dryer to be plumbed in:

Disconnect the black hose from the product and leave disconnected.

Connect one end of the grey hose to where black hose was connected and other end into external drainpipe or sink.

CONNECT CABLES AND HOSES




4. Connect the angled end of the dryer cold hose to the dryer.




5. Route the power cables and hoses through service holes.

Ensure power will remain accessible following install to allow access for any future product maintenance.

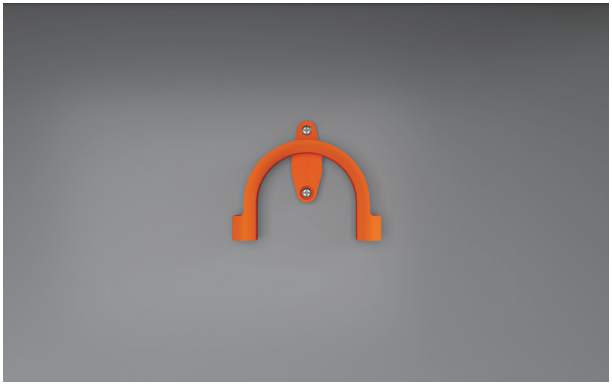

6. IMPORTANT! Install the drain hose guide to the back wall.


Refer to the planning guide for placement details.

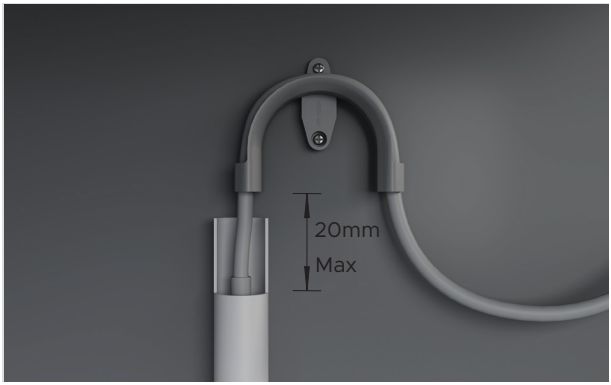

7. Standpipe Installations

Route the drain hose through the guide and place into the standpipe.

Ensure a maximum of 20mm of the hose rests in the standpipe.

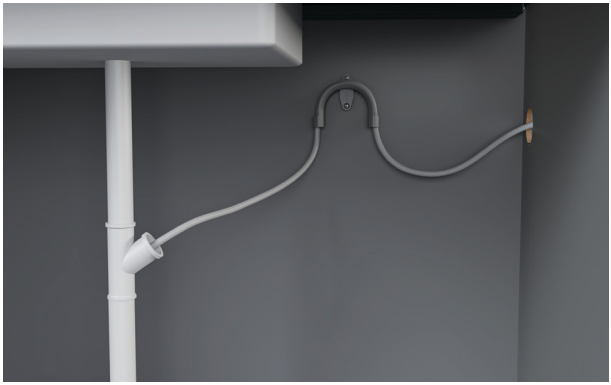

8. Spigot Installations

Drill out blanking insert from the spigot.

Route the drain hose through the guide and place into the spigot. Secure using a hose clamp.



9. Spigot Installations

If a washer hose is already fitted to the spigot, fit a dual-outlet adaptor to the spigot.

Connect the washer and dryer drain hoses to the adaptor and secure both with hose clamps.

Check for leaks.



10. Connect the cold hose to cold water tap and turn tap on.




11. Connect the power cable and check product is powered on.



1. Push dryer into the alcove.

Take care not to damage hoses or power cord.

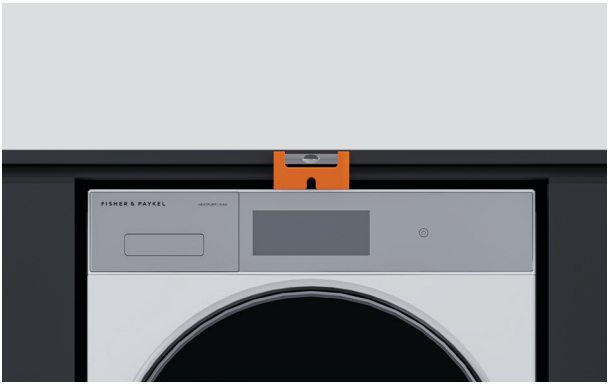

2. Check alignment and ensure required clearances are maintained. Adjust as required.

INSTALLER CHECKLIST

TO BE COMPLETED BY THE INSTALLER.

- ☐ Has the packaging been removed?
- ☐ Is the dryer correctly levelled, feet are extended and cabinet corners are clear off the floor?
- ☐ Is the drain hose threaded through the hose guide 'U bend' (with no more than 20mm extended) and hooked into your standpipe or tub, or attached to a spigot?
- ☐ Is the cold hose connected to the cold valve marked 'C'?
- ☐ Have the taps been turned on?
- ☐ Has the power cord been connected to an appropriate power supply and the power turned on?
- ☐ Have you preformed a test cycle?

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets and are subject to change at any time.

The product specifications in this guide apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time.

For current details about model and specification availability in your country, please go to our website or contact your local Fisher & Paykel dealer.

433986A 11.26