FISHER & PAYKEL

FABRIC CARE SOLUTION

STACKED INSTALLATION (ON PLINTH)

DH9060MZB5, DH9060YZB5, DH9060YLZB5, WH1260MZB5, WH1260YZB5,

FC1260FZB2, FM2060SZB2 models.

INSTALLATION GUIDE

UK IE EU HK SG

COMPONENTS REQUIRED

TOOLS

Supplied

- [ ] 6mm Allen key
- [ ] Spanner (washer)
- [ ] Spanner (plinth)

Not supplied

- [ ] Box cutter
- [ ] Phillips #2 screwdriver
- [ ] Level
- [ ] T25 Torx screwdriver
- [ ] Flat head screwdriver

PARTS

Supplied and required

- [ ] 4x M10 bolts
- [ ] 2x plinth bolt hole covers
- [ ] 6x short stacking kit screws
- [ ] 2x long stacking kit screws

Not supplied


- [ ] 1x Hose clamp (spigot and drain hose installations)

Supplied and to be discarded

- [ ] 2x dryer front brackets
- [ ] 2x dryer rear brackets
- [ ] 2x dryer rear mounting screws

ACCESSING YOUR PRODUCT SPECIFICATIONS


For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

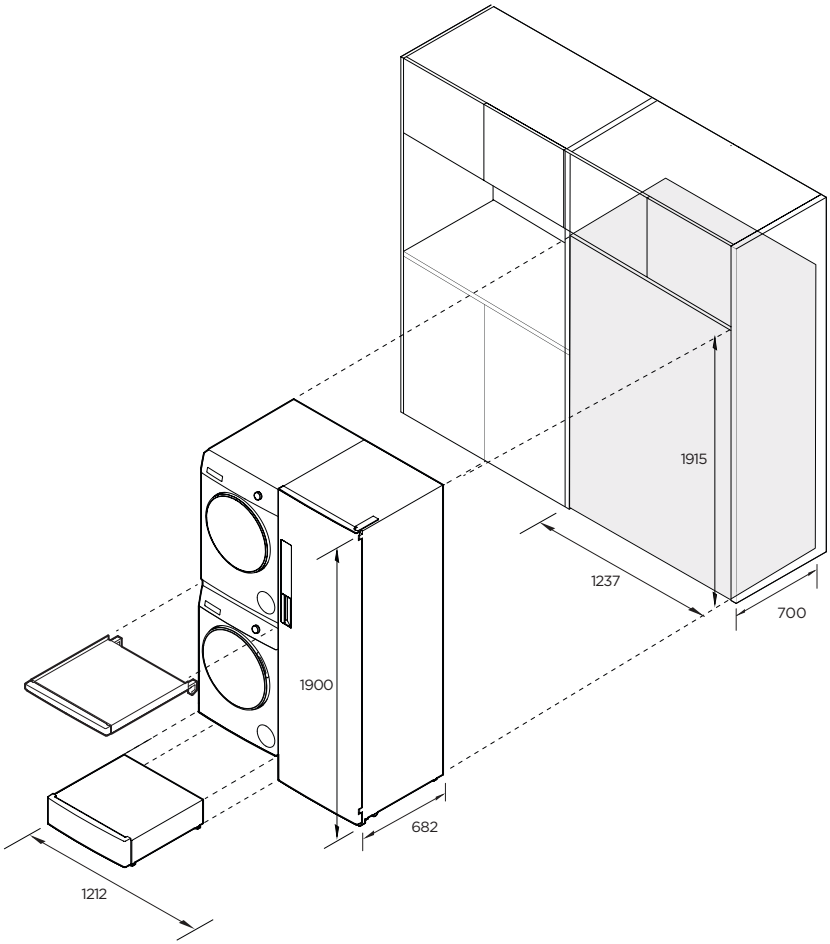

fisherpaykel.com/specify

1. Ensure cabinetry and servicing specifications have been met and clearances have been considered.

Refer to the Planning Guide for details.

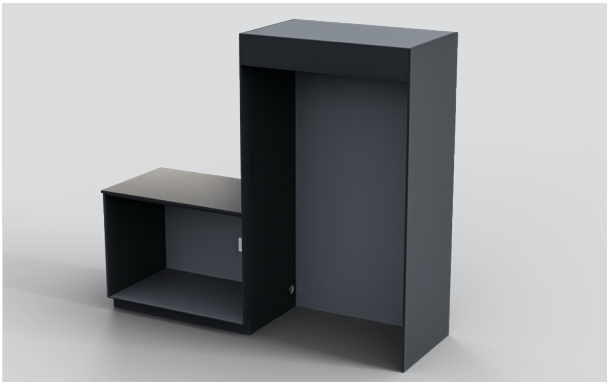

2. Ensure floor is level and clear and a finished return has been created.



3. Ensure power will remain accessible following install to allow access for any future product maintenance.

Service holes should be smooth with grommets installed where required.

Refer to the services section of the Planning Guide for more details.

UNPACK ALL PRODUCTS



Washer and Dryer:

Cut the straps at the line printed on the top of the carton. Lift to remove. Discard braces and corner posts.

Remove any packaging and accessories from the drum and base packer.

Dispose of packaging responsibly.




Fabric Care Cabinet:

Cut the straps at the line printed on the back of the carton. Cut to the nearest corner and remove sleeve. Discard braces, corner posts and sleeve.

Remove packaging and accessories from inside cabinet.

Dispose of packaging responsibly.

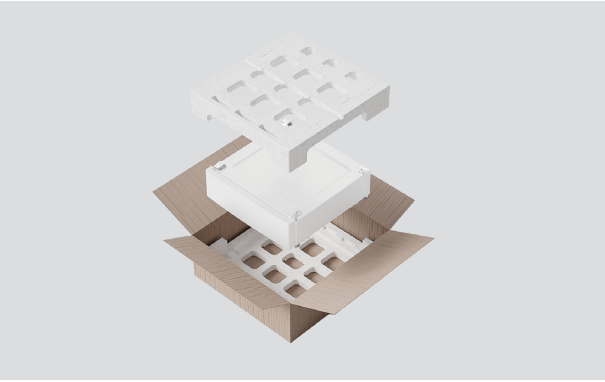

Plinth and Stacking kit:

Cut the straps and tape to open the carton from the top. Set cardboard aside for later use.


Ensure accessories are removed.

UNPACK ALL PRODUCTS




1. Protect flooring before positioning products as close to the installation location as possible, ensuring enough working room is left available.

LEVEL PLINTH

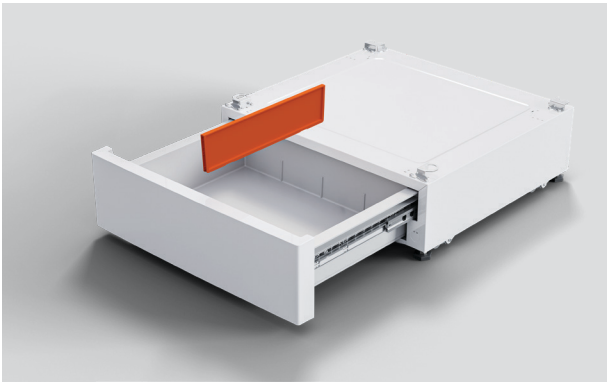

1. Push the front of the plinth to open. Remove the divider before closing the drawer.

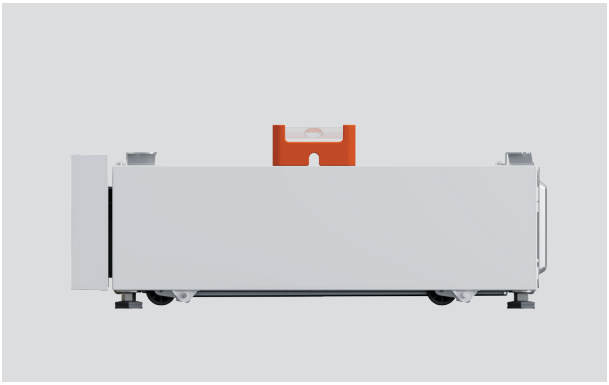


2. Place the plinth in its final install location. Adjust the feet using the supplied spanner until the plinth is level front to back and corner to corner.



3. Using the spanner provided, tighten the lock nuts against the base of the plinth to lock the feet in position on the ground.

LEVEL PLINTH

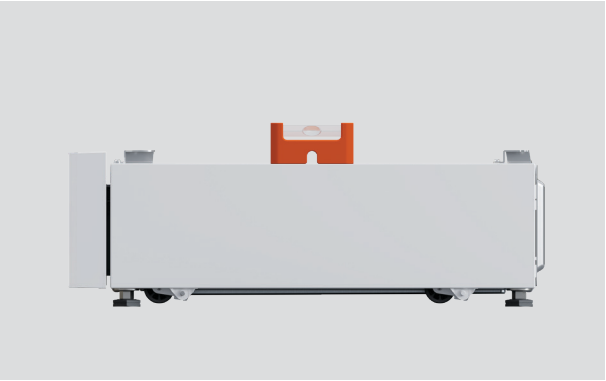


4. Recheck that the plinth is level, front to back and side to side. Once level, move the plinth to an accessible location to allow washer/dryer to be installed.

FIT WASHER TO PLINTH



IMPORTANT!

1. Before tilting washing machine over remove dispenser drawer.

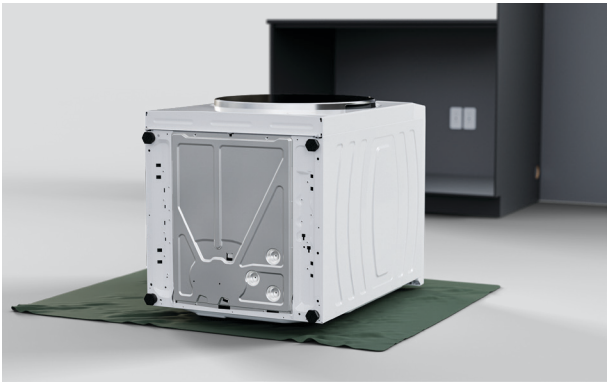

2. Tilt the washer back onto a protected surface such as the plinth carton.

Ensure cords and hoses are not crushed.



3. Remove door transit brackets (if present) by unscrewing the screws.

FIT WASHER TO PLINTH



4. Remove all four feet using the spanner provided.




5. Partially fit the four M10 bolts supplied with the storage plinth to the washer.



6. Using the spanner provided as a spacer, ensure a 4mm gap is left between the bolt head and the chassis.


FIT WASHER TO PLINTH

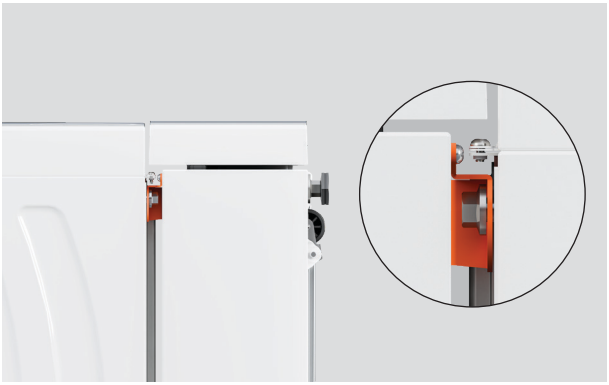

7. Align all four brackets on plinth to the M10 bolts on the washer and slot into place. Tighten the front bolts with the supplied spanner.



8. Lift the washer upright, take care as storage drawer may open.

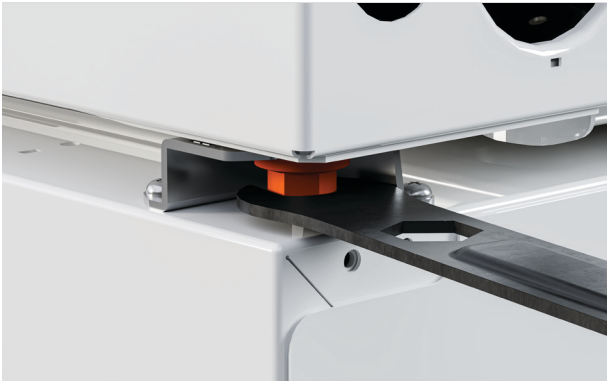

9. Tighten the rear bolts.



10. Roll washing machine into alcove and check alignment. To do this, use the supplied 6mm hex key, rotate clockwise to lower both sets of wheels via the adjustment screws.



11. Ensure all feet are raised off the floor before rolling the stacked products to the final install location.



12. Roll the products into the alcove.

Take care not to damage alcove when rolling product in.

FIT WASHER TO PLINTH



13. Using the supplied 6mm hex key, rotate counter-clockwise to raise both sets of wheels via the adjustment screws.



14. Check that products are still level.

Adjust plinth feet if necessary.



15. Rotate clockwise to lower both sets of wheels and roll products out of alcove to resume stacking kit installation.

INSTALL STACKING KIT TO WASHER



1. Remove screws from washer using a screw driver or drill on the lowest torque setting.



2. Fit Brackets onto the rear of the washer.



3. Screw the brackets into place using a screw driver or drill on the lowest torque setting.

⚠WARNING: Failure to tighten screws could create a tipping hazard.

INSTALL STACKING KIT TO WASHER



4. Place the stacking kit over the bracket and line up the glass fronts so the two surfaces are flush.




5. Ensure the stacking kit is centred on the washer. Peel off the VHB backing tabs and press down to secure the front of the stacking kit in place.




6. Fit two screws between the stacking kit and the brackets to secure the back of the stacking kit in place.

⚠WARNING: Failure to tighten screws could create a tipping hazard.

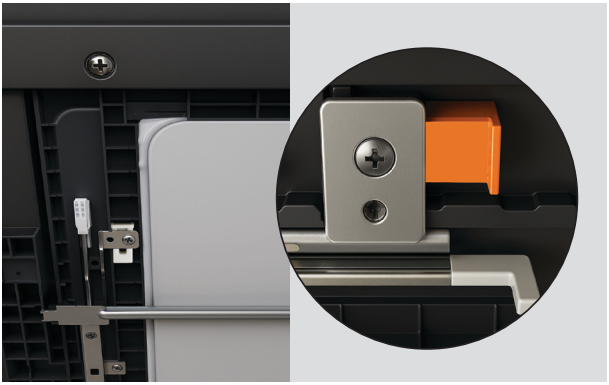

7. Loosen the front screw and slide the shim towards the rear of the machine until there is sufficient clearance below the stacking kit tray.


Each side can be adjusted independently to provide a consistent gap.

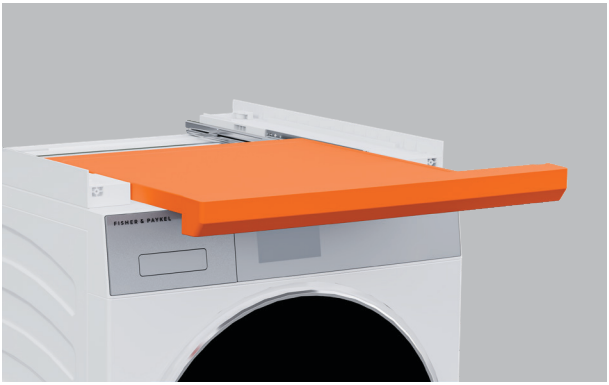

8. Push the front of stacking kit so stacking kit tray is partially open.



9. Remove door transit brackets (if present) by unscrewing the screws.

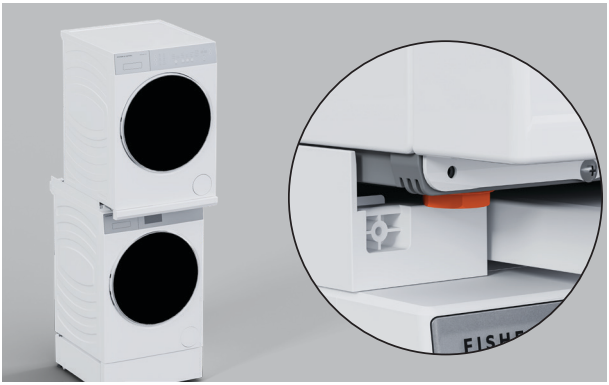

10. Lift the dryer over the stacking kit and slide the dryer back until it stops.

Ensure the front dryer feet do not catch on the front edge of the stacking kit and the dryer remains centred on the stacking kit.



11. Remove the front dryer screw and fit the front brackets.

If needed, install the supplied washers between the bracket and stacking kit to align the dryer door with the front of the stacking kit. Multiple washers may be required to achieve alignment.




12. Re-fit screw to the dryer, and use supplied screw to secure brackets to stacking kit. Push the front of the stacking kit to close the tray.

⚠WARNING: Failure to tighten screws could create a tipping hazard.




13. Close the stacking kit tray and inspect the gaps above and below the stacking kit. Adjust if necessary.


REMOVE WASHER TRANSIT BOLTS

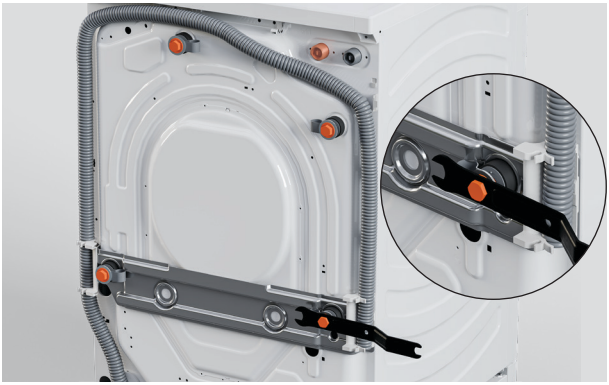

1. Using the supplied spanner, remove all four transit bolts from the back of the washer.

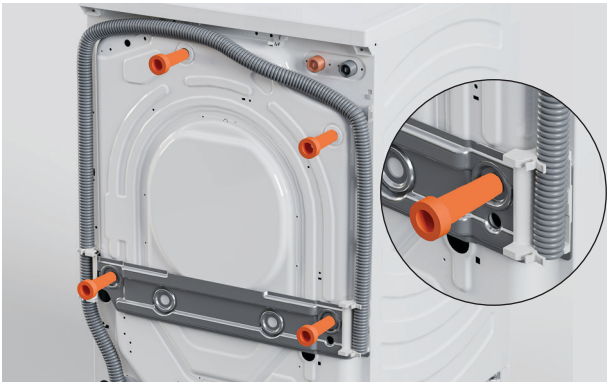

2. Pull the rubber grommets and spacers outwards to remove.

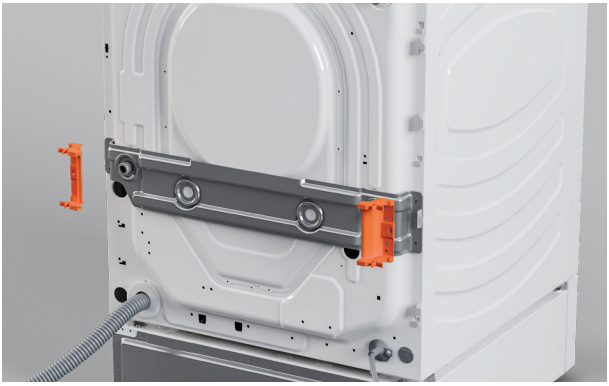


3. Using a Phillips screwdriver, remove the two side brackets.

*Brackets apply to select models only.



4. Remove and discard the braces.

*Brace applies to select models only.

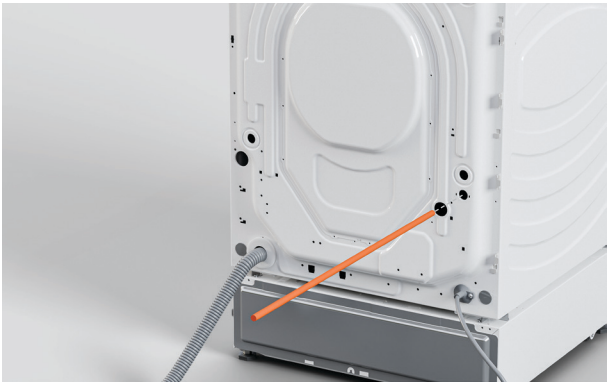

5. Pull the transit rods outwards to remove.

Set aside for future use.

*Transit rod applies to select models only.



6. Cover the transit bolt holes using the supplied plugs.

LEVEL PRODUCT SET



1. We recommend levelling and installing stacked products into alcove before fabric care cabinet.



2. Partially roll stacked products into alcove and check alignment. To do this, use the supplied 6mm hex key, rotate clockwise to lower both sets of wheels via the adjustment screws.



3. Ensure all feet are raised off the floor before rolling the plinth to the final install location.




4. Using the supplied 6mm hex key, rotate counter-clockwise to raise both sets of wheels via the adjustment screws.



5. Align stacked washer and dryer with cabinetry.

fisherpaykel.com/specify

1. Refer to the Planning Guide for service information.

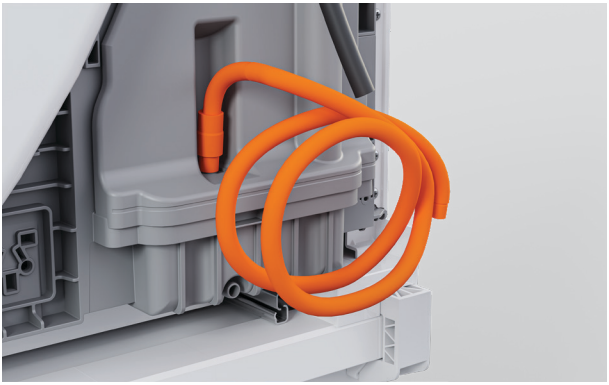

IMPORTANT!

2. Display-free Heat Pump Dryer models:

Display-free models must be plumbed in and the inter product communication cable correctly installed.



IMPORTANT!

3. Converting Heat Pump Dryer to be plumbed in:

Disconnect the black hose from the product and leave disconnected.

Connect one end of the grey hose to where black hose was connected and other end into external drainpipe or sink.



4. Remove caps from washer and dryer before fitting one of the communications cables.

Connect the washer and dryer via the communication cable.



5. Connect the angled end of the dryer cold hose to the dryer.



6. Connect the angled end of cold hose to the cold water inlet on the washer.



7. Using pliers remove the mesh filters from the end of the hoses, then connect both hoses to the top of the Y joint supplied with the dryer.



8. Connect the straight hose to the bottom of the Y joint. The other end of the straight hose will connect to the cold tap.



9. Connect the angled end of hot hose to the orange outlet on the washer. If hot hose is not required, install a blanking cap.




10. Partially roll products into the alcove.




11. Route the power cables and hoses through service holes.

Ensure power will remain accessible following install to allow access for any future product maintenance.

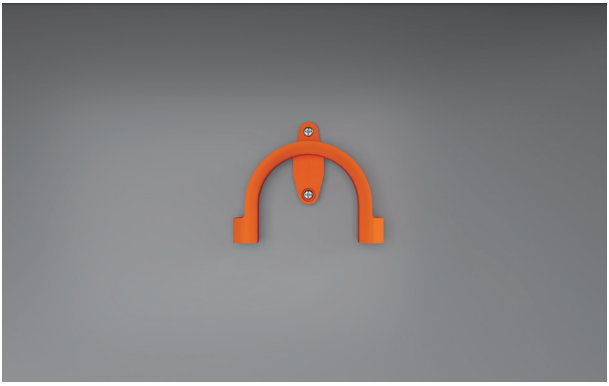

12. **IMPORTANT!** Install the drain hose guide to the back wall.

Refer to the planning guide for placement details.

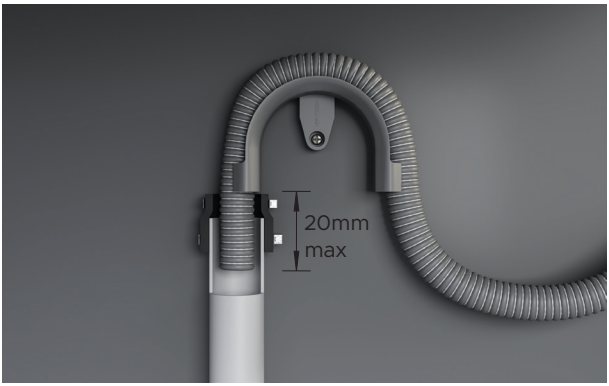

13. Standpipe Installations

Route the drain hose through the guide and place into the standpipe.


Ensure a maximum of 20mm of the hose is left exposed at the end of the standpipe.



14. Spigot Installations

Drill out blanking insert from the spigot.

Route the drain hose through the guide and place into the spigot. Secure using a hose clamp.

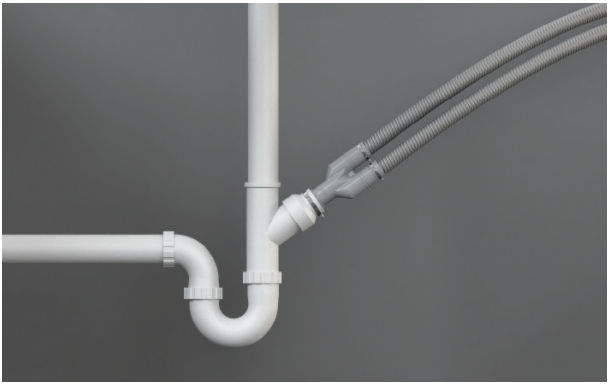


15. Spigot Installations

If a washer hose is already fitted to the spigot, fit a dual-outlet adaptor to the spigot.


Connect the washer and dryer drain hoses to the adaptor and secure both with hose clamps.

Check for leaks.

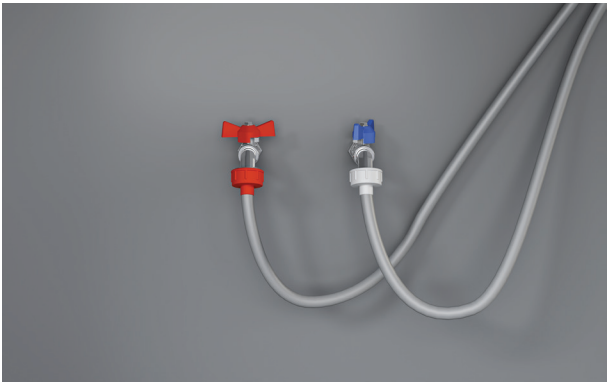

16. Connect hoses to taps before turning on. Check for leaks at all connection points.

If possible, recheck for leaks 24 hours after installation.

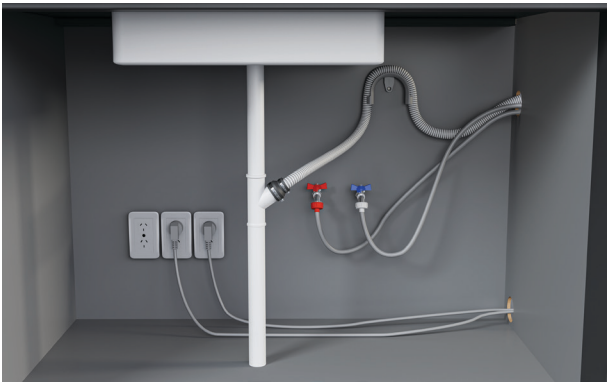

17. Connect the power cables and check products are powered on and are connected.



18. Roll products into the alcove.

Take care not to damage hoses or cords.



19. Open plinth to access wheels. Turn the adjustment screw counter-clockwise to retract the wheels. Ensure the wheels are fully raised off the floor.



20. Check alignment and ensure required clearances are maintained. Adjust as required.



21. Once adjustment is complete, fit the plinth bolt hole covers.




22. Before using washer run a first cycle to ensure there are no leaks, that the product is level and water is turned on.




1. Plug the product in and push cabinet into cavity taking care not to damage cords.

Align flush to the front of the cabinetry.

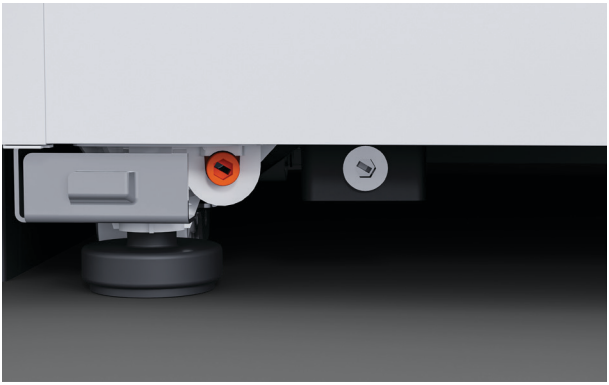

2. Adjust the front of the product turning the outer screw clockwise to lower the feet.

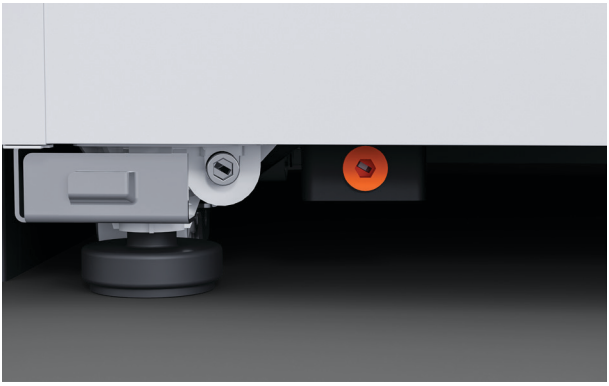


3. Adjust the rear of the product by turning the inner screw clockwise to lower the feet.



4. Check final alignment and ensure required clearances are maintained.

Adjust as required.

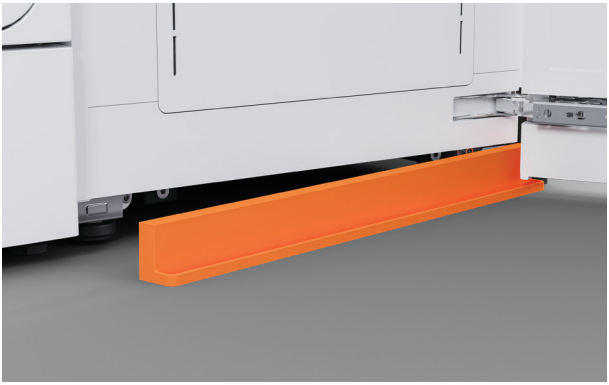

5. Clip drip tray into position.

INSTALLER CHECKLIST

TO BE COMPLETED BY THE INSTALLER.

- ☐ **IMPORTANT! Have the packaging and transit bolts and rods been removed?**
- ☐ Is the washer correctly levelled, feet are extended and cabinet corners are clear off the floor?
- ☐ Are the drain hoses threaded through the hose guide 'U bend' (with no more than 20mm extended) and hooked into your standpipe or tub, or attached to a spigot?
- ☐ Are the hot hoses connected to the hot value marked 'H'?
- ☐ Are the cold hoses connected to the cold valve marked 'C'?
- ☐ Have the taps been turned on?
- ☐ Has the power cord been connected to an appropriate power supply and the power turned on?
- ☐ Have you preformed a test cycle?
- ☐ Complete a **DRUM CLEAN** cycle with half-load amount of detergent and without a load to remove any residues remaining in the washer from the manufacturing process.

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets and are subject to change at any time.

The product specifications in this guide apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time.

For current details about model and specification availability in your country, please go to our website or contact your local Fisher & Paykel dealer.

433984A 11.26