INSTALLATION GUIDE

Companion trim kit installation

FISHER & PAYKEL

SAFETY & WARNINGS

⚠ WARNING!

Cut Hazard

Failure to use caution could result in injury.

· Take care: some edges may be sharp.

- This trim kit is designed to complement your companion product if installing into 30" (760mm) wide cabinetry. Ensure correct variation is used for styling (contemporary, minimal).

COMPONENTS REQUIRED

Supplied

Button screw 16mm (4)

Template (1)

Bracket (2)

Trims (2)

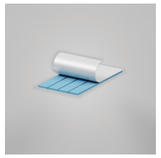

Adhesive putty

Not supplied

Powered driver (1)

Small pilot hole drill bit (1)

Phillips drill bit (1)

Hammer (1)

Centre punch (1)

For more information, visit www.fisherpaykel.com

INSTALLATION

1

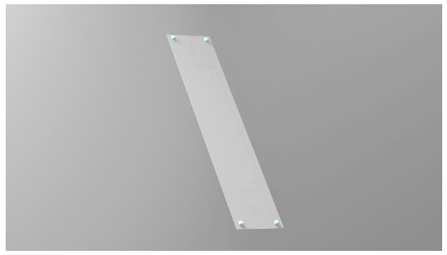

Apply adhesive putty to the back four corners of the template.

2

Position the horizontal ALIGNMENT EDGE to the top of the product and the vertical ALIGNMENT EDGE to the side of the product. Press to secure.

3

Ensure vertical ALIGNMENT EDGE runs evenly up the full height of the product

4

Ensure the template is completely flush against the cabinet and all four coners are secure.

5

Punch one upper and one lower hole using the locations marked on the template. Note that three sets of holes are provided and not all holes need to be drilled.

Drill pilot holes and remove template.

6

Ensure the top and bottom of the bracket sit flat against the cabinet. Align with the pilot holes.

7

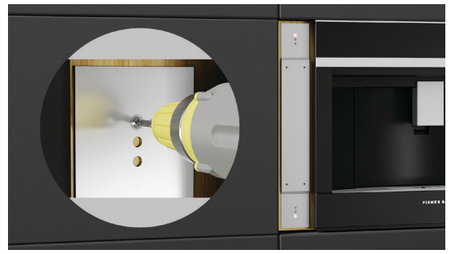

Fit the bracket into place using the supplied screws.

Repeat on opposite side.

8

Clip the trims into place.

9

Check the alignment of both trims.

If adjustments within ±1mm are required, remove the trim and adjust the bracket.

If further adjustments are required, remove the trim and bracket. Return to step 5 and repeat the process with a new set of holes.

!0

Removal

The trims can be removed at any time. To remove, carefully pull trims outwards.