WARMING DRAWER
INSTALLATION GUIDE

Components required	3
Accessing your product specifications	4
Unpack product	7
Position in cavity	8
Adjust drawer	9
Secure to cavity	10
Checklist	12

FISHER & PAYKEL

NZ AU UK IE SG EU

MINIMAL

WB60SMG3, WB60SMTG3, WB60SMB3, WB60SMTB3

CONTEMPORARY

WB60SCX3, WB60SCTX3

COMPONENTS REQUIRED

TOOLS

Not supplied

- [ ] T20 star-head screwdriver
- [ ] 5mm Hex key
- [ ] Level
- [ ] Shims

PARTS

Supplied

- [ ] Power cords (1)
- [ ] T20 wood screws (4)
- [ ] T20 machine screws (6)
- [ ] Wire shelf (1)
- [ ] Professional handle kit**
  - Professional handle (1)
  - 5mm hex key (1)
  - Socket screw (2)

ACCESSING YOUR PRODUCT SPECIFICATIONS

For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

STANDARD MODELS

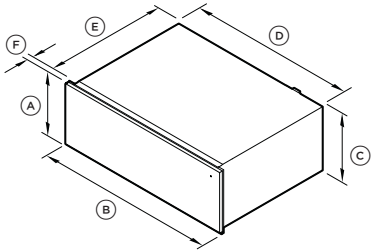

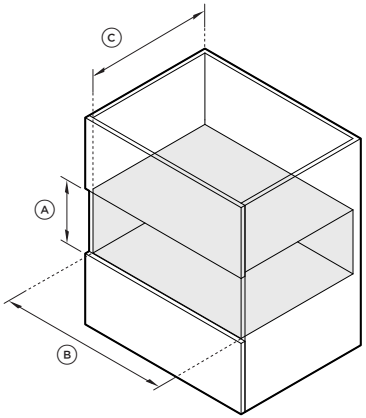

PRODUCT DIMENSIONS	mm
Ⓐ Overall height	140
Ⓑ Overall width	596
Ⓒ Chassis height	140
Ⓓ Chassis width	543
Ⓔ Chassis depth	547
Ⓕ Control panel thickness	20

CAVITY DIMENSIONS	mm
Ⓐ Minimum inside height of cavity	142
Ⓑ Minimum inside width of cavity	560
Ⓒ Minimum inside depth of cavity*	550
Recommended cabinet height	144
Recommended cabinet width	600

*Measured from front of chassis.

ACCESSING YOUR PRODUCT SPECIFICATIONS

For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

TALL MODELS

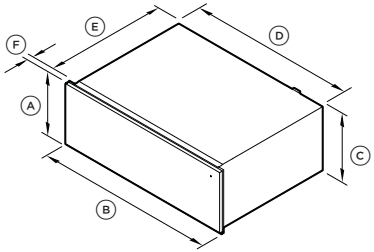

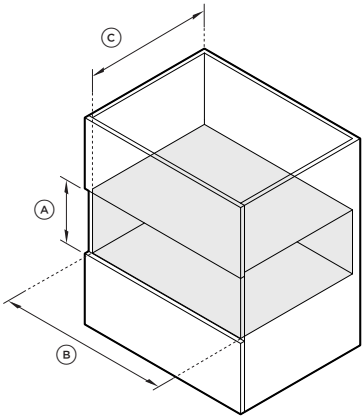

PRODUCT DIMENSIONS	mm
Ⓐ Overall height	290
Ⓑ Overall width	596
Ⓒ Chassis height	290
Ⓓ Chassis width	543
Ⓔ Chassis depth	547
Ⓕ Control panel thickness	20

CAVITY DIMENSIONS	mm
Ⓐ Minimum inside height of cavity	292
Ⓑ Minimum inside width of cavity	560
Ⓒ Minimum inside depth of cavity*	550
Recommended cabinet height	294
Recommended cabinet width	600

*Measured from front of chassis.

fisherpaykel.com/specify

1. Refer to the Planning Guide for cabinetry, cavity, panel and service specifications.

2. Ensure the cabinet meets the minimum cavity specifications required.

The cabinet must be level and square to prevent the need for product adjustments such as shimming.

1. Carefully remove the warming drawer and accessories box from the packaging.

2. Dispose of packaging responsibly.

1. Connect the power cable to the product and the power supply.

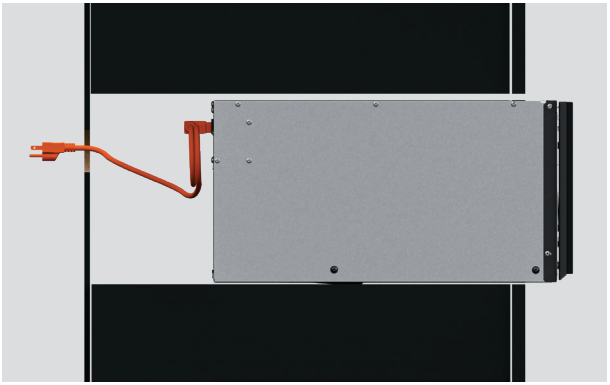

3. Apply protective tape to adjacent cabinetry panels before lifting product into place.

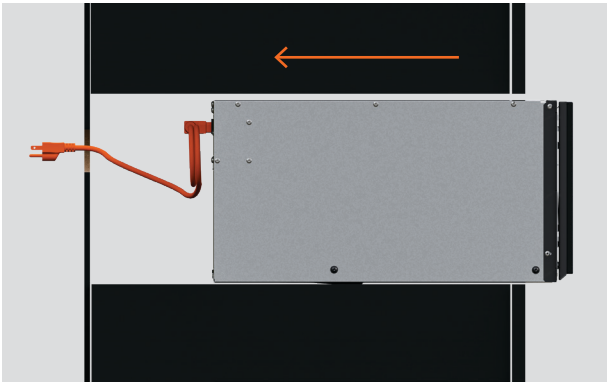

2. Carefully push the warming drawer into the cabinetry.

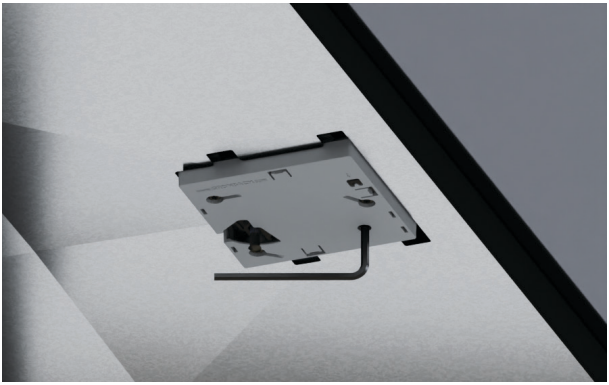

1. Adjust depth:

Open the drawer fully.

Use a hex key to adjust the front panel position by up to 4 mm.

Turn clockwise to move the panel back, or counter-clockwise to move it forward.

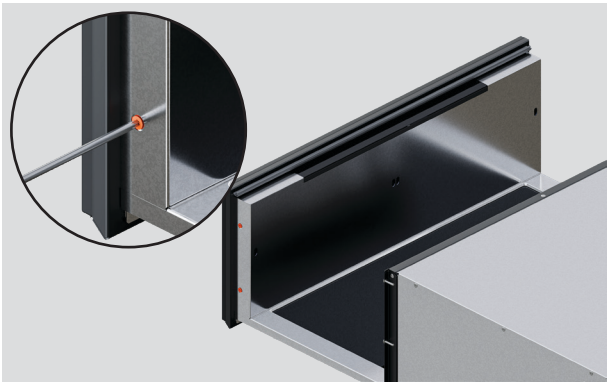

1. Adjust height:

Open the drawer fully and slightly loosen the T20 star head screws.

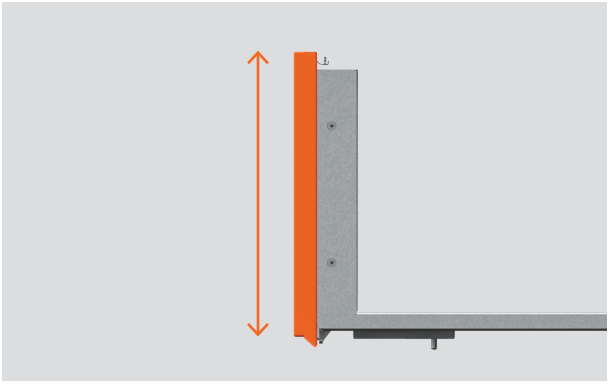

2. Adjust height:

Adjust the drawer height by up to 2 mm and re-tighten the screws to secure.

SECURE TO CAVITY

1. Open the drawer and secure to the cabinetry using the supplied T20 star head screws.

2. Close the drawer to check alignment and readjust if needed.

Installation checks

- ☐ All clearances are correct. Refer to the Planning Guide for more details.
- ☐ The product is level and securely fitted in the cabinetry.
- ☐ All internal packaging is removed.
- ☐ The isolating switch can be easily reached.

Test operation

- ☐ Open the drawer.
- ☐ Press the power button to turn it on.
- ☐ Close the drawer.
- ☐ After 5–10 minutes, open the drawer to check it is warming.
- ☐ Press the power button to turn it off before closing the drawer.

Complete and keep for safe reference:

Model _____

Serial no. _____

Purchase date _____

Purchaser _____

Dealer address _____

Installer's name _____

Installer's signature _____

Installation company _____

Installation date _____

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets and are subject to change at any time.

The product specifications in this guide apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time.

For current details about model and specification availability in your country, please go to our website or contact your local Fisher & Paykel dealer.

433823A 09.26