
FRENCH DOOR REFRIGERATOR FREEZER INSTALLATION GUIDE

Components supplied	3
Accessing your product specifications	4
Clearances	5
Prior to installation	6
Unpack product	7
Move appliance	8
Connect services	9
Position in cavity	11
Level doors (if required)	12
Flush water filter	13
Checklist	14

FISHER & PAYKEL

CN

FRENCH DOOR REFRIGERATOR FREEZER

RF600AMPVG1, RF600ADUX1, RF600ADUB1

COMPONENTS SUPPLIED

- | | |
|--|--|
| ☐ Water filter (pre-installed) | ☐ 4m water hose (1) |
| ☐ Door spacers (4) | ☐ Hose connectors (2) |
| ☐ Tap adaptor with short tube (1) | ☐ Collet locking clip (1) |



Pitcher model

- ☐ Autofill water pitchers (2)

ACCESSING YOUR PRODUCT SPECIFICATIONS



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

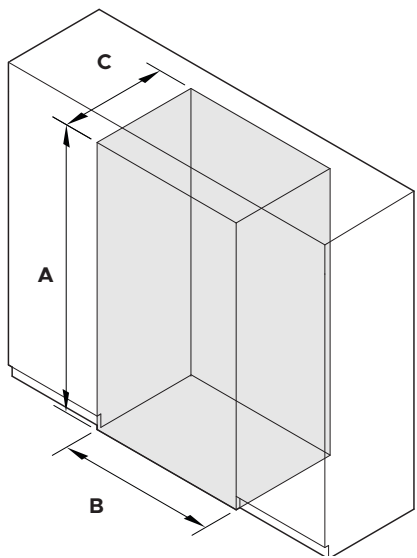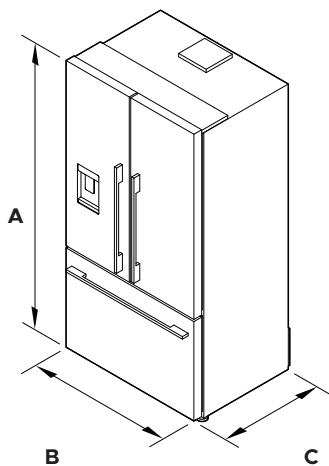

PRODUCT DIMENSIONS

mm

A	Overall height	1790
B	Overall width	905
C	Overall depth*	690

*excludes handle

CAVITY DIMENSIONS

FLUSH


PROUD

mm

mm

A	Minimum inside height of cavity	1800	1800
B	Minimum inside width of cavity	925	925
C	Minimum inside depth of cavity	700	638

CLEARANCES

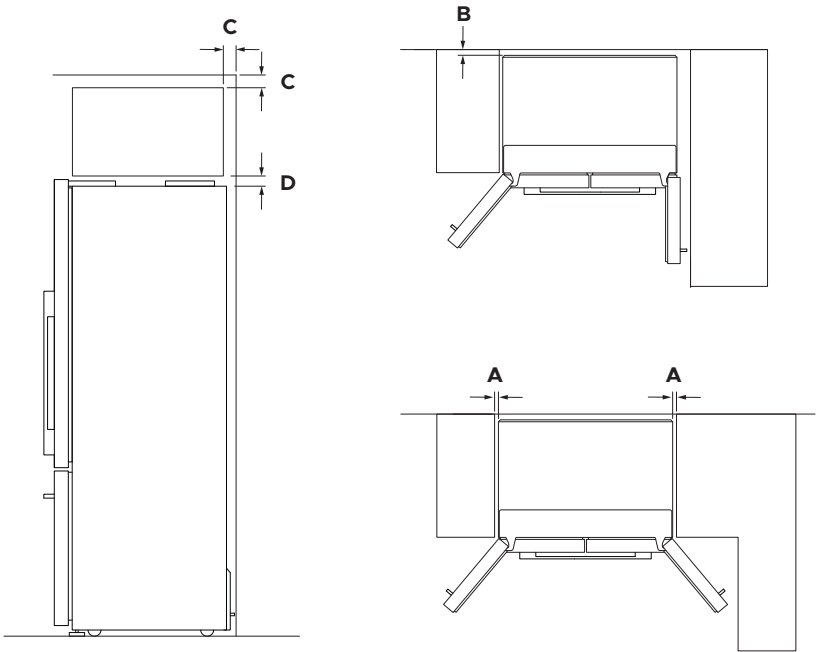

CLEARANCE DIMENSIONS	FLUSH FULL DOOR ROTATION	FLUSH 90° DOOR ROTATION	PROUD
	mm	mm	mm
A Side clearance	10	10	10
B Rear clearance (including rear compartment cover)	18	18	18
C Vent (above refrigerator cabinet or around top of cupboard)	50	50	50
D Top clearance (above refrigerator cabinet)	50	50	50

PRIOR TO INSTALLATION




fisherpaykel.com/specify

1. Measure cavity dimensions.
Ensure minimum specifications have been met and clearances have been considered.



2. Ensure floor is level and clear and a finished return has been created if required.

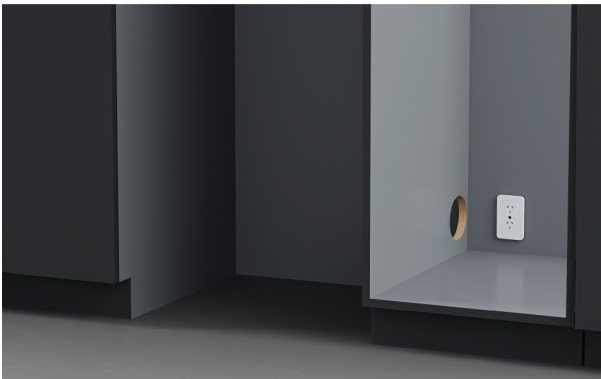

3. Ensure services are accessible and correctly installed.
If connections are located behind the appliance, an isolating switch is recommended.

UNPACK PRODUCT




1. Cut the straps and the line printed on the top of the carton. Lift cardboard to remove.



2. Remove the installation kit from inside the appliance. Remove autofill water pitchers from freezer drawer. (Some models only.)


MOVE APPLIANCE

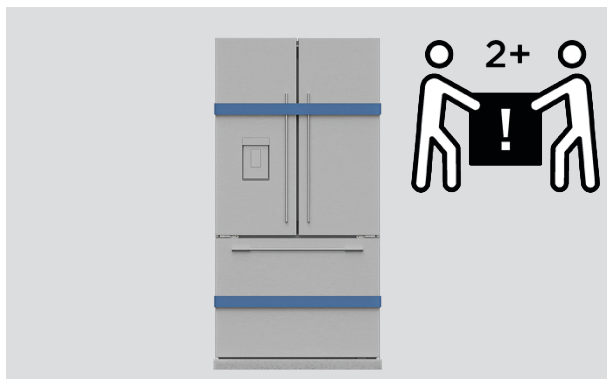

Two people required at all times


1. Take care when moving the appliance. Tape the door shut to prevent it opening.

The appliance has rollers and can be moved backwards and forwards. Avoid moving it sideways as this may damage the rollers or the floor.

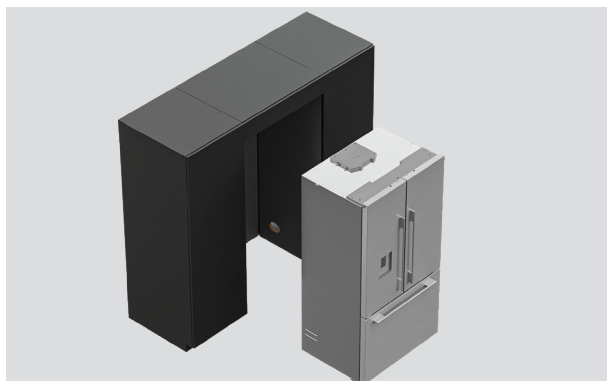

2. Position the appliance next to the cavity within reach of services.


CONNECT SERVICES

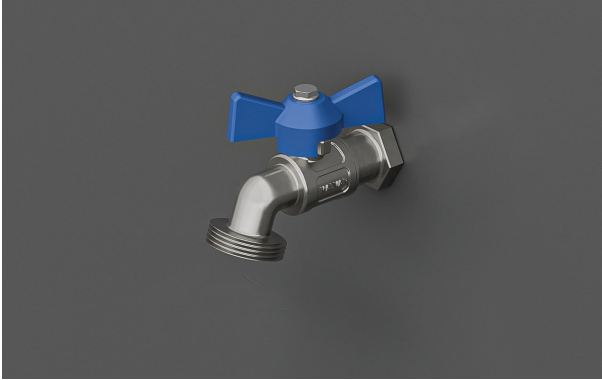

1. Ensure appliance is not connected to power supply.
Locate isolation tap for cold water connection and water filter kit.



2. Fasten the tap adaptor with short tube to the isolation tap.
Tighten by hand, then tighten one additional turn with spanner.
Take care not to over tighten.

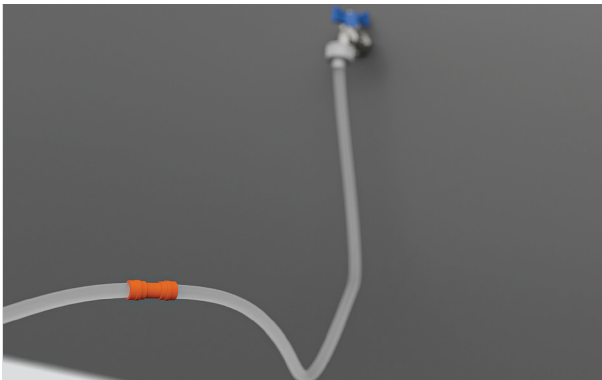

3. Insert short tube as far as possible into first hose connector. Insert 4m hose into other end of connector.

CONNECT SERVICES




4. Attach second hose connector to the hose at the back of the product. Insert 4m hose as far as possible into second connector. Turn on water supply and check for leaks.



5. Connect product to power outlet and turn power on.
To reduce slack, wrap a thread around power cord.


- SERVICE (A) 10
- SUPPLY (Hz) 50
- VOLTAGE (V) 230

POSITION IN CAVITY

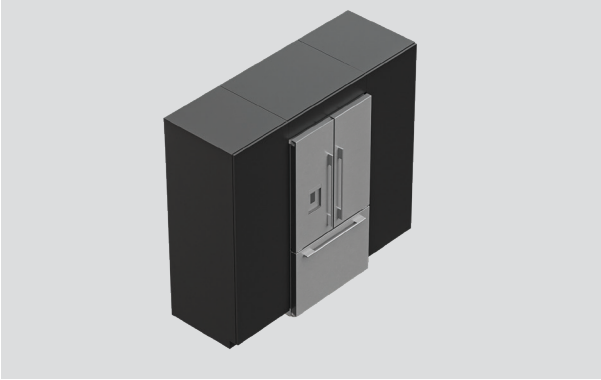

1. Roll appliance into final position.


Ensure there is the correct air gap between product and cabinetry and no cords or tubing are caught or pinched.

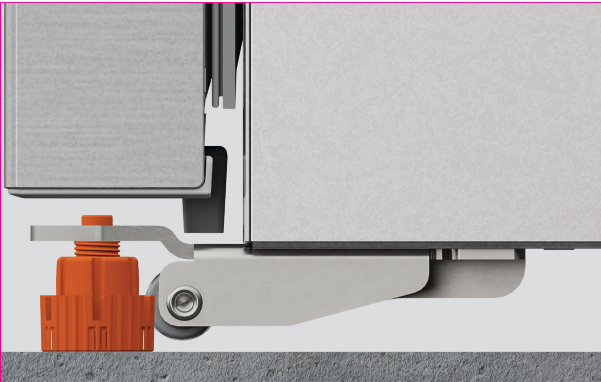

2. Turn the front feet clockwise until they make firm contact with the floor. This takes the load off the rollers and stabilises the product.

Adjust feet as required to ensure good alignment and door closing action.

LEVEL DOORS (IF REQUIRED)

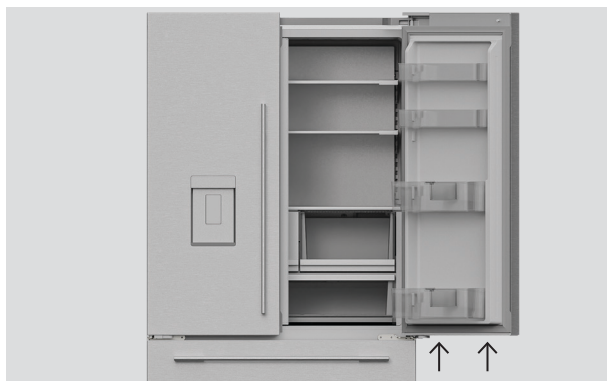

Levelling the doors (if required)

1. Open the unaligned door and lift it up.



2. Clip a spacer onto the pin hinge, then close the door and recheck alignment.

FLUSH WATER FILTER



1. Run 8 litres of water through the water dispenser.

There may be a delay before water dispenses and a time-out when dispensing a high volume of water.



2. Turn the ice maker on via the menu. The first full bins of ice should be discarded.

CHECKLIST

Installation checks

- ☐ All clearances are correct.
- ☐ Front feet are bearing the product load, and the product does not roll forward.
- ☐ All external and internal packaging is removed.
- ☐ The isolating switch can be easily reached.
- ☐ The doors/drawer can open and close freely with no resistance from surrounding cabinetry.
- ☐ Appliance is plugged in and is cooling.

Test operation

- ☐ Flush the water filtration system.
- ☐ Start the ice maker.

Complete and keep for safe reference:

Model	_____
Serial no.	_____
Purchase date	_____
Purchaser	_____
Dealer address	_____
Installer's name	_____
Installer's signature	_____
Installation company	_____
Installation date	_____

