
WARMING DRAWER INSTALLATION GUIDE

Components required	3
Accessing your product specifications	4
Unpack product	7
Position in cavity	8
Adjust drawer	9
Secure to cavity	10
Checklist	12

MINIMAL

WB60SMG3, WB60SMB3

CONTEMPORARY

WB60SCX3

COMPONENTS REQUIRED

TOOLS

Not supplied

- ☐ T20 star-head screwdriver
- ☐ 5mm Hex key
- ☐ Level
- ☐ Shims

PARTS



Supplied

- ☐ Power cords (1)
- ☐ T20 wood screws (4)
- ☐ T20 machine screws (6)
- ☐ Wire shelf (1)
- ☐ Professional handle kit**
 - Professional handle (1)
 - 5mm hex key (1)
 - Socket screw (2)



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

STANDARD MODELS

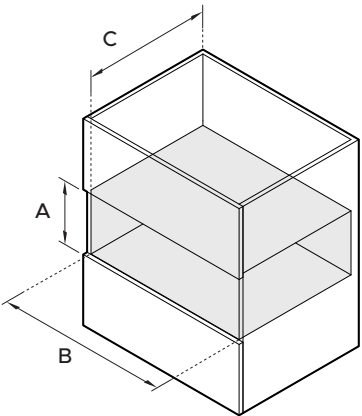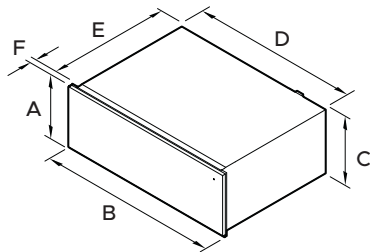

PRODUCT DIMENSIONS		mm
A	Overall height	140
B	Overall width	596
C	Chassis height	140
D	Chassis width	543
E	Chassis depth	547
F	Control panel thickness	20


CAVITY DIMENSIONS		mm
A	Minimum inside height of cavity	142
B	Minimum inside width of cavity	560
C	Minimum inside depth of cavity*	550
	Recommended cabinet height	144
	Recommended cabinet width	600

*Measured from front of chassis.




For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit fisherpaykel.com/specify. Search by appliance type, product name or model code.

TALL MODELS

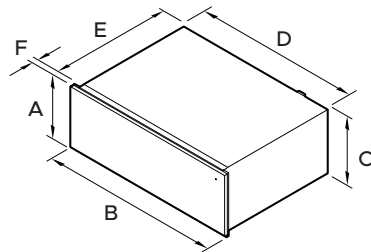

PRODUCT DIMENSIONS		mm
A	Overall height	290
B	Overall width	596
C	Chassis height	290
D	Chassis width	543
E	Chassis depth	547
F	Control panel thickness	20

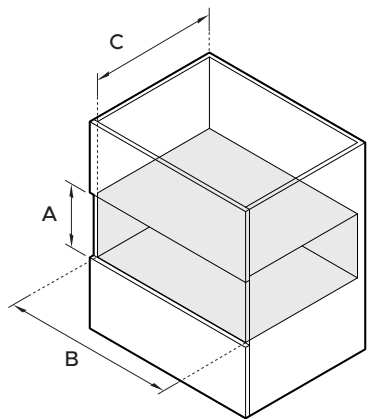

CAVITY DIMENSIONS		mm
A	Minimum inside height of cavity	292
B	Minimum inside width of cavity	560
C	Minimum inside depth of cavity*	550
	Recommended cabinet height	294
	Recommended cabinet width	600

*Measured from front of chassis.

PRIOR TO INSTALLATION



fisherpaykel.com/specify

1. Refer to the Planning Guide for cabinetry, cavity, panel and service specifications.



2. Ensure the cabinet meets the minimum cavity specifications required.

The cabinet must be level and square to prevent the need for product adjustments such as shimming.

UNPACK PRODUCT



1. Carefully remove the warming drawer and accessories box from the packaging.




2. Dispose of packaging responsibly.


POSITION IN CAVITY



1. Connect the power cable to the product and the power supply.

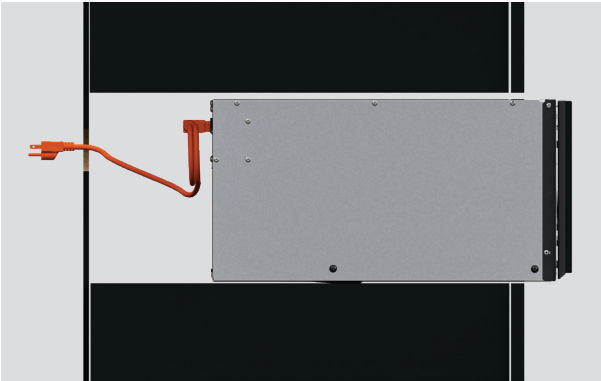


2. Apply protective tape to adjacent cabinetry panels before lifting product into place.

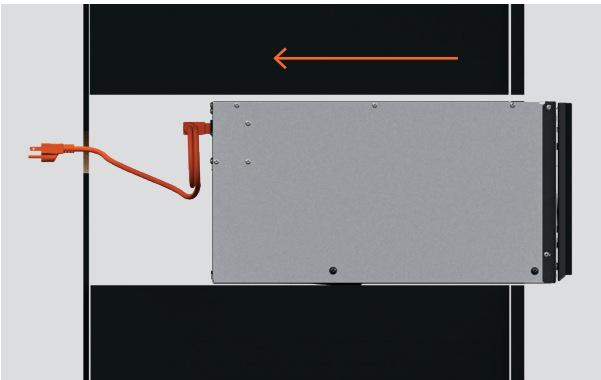

3. Carefully push the warming drawer into the cabinetry.

ADJUST DRAWER

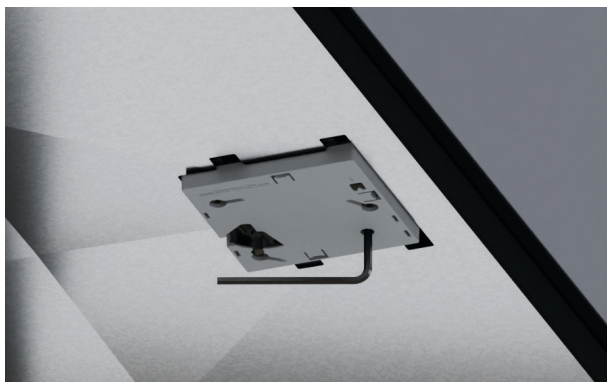


1. Adjust depth:

Open the drawer fully.


Use a hex key to adjust the front panel position by up to 4 mm.

Turn clockwise to move the panel back, or counter-clockwise to move it forward.

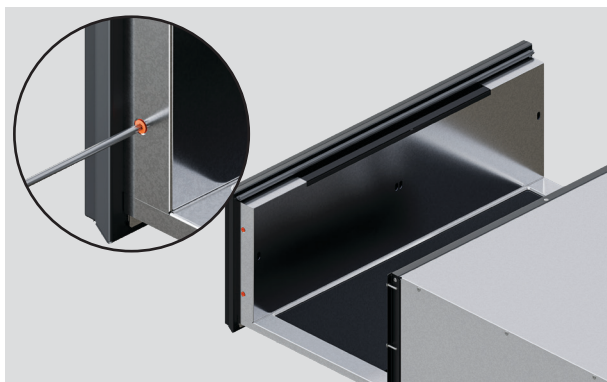

1. Adjust height:

Open the drawer fully and slightly loosen the T20 star head screws.

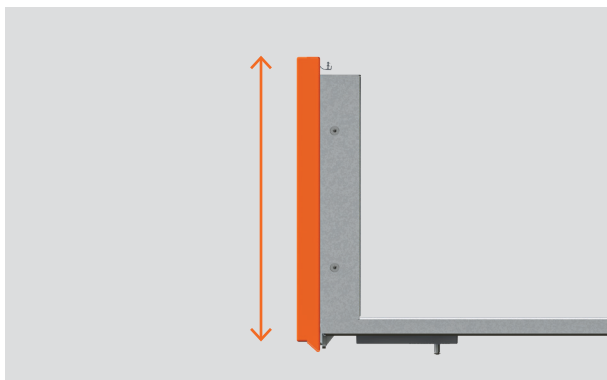


2. Adjust height:

Adjust the drawer height by up to 2 mm and re-tighten the screws to secure.

SECURE TO CAVITY



1. Open the drawer and secure to the cabinetry using the supplied T20 star head screws.

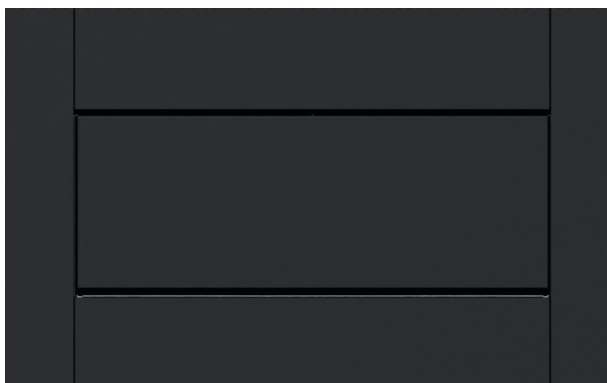

2. Close the drawer to check alignment and readjust if needed.

CHECKLIST

Installation checks

- ☐ All clearances are correct. Refer to the Planning Guide for more details.
- ☐ The product is level and securely fitted in the cabinetry.
- ☐ All internal packaging is removed.
- ☐ The isolating switch can be easily reached.

Test operation

- ☐ Open the drawer.
- ☐ Press the power button to turn it on.
- ☐ Close the drawer.
- ☐ After 5–10 minutes, open the drawer to check it is warming.
- ☐ Press the power button to turn it off before closing the drawer.

Complete and keep for safe reference:

Model _____

Serial no. _____

Purchase date _____

Purchaser _____

Dealer address _____

Installer's name _____

Installer's signature _____

Installation company _____

Installation date _____

